

western peripherals™
Division of **WESPERCOP^R**

14321 New Myford Road • Tustin, California 92680 • (714) 730-6250 • TWX: 910 595-1775 • Cable: WESPER

(2)

DEC - COMPATIBLE
TAPE CONTROLLER
DIAGNOSTIC MANUAL

PUBLICATION NUMBER

91000448 A

FOR TAPE CONTROLLER MODELS:

TC-130/138, TC-150/158, TC-160, TC-180, TC-190/198
TC-131, TC-151

western peripherals
14321 MYFORD ROAD
TUSTIN, CALIFORNIA 92680

© 1980 by Western Peripherals, Inc.
All Rights Reserved

PRINTED IN U.S.A.

AUGUST, 1980

PROGRAM TAPES

TAPE CONTROLLER MODEL					PROGRAM	PART NUMBER
130& 131	150& 151	160	180	190		
1	3	3	1	1	Diagnostic Program Paper Tape (PDP-11)	01300110
1	3	3	1	1	Reliability Program Paper Tape (PDP-11)	01300128
2	3	3	2	2	Master Magnetic Program Tape (PDP-11)	68000009
2	2	2	2	2	WPDP Magnetic Program Tape (PDP-11/LSI-11)	68000017
3	1	1	3	-	Diagnostic Program Paper Tape (LSI-11)	67000000
3	1	1	3	-	Reliability Program Paper Tape (LSI-11)	67000018
3	3	3	3	-	Sample Driver Program Paper Tape	01300466

KEY: 1 Standard Program
 2 Optional Program
 3 Special Purpose

TABLE OF CONTENTS

SECTION I	DIAGNOSTIC PROGRAM
SECTION II	RELIABILITY PROGRAM
APPENDIX A	SAMPLE DRIVER PROGRAM
NOTES	LOADERS, PATCHES, TEST LOOPS

PROGRAM CHANGE NOTICE:


Any program changes will be found at the rear of the Manual. Please refer to these changes before operating any program.

SECTION I
DIAGNOSTIC PROGRAM

DIAGNOSTIC PROGRAM

TABLE OF CONTENTS

<u>GENERAL INFORMATION</u>	<u>PAGE</u>
STARTING PROCEDURES	1
SWITCH SETTINGS	1
TEST SUBROUTINE DESCRIPTIONS	1-1
ERROR PRINTOUT EXPLANATION	1-2
COMMAND & STATUS REGISTER BIT ASSIGNMENTS	1-3
<u>DIAGNOSTIC PROGRAM</u>	
VECTORS, TRAPS & OTHER INITIAL PARAMETERS	1-4
START (LOCATION 200)	1-5
VECTOR & REGISTER ADDRESSES	1-5
COLUMN HEADINGS	1-6
START-UP SEQUENCE	1-6
REGISTER TESTS	1-7
REWIND TEST	1-14
SPACE OVER EDF TEST	1-15
WRITE & READ TESTS	1-16
MISC. FUNCTION TESTS	1-16
DATA TRANSFER TESTS	1-19
MANUAL INTERVENTION TESTS	1-30
SUBROUTINES	1-33
ILLEGAL TAPE INTERRUPT	1-33
SUBROUTINE LOOK-UP TABLE	1-34
HALT (PRINT ERROR)	1-34
SCOPE LOOP	1-35
CHECK CONTROLLER READY	1-35
CHECK TAPE READY	1-36
CHECK REGISTER BITS	1-36
PRINT MESSAGE	1-36
COMMON INSTRUCTIONS	1-37
CRC-EXCLUSIVE OR	1-37
CRC-ROTATE	1-37
PRINT OCTAL VALUE	1-38
PRINTOUT	1-38
MESSAGES	1-38
LOCATIONS OF SYMBOLS	1-45
CROSS REFERENCE TABLE (BY LINE NUMBER)	1-46

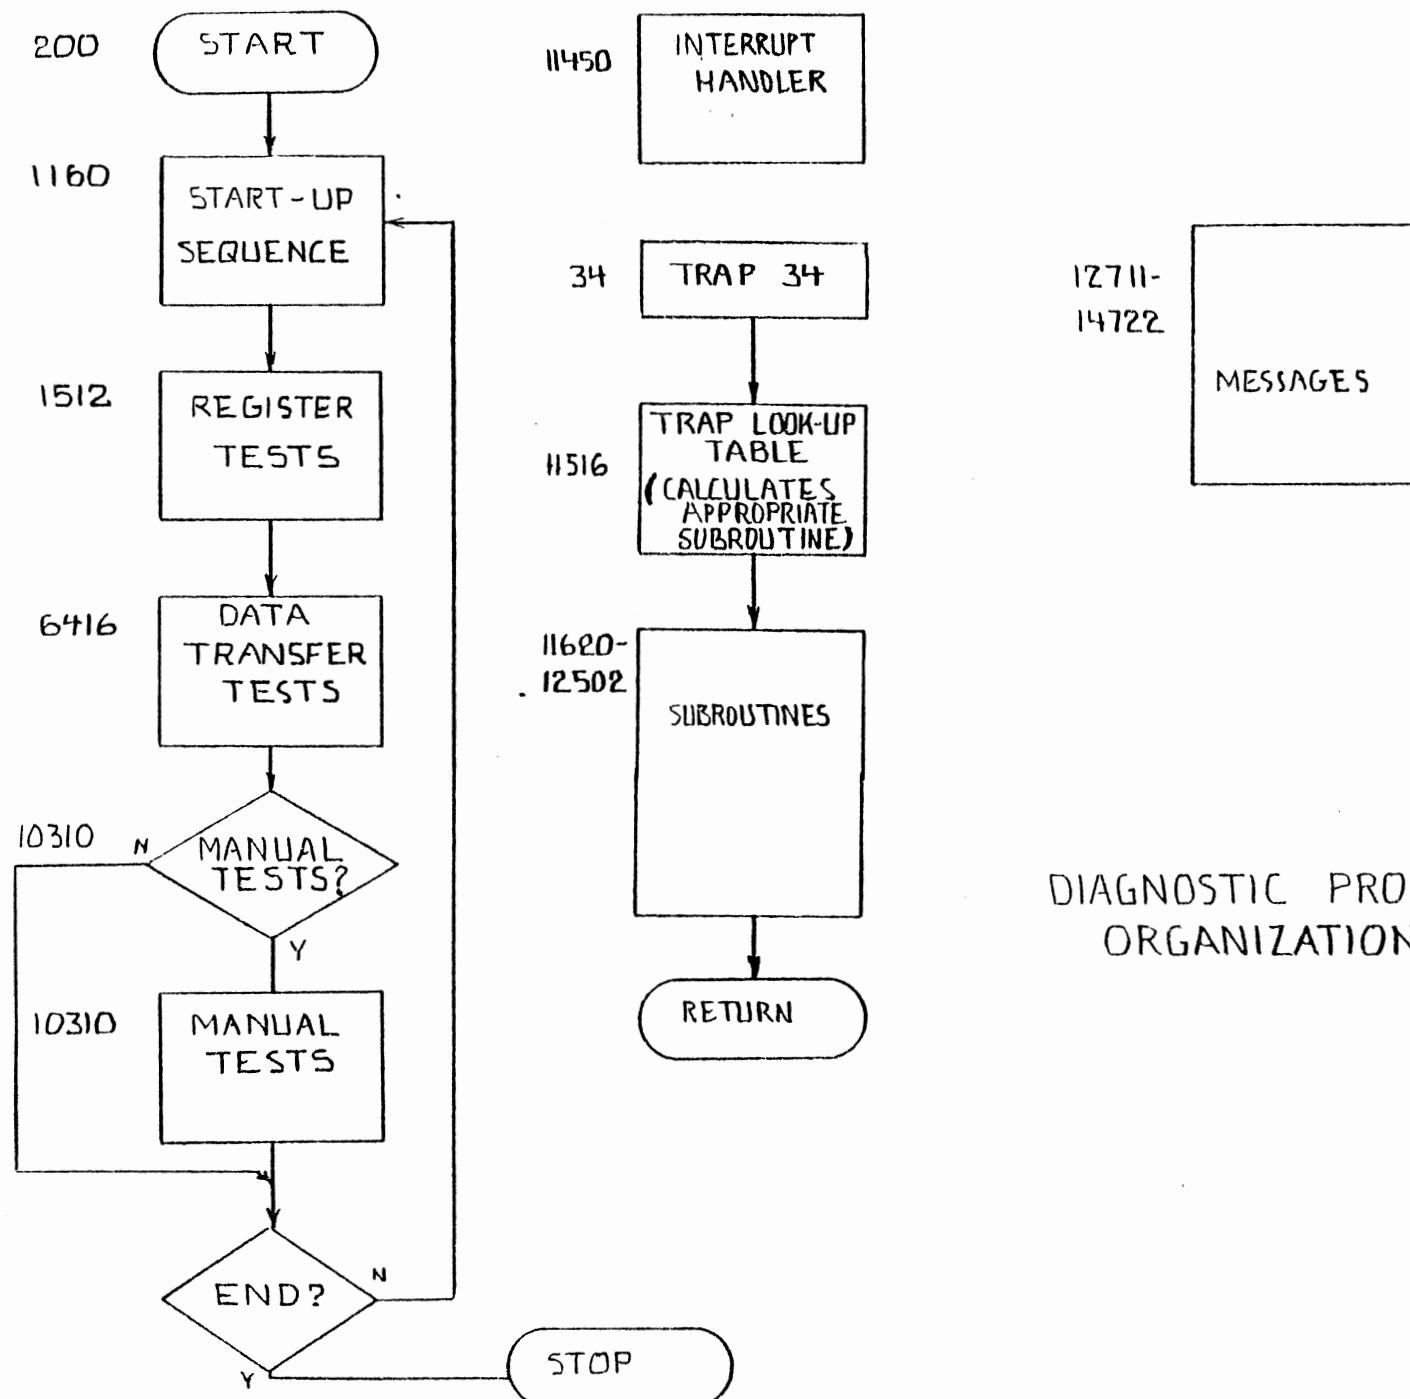

DIAGNOSTIC PROGRAM
ORGANIZATION

MAIN. MACH V06-03 05-NOV-74 12:39 PAGE 1

1 * *****
2 * WP /PDP11 MAG TAPE FUNCTIONAL DIAGNOSTIC *
3 *PROGRAM LISTING# 466.2 *
4 *AUTHOR: ALEX SILOTI *
5 * *****
6
7 11. ABSTRACT
8 THE MAG TAPE INSTRUCTION TEST CONTAINS A SERIES OF BASIC TESTS TO
9 CHECK CONTROLLER REGISTERS FOR PROPER OPERATION WHILE NOT INVOLVED
10 IN TAPE MOTION. ALL TAPE MOTION FUNCTIONS, DATA TRANSFERS, EXTENDED
11 MEMORY, AND MANUAL INTERVENTION TESTS OF THE TAPE TRANSPORT SWITCH
12 REQUIREMENTS
13 12.1 EQUIPMENT
14 PDP11 WITH MAG TAPE CONTROLLER AND 1 TAPE UNIT
15 12.2 STORAGE
16 THE ROUTINE REQUIRES 4K OF MEMORY.
17 13. LOADING PROCEDURE
18 PROCEDURE FOR NORMAL BINARY TAPES SHOULD BE FOLLOWED.
19 1. ABSOLUTE LOADER MUST BE IN MEMORY.
20 2. PLACE BINARY TAPE IN READER.
21 3. LOAD ADDRESS #7500 (* DETERMINED BY LOCATION OF LOADER)
22 4. PRESS "START" (PROGRAM WILL LOAD).
23 14. STARTING PROCEDURE
24 14.1 STARTING ADDRESS
25 200
26 14.2 PROGRAM AND/OR OPERATOR ACTION
27 1. LOAD PROGRAM INTO MEMORY.
28 2. PLACE ONE TAPE UNIT, ON-LINE, AT LOAD POINT (BOT)
29 3. SET SWITCH REGISTER TO STARTING ADDRESS.
30 4. LOAD ADDRESS.
31 5. PRESS START.
32 6. PROGRAM WILL TYPE "SET SW REG ACCORDING TO OPERATING INSTRUCTION
33 AND PRESS CONTINUE"
34 7. SET SWITCH REGISTER TO APPROPRIATE SETTINGS IN ACCORDANCE WITH 5.
35 AND PRESS CONTINUE
36 8. THE PROGRAM WILL BEGIN TESTING.
37
38 15. OPERATING PROCEDURE
39 15.1 OPERATIONAL SWITCH SETTINGS
40 15.1.1 WITH SWITCHES 13 THROUGH 15 DOWN THE PROGRAM WILL PRINT OUT ONCE
41 AND CONTINUE IN TEST. (BELL WILL RING AT COMPLETION OF A PASS).
42 15.1.2 SWITCH SETTINGS ARE:
43 SW15 = 1 OR JP ... HALT ON ERROR
44 SW14 = 1 OR JP ... SCOPE LOOP
45 SW13 = 1 OR JP ... INHIBIT PRINTOUT.
46 SW12 = 1 OR JP ... INHIBIT SURTEST ITERATION
47 SW11 = 1 OR JP ... INHIBIT MANUAL INTERVENTION TEST
48 SW10 = 1 OR JP ... UNIT SELECT BIT 2 TRUE
49 SW9 = 1 OR JP ... UNIT SELECT BIT 1 TRUE
50 SW8 = 1 OR JP ... UNIT SELECT BIT 0 TRUE
51 SW7 = 1 OR JP ... MAG TAPE BUS LEVEL BIT 2 TRUE }
52 SW6 = 1 OR JP ... MAG TAPE BUS LEVEL BIT 1 TRUE }
53 SW5 = 1 OR JP ... MAG TAPE BUS LEVEL BIT 0 TRUE }
54 SW4 = 1 OR JP ... ALTERNATE MAG TAPE ADDRESSES & INT VECTORS
55 SW3 = 1 OR JP ... TEST IBM PACKING / UNPACKING
56 SW2 = 1 OR JP ... TEST PHASE ENCODED TAPE UNIT
57 SW0 = 1 OR JP ... TEST 7 CHANNEL TAPE UNIT.

NORMALLY, BUS LEVEL 5.
USE BUS LEVEL 4 FOR MOST LSI-II'S
NOTE: CARTRIDGE TAPE DRIVES;
SWITCH 2. ON

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-1

58 15.1.3 MANUAL INTERVENTION TEST
59 | THIS TEST WILL REQUIRE THE OPERATOR TO PERFORM CERTAIN OPERATION
60 | WITH THE TAPE TRANSPORT AS DIRECTED BY MESSAGES PRINTED ON THE
61 | TELETYPE.
62 15.2 SUBROUTINE ABSTRACTS
63 |SCOPE (TEST LOOP ON TEST)
64 | THIS SUBROUTINE CALL IS PLACED BETWEEN EACH SUB-TEST IN THE INST
65 | SECTION. IT RECORDS THE STARTING ADDRESS OF EACH SUB-TEST AS IT
66 | BEING ENTERED. IF A SCOPE LOOP IS REQUESTED, IT WILL JUMP TO THE
67 | START OF THE SUB-TEST THAT THE SCOPE LOOP IS REQUESTING.
68 IHLT (ERROR HALT)
69 | THIS SUBROUTINE CALL PRINTS THE ADDRESS THAT TAGS THE FAILING
70 | SUBTEST AND THE CONTENTS OF ALL THE CONTROLLER REGISTERS
71 | IN FORMAT DESCRIBED IN 6.1
72 |TSCLR (TEST FOR CONTROLLER READY)
73 | THIS SUBROUTINE CALL WAITS A FINITE TIME FOR THE CONTROLLER
74 | TO GO READY. IF CONTROLLER READY OCCURS BEFORE TIMEOUT, EXIT IS
75 | TO RETURN ADDRESS+2. IF TIMEOUT OCCURES BEFORE CONTROLLER READY,
76 | EXIT IS TO RETURN ADDRESS.
77 |WAITR (WAIT FOR TAPE UNIT READY)
78 | THIS SUBROUTINE CALL WAITS A FINITE TIME FOR THE TAPE UNIT
79 | TO GO READY. IF TAPE UNIT READY OCCURES BEFORE TIMEOUT, EXIT IS
80 | TO RETURN ADDRESS+2. IF TIMEOUT OCCURES BEFORE TAPE UNIT READY,
81 | EXIT IS TO RETURN ADDRESS.
82 |TSTNGR (TEST FOR REGISTER BIT(S) RESET)
83 | THIS SUBROUTINE CALL WAITS A FINITE TIME FOR THE DESIGNATED BIT(S)
84 | OF THE SPECIFIED REGISTER TO GO RESET. IF RESET OF BIT(S) OCCUR
85 | BEFORE TIMEOUT, EXIT IS TO RETURN ADDRESS+2. IF TIMEOUT OCCURS
86 | BEFORE THE DESIGNATED BIT(S) RESET, EXIT IS TO RETURN ADDRESS.
87 | ARGUMENTS:
88 | R2 CONTAINS ADDRESS OF REGISTER TO BE TESTED
89 | R3 CONTAINS MASK FOR BIT(S) TO BE TESTED
90 | R4 CONTAINS DELAY TIMEOUT CONSTANT
91 |TSTNGS (TEST FOR REGISTER BIT(S) SET)
92 | THIS SUBROUTINE CALL WAITS A FINITE TIME FOR THE DESIGNATED BIT(S)
93 | OF THE SPECIFIED REGISTER TO GO SET. IF RESET OF BIT(S) OCCUR
94 | BEFORE TIMEOUT, EXIT IS TO RETURN ADDRESS+2. IF TIMEOUT OCCURS
95 | BEFORE THE DESIGNATED BIT(S) SET, EXIT IS TO RETURN ADDRESS.
96 | ARGUMENTS:
97 | R2 CONTAINS ADDRESS OF REGISTER TO BE TESTED
98 | R3 CONTAINS MASK FOR BIT(S) TO BE TESTED
99 | R4 CONTAINS DELAY TIMEOUT CONSTANT
100 |PRTMSG (PRINT MESSAGE)
101 | THIS SUBROUTINE CALL PRINTS AN ASCII 2 MESSAGE WHOSE STARTING ADDRESS
102 | IS CONTAINED IN R2
103 |PRTUCT (PRINT OCTAL)
104 | THIS SUBROUTINE CALL PRINTS THE OCTAL VALUE CONTAINED IN R2
105 |MTTRP (MAG TAPE TRAP)
106 | THIS SUBROUTINE CALL IS USED TO SERVICE UNEXPECTED OR ILLEGAL
107 | MAG TAPE INTERRUPTS.
108 |PRTUJT (PRINTOUT)
109 | THIS SUBROUTINE CALL TRANSFERS THE LOWER BYTE OF "CHAR" TO THE
110 | PRINTOUT DEVICE. (USUALLY A TELETYPE)
111 |XCLOR (EXCLUSIVE OR)
112 | THIS SUBROUTINE CALL EXCLUSIVE OR'S THE CONTENTS OF R1 & R2
113 |ROTCLMP (ROTATE COMPARE)
114 | THIS SUBROUTINE CALL GENERATES THE CRC CHARACTER FROM THE

.MAIN. MACRO V06-03 05-NOV-74 12139 PAGE 1-2

115 I CONTENTS OF R0
116
117 I THE FOLLOWING SUBROUTINE CALLS EXECUTE COMMONLY USED
118 I "MOV" AND "BIT" INSTRUCTIONS OF THE SPECIFIED FUNCTIONS.
119 I PWRCLR (POWER CLEAR)
120 I SETS BIT 12 OF MTC
121 I WRIT1E (WRITE ONE RECORD)
122 I INITIATES WRITE COMMAND
123 I READ (READ ONE RECORD)
124 I INITIATES READ COMMAND
125 I WPEUF (WRITE END OF FILE)
126 I INITIATES WRITE FILE MARK
127 I REWIND (REWIND TAPE)
128 I INITIATES REWIND OF TAPE UNIT
129 I SPALEF (SPACE FORWARD)
130 I INITIATES SPACE FORWARD COMMAND
131 I SPALEB (SPACE BACKWARDS)
132 I INITIATES SPACE BACKWARDS COMMAND
133 I SELECT (SELECT TAPE UNIT)
134 I SELECTES TAPE UNIT TO BE TESTED
135 I WBUFCA (WRITE BUFFER TO CA)
136 I SETS CA TO START OF WRITE BUFFER
137 I RBUFCA (READ BUFFER TO CA)
138 I SETS CA TO START OF READ BUFFER
139 I MIN1BC (MINUS ONE TO BC)
140 I SETS BC TO MINUS ONE
141 I MIN3BC (MINUS THREE TO BC)
142 I SETS BC TO MINUS THREE
143 I MIN4BC (MINUS FOUR TO BC)
144 I SETS BC TO MINUS FOUR
145 I TSTEOF (TEST FOR EOF)
146 I TESTS FOR FILE MARK DETECTION
147
148 I 16. ERRORS
149
150 I 16.1 ERROR PRINTOUT FORMAT
151 I WITH SW13=0 (OR DOWN) THE FOLLOWING PRINTOUT WILL APPEAR ON AN ERROR
152 I PC STATUS COMMAND BYTE CA DATA B READ L TEMP CRC CAL
153 I XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
154 I PC = ADDRESS OF TEST WHERE ERROR OCCURED
155 I STATUS = CONTENTS OF STATUS REGISTER AT TIME OF ERROR
156 I COMMAND = CONTENTS OF COMMAND REGISTER AT TIME OF ERROR
157 I BYTE = CONTENTS OF BYTE COUNTER AT TIME OF ERROR
158 I CA = CONTENTS OF CURRENT MEMORY ADDRESS AT TIME OF ERROR
159 I DATA B = CONTENTS OF DATA BUFFER AT TIME OF ERROR
160 I READ L = CONTENTS OF TU10 REGISTER AT TIME OF ERROR
161 I TEMP = CONTENTS OF ADDRESS "TEMP" USED BY SOME TESTS
162 I CRC CAL = CRC CHARACTER CALCULATED (USEFUL ONLY FOR CRC TEST)
163
164 I NOTE THAT NOT ALL OF THE INFORMATION PRINTED IS INTENDED TO BE
165 I USEFUL FOR EVERY TYPE OF ERROR; THIS IS SIMPLY A STANDARD ERROR
166 I REPORT FOR ALL ERRORS. THE OPERATOR MUST REFER TO THE PROGRAM
167 I LISTING AT THE ADDRESS OF THE ERROR FOR A DESCRIPTION OF THE
168 I CAUSE OF THE ERROR; IT IS THEN UP TO HIM TO DETERMINE WHICH
169 I OF THE INFORMATION IS USEFUL.
170 I 16.2 ERROR RECOVERY
171 I WITH SW15=1 OR JP THE PROGRAM WILL HALT ON AN ERROR. DEPRESS

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-3

172 1 CONTINUE SWITCH TO RESTART TEST.
173 17. RESTRICTIONS
174 17.1 STARTING RESTRICTION
175 1 BEFORE STARTING PROGRAM THE OPERATOR MUST MAKE CERTAIN THAT THE
176 1 TRANSPORT IS "ON-LINE" AND AT "LOAD POINT".
177 17.2 OPERATIONAL RESTRICTIONS
178 1 MANUAL INTERVENTION TEST MUST BE PERFORMED ON EACH PASS THRU
179 1 THE PROGRAM UNLESS INHIBITED WITH SW11=1 (OR UP).
180 18. MISCELLANEOUS
181 18.1 EXECUTION TIME
182 1 WITH MANUAL INTERVENTION TEST INHIBITED IT TAKES 1 MINUTE
183 1 FOR ONE PASS THRU PROGRAM. MANUAL INTERVENTION TEST IS
184 1 OPERATOR DEPENDENT BUT SHOULD TAKE APPROXIMATELY 2 MINUTES.
185 19. PROGRAM DESCRIPTION
186 19.1 LISTING
187 1 STATUS AND COMMAND REGISTER BIT ASSIGNMENTS
188
189 1 COMMAND REGISTER
190 115 ERROR (ERR)
191
192 114 DEN 8 00 = LO DENS 7 TRACK 10 = HI DENS 7 TRACK
193 113 DEN 5 01 = LO DENS 7 TRACK 11 = CORE DP 7 TRACK
194 112 POWER CLEAR (PWRCCLR)
195
196 111 PARITY 0 = ODD 1 = EVEN (EVP)
197 110 UNIT SEL. BIT 2 (FAD1)
198 19 UNIT SEL. BIT 1 (S1)
199
200 18 UNIT SEL. BIT 0 (SO)
201 17 CONTROL UNIT READY (CUR)
202 16 INTERRUPT ENABLE (IEN)
203
204 15 ADDRESS BIT 17 (AD17)
205 14 ADDRESS BIT 16 (AD16)
206 13 FUNCTION BIT 2 000 = OFF LINE 100 = SPACE FORWARD
207 1 001 = READ 101 = SPACE REVERSE
208
209 12 FUNCTION BIT 1 010 = WRITE 110 = WRITE XIRG
210 11 FUNCTION BIT 0 011 = WRITE EOF 111 = REWIND
211 10 GO
212
213 1 STATUS REGISTER
214
215 115 ILLEGAL COMMAND (ILC)
216
217 114 END OF FILE (EOF)
218 113 CORRECTABLE PARITY ERROR (PHASE ENCODED ONLY) (CRE)
219 112 PARITY ERROR (PAE)
220
221 111 BUS GRANT LATE (BGL)
222 110 END OF TAPE (EOT)
223 19 RECORD LENGTH ERROR (RLE)
224
225 18 BAD TAPE ERROR (BTE)
226 17 NON EXISTENT MEMORY (NXM)
227 16 SELECT REMOTE (SELR)
228

MAIN. MACRO V06-03 05-NOV-74 12139 PAGE 1-4

229 15 BEGINNING OF TAPE (BOT)
230 14 7 CHANNEL (CH)
231 13 SETTLE DOWN (SDWN)
232
233 12 WRITE LOCK (WRL)
234 11 REWIND STATUS (RWS)
235 10 TAPE UNIT READY (TUR)
236 *****ASSEMBLY LISTING*****
237
238 000000 ,ENABL ABS
239 ,ENABL AMA
240 ,NLIST TTM
241
242 0000UD ,=0
243 000020 ,REPT 20
244
245 HALT
246 ,ENDR
247 000034 ,=34
248 000034 011516 TRAP34
249 000036 000340 340
250 000060 ,=60
251 000044 ,REPT 44
252 MTTRP
253 340
254 ,ENDR
255
256 104400 HLT =104400 ITRAP SUBROUTINE TABLE EQUATES
257 104402 SCOPE =104402
258 104404 TSTCUR=104404
259 104406 TSTRGS=104406
260 104410 TSTRGR=104410
261 104412 PRTMSG=104412
262 104414 PWRCLR=104414
263 104416 WRITE =104416
264 104420 READ =104420
265 104422 WREOF =104422
266 104424 REWIND=104424
267 104426 SPACELF=104426
268 104430 SPACEN=104430
269 104432 SELECT=104432
270 104434 WBUFCIA=104434
271 104436 RBUFCIA=104436
272 104440 MIN1BC=104440
273 104442 MIN3BC=104442
274 104444 MIN4BC=104444
275 104446 TSTE0F=104446
276 104450 WAITTR=104450
277 104452 XCLOR =104452
278 104454 ROTCMP=104454
279 104456 PRTOCT=104456
280 104460 PRTOUT=104460
281
282 177570 SR=177570
283 177776 CC=177776
284 000240 NOP=240
285 000776 BUFF=776

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-5

286	000000	R0=%0
287	000001	R1=%1
288	000002	R2=%2
289	000003	R3=%3
290	000004	R4=%4
291	000005	R5=%5
292	000006	SP=%6
293	000007	PC=%7
294	000200	=200
295	000200 000107 001160	JMP START
296	001000	=1000
297	001000 172520	MTNAD: 172520 INORMAL MAG TAPE ADDRESS
298	001002 172720	MTAAD: 172720 IALTERNATE MAG TAPE ADDRESS
299	001004 000244	MTNV: 224
300	001006 000246	MTNS: 226
301	001010 000260	MTAV: 260
302	001012 000262	MTAS: 262
303	001014 000224	MTV: 224 IINTERRUPT VECTOR
304	001016 000246	MTVS: 226 IINTERRUPT STATUS
305	001020 172520	MTS: 172520 ISTATUS REGISTER
306	001022 172522	MTC: 172522 ICOMMAND REGISTER
307	001024 172524	BC: 172524 IBYTE COUNT
308	001026 172526	CA: 172526 ICURRENT MEMORY ADDRESS
309	001030 172530	MTD: 172530 IDATA BUFFER
310	001032 172532	MTRD: 172532 ITU10 READ LINES
311	001034 177506	TDBR: 177506
312	001036 177504	TCSR: 177564
313	001040 000000	IDTST: 0
314	001042 000000	TMTNFL: 0
315	001044 000000	TEMP: 0
316	001046 000000	TEMPP: 0
317	001050 000000	TEMPS: 0
318	001052 000000	CRXOR1: 0
319	001054 000000	CHROTR1: 0
320	001056 000000	CHXOR2: 0
321	001060 000000	CRROTR2: 0
322	001062 000000	CHXOR3: 0
323	001064 000000	CRROTR3: 0
324	001066 000000	CHXOR4: 0
325	001070 000000	CRROTR4: 0
326	001072 000000	CHCWRT: 0
327	001074 000000	OCT: 0
328	001076 000000	CHAR: 0
329	001100 000000	PRINT1: 0
330	001102 001350	RETURN: BEGIN IADDRESS OF LAST TEST
331	001104 000000	MTP: 0 IMAG TAPE PRIORITY BUS LEVEL
332	001106 000000	TCSL: 0 ISELECT COMMAND
333	001110 000000	MTPM: 0 IMAG TAPE PRIORITY BUS LEVEL MINUS ONE
334		ICOMMAND CODES TABLE
335	001112 000000	TCOL: 0 IOFF LINE COMMAND
336	001114 000000	TCRD: 0 IREAD COMMAND
337	001116 000000	TCWT: 0 IWRITE COMMAND
338	001120 000000	TCWF: 0 IWRITE FILE MARK COMMAND
339	001122 000000	TCSF: 0 ISPACE FORWARD COMMAND
340	001124 000000	TCRS: 0 ISPACE REVERSE COMMAND
341	001126 000000	TCWE: 0 IWRITE WITH EXTENDED GAP COMMAND
342	001130 000000	TCRW: 0 IREWIND COMMAND

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-6

HEADINGS:

LINE	LOC	CONTENTS	SYM	INST	OPR	REMARKS
343	001132	000000		USLEN:	0	
344	001134	001160		SAVE:	=,+20.	ITEMP STORAGE FOR TAPE REGISTER& FOR ERROR PRINT
345	001160			START:		
346	001160	012706 000776		MOV	#BUFF,SP	IRESET STACK
347	001164	012702 012711		MOV	#MSG0,R2	IPHINT MESSAGE IN R2
348	001170	104412		PRTMSG		
349	001172	000000		HALT		
350				IRESET	CYCLE COUNTER	
351	001174	112737 000060 014552		MOVA	#60,MSG13+11	
352	001202	112737 000060 014553		MOVA	#60,MSG13+12	
353	001210	112737 000061 014554		MOVA	#61,MSG13+13	
354				I MODIFY	MAG TAPE REGISTERS ADDRESS ACCORDING TO SW 4	
355	001216	012702 001020		MOV	HMTS,R2	
356	001222	013701 001000		MOV	MTNAD,R1	
357	001226	032737 000020 177570		BIT	#20,SR	I IS SW 4 SET?
358	001234	001402		BEQ	TAMD	INO. GENERATE NORMAL MAG TAPE ADDRESSES
359	001236	013701 001002		MOV	MTAAD,R1	I YES. GENERATE ALTERNATE MAG TAPE ADDRESSES
360	001242	010142		MOV	R1,(R2)+	
361	001244	062701 000002		ADD	#2,R1	I GENERATE NEXT ADDRESS
362	001250	020247 001032		CMP	R2,HMTRD	
363	001254	003772		BLE	TAMD	
364				I MODIFY	MAG TAPE INTERRUPT VECTOR ACCORDING TO SW 4	
365	001256	032737 000020 177570		BIT	#20,SR	I IS SW 4 SLT?
366	001264	001415		BEQ	MTVN	INO. GENERATE NORMAL INTERRUPT VECTOR
367	001266	013737 001010 001014		MOV	MTAV,MTV	I YES. GEN ALTERNATE INTERRUPT VECTOR
368	001274	013737 001012 001016		MOV	MTAS,MTVS	
369	001302	012777 011450 177474		MOV	HMTTRP,AMTNV	
370	001310	012737 000340 001006		MOV	#340,MTNS	
371	001316	000414		BR	BEGIN	
372	001320	013737 001004 001014	MTVN#	MOV	MTNV,MTV	
373	001326	013737 001006 001016		MOV	MTNS,MTVS	
374	001334	012777 011450 177446		MOV	HMTTRP,AMTAV	
375	001342	012777 000340 177442		MOV	#340,AMTAS	
376	001350	012737 001350 001102	BEGIN#	MOV	#BEGIN,RETURN SET UP RESTART OF PROGRAM	
377	001356	012706 000776		MOV	#BUFF,SP	IRESET STACK
378	001362	005037 001042		CLR	TMTNFL	ICLEAR TAPE MOTION FLAG
379	001366	005037 177776		CLR	CC	ISET PROCESSOR PRIORITY TO 0
380	001372	005037 000036		CLR	#36	ISET TRAP PRIORITY TO
381	001376	012777 011450 177410		MOV	HMTTRP,AMTV	ISET UP ILLEGAL INTERRUPT RETURN
382	001404	012737 000340 001016		MOV	-#340,MTVS-	ISET INTERRUPT VECTOR C — 60 MIVS
383	001412	005037 001100		CLR	PRINT1	IINITIALIZE ERROR PRINTOUT HEADING
384	001416	005037 001072		CLR	CRCWRT	IINITIALIZE CRC CALCULATED FOR PRINTOUT
385	001422	005037 000006		CLR	6	IINITIALIZE ERROR TRAP VECTOR
386				I CALCULATE	MAG TAPE PRIORITY BUS #	
387	001426	013700 177570		MOV	SR,R0	
388	001432	042700 177437		BIC	#177437,R0	ICHECK SWITCHES
389	001436	010037 001104		MOV	R0,MTP	ISTORE MAG TAPE PRIORITY BUS #
390	001442	162700 000040		SUB	#40,R0	IDECRIMENT BUS #
391	001446	010037 001110		MOV	R0,MTPM	ISTORE MAG TAPE BUS LEVEL MINUS ONE
392				I GENERATE	MAG TAPE COMMAND TABLE	
393	001452	013700 177570		MOV	SR,R0	
394	001456	042700 174377		BIC	#174377,R0	
395	001462	010037 001106		MOV	R0,TCSL	ISTORE SELECT COMMAND
396	001466	052700 060001		BIS	#60001,R0	
397	001472	012701 001112		MOV	HTCOL,R1	
398	001476	010041		MOV	R0,(R1)+	ISTORE NEXT COMMAND
399	001500	062700 000002		ADD	#2,R0	

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-7

400 001504 022701 001132 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
401 001510 0013/2 BNE .+12 ILOOP IF NOT COMPLETE
402
403
404
405
406
407 001512 104402 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
408 001514 000005 BNE .+12 ILOOP IF NOT COMPLETE
409 001516 032777 177577 177276 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
410 001524 001401 BNE .+12 ILOOP IF NOT COMPLETE
411 001526 104400 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
412
413
414 001530 104402 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
415 001532 000005 BNE .+12 ILOOP IF NOT COMPLETE
416 001534 032777 137600 177256 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
417 001542 001401 BNE .+12 ILOOP IF NOT COMPLETE
418 001544 104400 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
419
420
421 001546 104402 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
422 001550 000005 BNE .+12 ILOOP IF NOT COMPLETE
423 001552 005777 177246 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
424 001556 001401 BNE .+12 ILOOP IF NOT COMPLETE
425 001560 104400 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
426
427
428 001562 104402 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
429 001564 000005 BNE .+12 ILOOP IF NOT COMPLETE
430 001566 005777 177234 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
431 001572 001401 BNE .+12 ILOOP IF NOT COMPLETE
432 001574 104400 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
433
434
435 001576 104402 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
436 001600 000005 BNE .+12 ILOOP IF NOT COMPLETE
437 001602 005777 177222 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
438 001606 001401 BNE .+12 ILOOP IF NOT COMPLETE
439 001610 104400 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
440
441
442 001612 104402 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
443 001614 000005 BNE .+12 ILOOP IF NOT COMPLETE
444 001616 105777 177200 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
445 001622 100401 BNE .+12 ILOOP IF NOT COMPLETE
446 001624 104400 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
447
448
449 001626 104402 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
450 001630 000005 BNE .+12 ILOOP IF NOT COMPLETE
451 001632 032777 040000 177172 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
452 001640 001401 BNE .+12 ILOOP IF NOT COMPLETE
453 001642 104400 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
454
455
456 001644 104402 CMP NTCOL+20,R1 ITEST FOR TABLE COMPLETION
***** REGISTERS TESTS *****
***** TEST ALL BITS OF COMMAND REGISTER (EXCEPT CU READY, BIT 7) TO BE CLEARED
SCOPE
RESET
BIT #177577, @MTC
BEQ .+4
HLT IERROR, INIT DIDN'T CLEAR COMMAND REGISTER
***** TEST BITS 7-13.15 OF STATUS REGISTER TO BE CLEARED AFTER INIT
SCOPE
RESET
BIT #137600, @MTS
BEQ .+4
HLT IERROR, INIT DIDN'T CLEAR PROPER BITS IN STATUS
***** TEST UNIT TO CLEAR BYTE RECORD COUNT
SCOPE
RESET
TST @BC
BEQ .+4
HLT IERROR, INIT DIDN'T CLEAR BYTE COUNT
***** TEST INIT TO CLEAR CURRENT MEMORY ADDRESS REGISTER
SCOPE
RESET
TST @CA
BEQ .+4
HLT IERROR, INIT DIDN'T CLEAR CURRENT MEMORY ADDRESS
***** TEST INIT TO CLEAR DATA BUFFER
SCOPE
RESET
TST @MTD
BEQ .+4
HLT IERROR, INIT DIDN'T CLEAR DATA BUFFER
***** TEST CU READY (BIT 7 COMMAND REGISTER) TO BE SET ON INIT.
SCOPE
RESET
TSTR @MTC
BMI .+4
HLT IERROR, INIT DIDN'T SET CU READY
***** TEST BIT 14 OF TU10 READ LINES TO BE CLEARED BY INIT
SCOPE
RESET
BIT #40000, @MTRD
BEQ .+4
HLT IERROR, INIT FAILED TO CLEAR BIT 14 OF MTRD
***** TEST COMMAND REGISTER (EXCEPT CU READY,BIT 7) TO BE CLEARED BY POWER CLEAR
SCOPE

MAIN. MACHO V06-03 05-NOV-74 12:39 PAGE 1-8

457 001646 104414 PWRCLR
458 001650 032777 177577 177144 BIT #177577,AMTC
459 001656 001401 BEQ .+4
460 001660 104400 HLT ERROR, POWER CLEAR DIDN'T CLEAR COMMAND REGISTE
461 *****
462
463 TEST BITS 7-13, 15 OF STATUS REGISTER TO BE CLEARED BY POWER CLEAR (BIT
464 001662 104402 SCOPE
465 001664 104414 PWRCLR
466 001666 032777 137600 177124 BIT #137600,AMTS
467 001674 001401 BEQ .+4
468 001676 104400 HLT ERROR, POWER CLEAR DIDN'T CLEAR PROPER BITS IN REG
469 *****
470 TEST POWER CLEAR (BIT 12) TO CLEAR BYTE RECORD COUNT
471 001700 104402 SCOPE
472 001702 104414 PWRCLR
473 001704 005777 177114 TST @BC
474 001710 001401 BEQ .+4
475 001712 104400 HLT ERROR, POWER CLEAR DIDN'T CLEAR BYTE COUNT
476 *****
477 TEST POWER CLEAR (BIT 12) TO CLEAR CURRENT MEMORY ADDRESS REGISTER
478 001714 104402 SCOPE
479 001716 104414 PWRCLR
480 001720 005777 177102 TST @CA
481 001724 001401 BEQ .+4
482 001726 104400 HLT ERROR, POWER CLEAR DIDN'T CLEAR CURRENT ADD. REG
483 *****
484 TEST POWER CLEAR (BIT 12) TO CLEAR DATA BUFFER
485 001730 104402 SCOPE
486 001732 104414 PWRCLR
487 001734 005777 177070 TST @MTD
488 001740 001401 BEQ .+4
489 001742 104400 HLT ERROR, POWER CLEAR DIDN'T CLEAR DATA BUFFER
490 *****
491 TEST CU READY (BIT 7 COMMAND REGISTER) TO BE SET BY POWER CLEAR
492 001744 104402 SCOPE
493 001746 104414 PWRCLR
494 001750 105777 177046 TSTB @AMTC
495 001754 100401 BMI .+4
496 001756 104400 HLT ERROR, POWER CLEAR DIDN'T SET CU READY
497 *****
498 TEST BIT 14 OF TU10 HEAD LINES TO BE CLEARED BY POWER CLEAR
499 001760 104402 SCOPE
500 001762 104414 PWRCLR
501 001764 032777 040000 177040 BIT #40000,AMTRD
502 001772 001401 BEQ .+4
503 001774 104400 HLT ERROR, POWER CLEAR FAILED TO CLEAR BIT14 OF TU10 REG
504 *****
505 TEST FUNCTION BITS (1,2,3) OF COMMAND REGISTER CAN BE SET
506 001776 104402 SCOPE
507 002000 012777 000016 177014 MOV #16,AMTC
508 002006 122777 000216 177006 CMPB #216,AMTC
509 002014 001401 BEQ .+4
510 002016 104400 HLT ERROR, CU READY AND ALL FUNCTION BITS NOT SET
511 *****
512 TEST FUNCTION BITS (1,2,3) OF COMMAND REGISTER CAN BE CLEARED
513 002020 104402 SCOPE

.MAIN. MACRO V06-03 05-NOV-74 12139 PAGE 1-9

514 002022 0527// 000016 176772	BIS #16,0MTC
515 002030 0427// 000016 176764	BIC #16,0MTC
516 002036 0327// 000016 176756	BIT #16,0MTC
517 002044 001401	BEQ .+4
518 002046 104400	HLT IERROR, ALL FUNCTION BITS NOT CLEARED
519	***** TEST FUNCTIONS BITS (1,2,3+) OF COMMAND REGISTER CAN BE SET AND CLEARED
520	SCOPE
521 002050 104402	MOV #2,0MTC
522 002052 0127// 000002 176742	CMPB #202,0MTC
523 002060 1227// 000202 176734	LEQ .+4
524 002066 001401	HLT IERROR, FUNCTION NOT =001 READ)
525 002070 104400	SCOPE
526 002072 104402	MOV #4,0MTC
527 002074 0127// 000004 176720	CMPB #204,0MTC
528 002102 1227// 000204 176712	BEQ .+4
529 002110 001401	HLT IERROR, FUNCTION NOT =010 WRITE)
530 002112 104400	SCOPE
531 002114 104402	MOV #6,0MTC
532 002116 0127// 000006 176676	CMPB #206,0MTC
533 002124 1227// 000206 176670	BEQ .+4
534 002132 001401	HLT IERROR, FUNCTION NOT =011 WRITE EOF)
535 002134 104400	SCOPE
536 002136 104402	MOV #10,0MTC
537 002140 0127// 000010 176654	CMPB #210,0MTC
538 002146 1227// 000210 176646	BEQ .+4
539 002154 001401	HLT IERROR, FUNCTION NOT =100 SPACE FORWARD)
540 002156 104400	SCOPE
541 002160 104402	MOV #12,0MTC
542 002162 0127// 000012 176632	CMPB #212,0MTC
543 002170 1227// 000212 176624	BEQ .+4
544 002176 001401	HLT IERROR, FUNCTION NOT =101 SPACE REVERSE)
545 002200 104400	SCOPE
546 002202 104402	MOV #14,0MTC
547 002204 0127// 000014 176610	CMPB #214,0MTC
548 002212 1227// 000214 176602	BEQ .+4
549 002220 001401	HLT IERROR, FUNCTION NOT =110 WRITE XIRG)
550 002222 104400	SCOPE
551 002224 104402	MOV #16,0MTC
552 002226 0127// 000016 176566	CMPB #216,0MTC
553 002234 1227// 000216 176560	BEQ .+4
554 002242 001401	HLT IERROR, FUNCTION NOT =111 REWIND)
555 002244 104400	***** TEST ADDRESS BITS (4,5) OF COMMAND REGISTER CAN BE SET
556	SCOPE
557 002246 104402	MOV #60,0MTC
558	***** TEST ADDRESS BITS (4,5) OF COMMAND REGISTER CAN BE CLEARED
559 002250 0127// 000060 176544	CMPB #260,0MTC
560 002256 1227// 000260 176536	BEQ .+4
561 002264 001401	HLT IERROR, CU READY AND ADDRESS BITS NOT SET
562 002266 104400	SCOPE
563	***** TEST ADDRESS BITS (4,5) OF COMMAND REGISTER CAN BE SET
564	***** TEST ADDRESS BITS (4,5) OF COMMAND REGISTER CAN BE CLEARED
565 002270 104402	MOV #60,0MTC
566 002272 0527// 000060 176522	CMPB #260,0MTC
567 002300 0427// 000060 176514	BEQ .+4
568 002306 0327// 000060 176506	HLT IERROR, ADDRESS BITS NOT CLEARED
569 002314 001401	
570 002316 104400	

MAIN. MACRO V06-03 05-NOV-74 12139 PAGE 1-10

571 ***** TEST ADDRESS BITS (4,5,6) OF COMMAND REGISTER CAN BE SET AND CLEARED IN REG.
 572
 573 002320 1044U2 SCOPE
 574 002322 0127//7 000020 176472 MOV #20,AMTC
 575 002330 1227//7 000220 176464 CMPB #220,AMTC
 576 002336 0014U1 BEQ .+4
 577 002340 1044U0 HLT IERROR ADDRESS BITS NOT =2
 578 002342 1044U2 SCOPE
 579 002344 012777 000040 176450 MOV #40,AMTC
 580 002352 122777 000240 176442 CMPB #240,AMTC
 581 002360 0014U1 BEQ .+4
 582 002362 1044U0 HLT IERROR ADDRESS BITS NOT =2
 583 002364 1044U2 SCOPE
 584 002366 0127//7 000060 176426 MOV #60,AMTC
 585 002374 1227//7 000260 176420 CMPB #260,AMTC
 586 002402 0014U1 BEQ .+4
 587 002404 1044U0 HLT IERROR ADDRESS BITS NOT =1
 588 ***** TEST UNIT SELECT BITS (8,9,10) OF COMMAND REGISTEK CAN BE SET
 589
 590 002406 1044U2 SCOPE
 591 002410 0127//7 003400 176404 MOV #3400,AMTC
 592 002416 0227//7 003600 176376 CMP #3600,AMTC
 593 002424 0014U1 BEQ .+4
 594 002426 1044U0 HLT IERROR, CU READY AND ALL UNIT SELECT BITS NOT SET
 595 ***** TEST UNIT SLLECT BITS (8,9,10) OF COMMAND REGISTER CAN BE CLEARED
 596
 597 002430 1044U2 SCOPE
 598 002432 0527//7 003400 176362 BIS #3400,AMTC
 599 002440 042777 003400 176354 BIC #3400,AMTC
 600 002446 0327//7 003400 176346 BIT #3400,AMTC
 601 002454 0014U1 BEQ .+4
 602 002456 1044U0 HLT IERROR, UNIT SELECT BITS NOT CLEARED
 603 ***** TEST UNIT SELECT BITS (8,9,10) OF COMMAND REGISTER CAN BE SET AND CLEARED
 604
 605 002460 1044U2 SCOPE
 606 002462 0127//7 000400 176332 MOV #400,AMTC
 607 002470 0227//7 000600 176324 CMP #600,AMTC
 608 002476 0014U1 BEQ .+4
 609 002500 1044U0 HLT IERROR, UNIT SELECT NOT =001
 610 002502 1044U2 SCOPE
 611 002504 0127//7 001000 176310 MOV #1000,AMTC
 612 002512 0227//7 001200 176302 CMP #1200,AMTC
 613 002520 0014U1 BEQ .+4
 614 002522 1044U0 HLT IERROR, UNIT SELECT NOT =010
 615 002524 1044U2 SCOPE
 616 002526 0127//7 001400 176266 MOV #1400,AMTC
 617 002534 0227//7 001600 176260 CMP #1600,AMTC
 618 002542 0014U1 BEQ .+4
 619 002544 1044U0 HLT IERROR, UNIT SELECT NOT =011
 620 002546 1044U2 SCOPE
 621 002550 0127//7 002000 176244 MOV #2000,AMTC
 622 002556 0227//7 002200 176236 CMP #2200,AMTC
 623 002564 0014U1 BEQ .+4
 624 002566 1044U0 HLT IERROR, UNIT SELECT NOT =100
 625 002570 1044U2 SCOPE
 626 002572 0127//7 002400 176222 MOV #2400,AMTC
 627 002600 0227//7 002600 176214 CMP #2600,AMTC

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-11

628 002606 001401 BEQ .+4
629 002610 104400 HLT IERROR, UNIT SELECT NOT #101
630 002612 104402 SCOPE
631 002614 0127/7 003000 176200 MOV #3000,AMTC
632 002622 0227/7 003200 176172 CMP #3200,AMTC
633 002630 001401 BEQ .+4
634 002632 104400 HLT IERROR, UNIT SELECT NOT #110
635 002634 104402 SCOPE
636 002636 0127/7 003400 176156 MOV #3400,AMTC
637 002644 0227/7 003600 176150 CMP #3600,AMTC
638 002652 001401 BEQ .+4
639 002654 104400 HLT IERROR, UNIT SELECT NOT #111
640 *****
641 ITEST PARITY BIT (BIT 11) CAN BE SET
642
643 002656 104402 SCOPE
644 002660 0527/7 004000 176134 BIS #4000,AMTC
645 002666 0327/7 004000 176126 BIT #4000,AMTC
646 002674 001001 BNE .+4
647 002676 104400 HLT IERROR, PARITY NOT SET
648 *****
649 ITEST PARITY BIT (BIT 11) CAN BE CLEARED
650 002700 104402 SCOPE
651 002702 0527/7 004000 176112 BIS #4000,AMTC
652 002710 0427/7 004000 176104 BIC #4000,AMTC
653 002716 0327/7 004000 176076 BIT #4000,AMTC
654 002724 001401 BEQ .+4
655 002726 104400 HLT IERROR, PARITY BIT NOT CLEARED
656 *****
657 ITEST DENSITY BITS (13,14) OF COMMAND REGISTER CAN BE SET
658 002730 104402 SCOPE
659 002732 0127/7 060000 176062 MOV #60000,AMTC
660 002740 0227/7 060200 176054 CMP #60200,AMTC
661 002746 001401 BEQ .+4
662 002750 104400 HLT IERROR, CU READY AND DENSITY BITS NOT SET
663 *****
664 ITEST DENSITY BITS (13,14) OF COMMAND REGISTER CAN BE CLEARED
665 002752 104402 SCOPE
666 002754 0527/7 060000 176040 BIS #60000,AMTC
667 002762 0427/7 060000 176032 BIC #60000,AMTC
668 002770 0327/7 060000 176024 BIT #60000,AMTC
669 002776 001401 BEQ .+4
670 003000 104400 HLT
671 ITEST DENSITY BITS (13,14) OF COMMAND REGISTER CAN BE SET AND CLEARED IN REG
672 003002 104402 SCOPE
673 003004 0127/7 020000 176010 MOV #20000,AMTC
674 003012 0227/7 020200 176002 CMP #20200,AMTC
675 003020 001401 BEQ .+4
676 003022 104400 HLT IERROR, DENSITY NOT #01
677 003024 104402 SCOPE
678 003026 0127/7 040000 175766 MOV #40000,AMTC
679 003034 0227/7 040200 175760 CMP #40200,AMTC
680 003042 001401 BEQ .+4
681 003044 104400 HLT IERROR, DENSITY NOT #10
682 003046 104402 SCOPE
683 003050 0127/7 060000 175744 MOV #60000,AMTC
684 003056 0227/7 060200 175736 CMP #60200,AMTC

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-12

685 003064 001401 BEQ .+4
686 003066 104400 HLT ERROR DENSITY NOT =11
687 *****
688 TEST ALL BITS OF RYTE COUNT TO ACCEPT COUNT PATTERN
689 003070 104402 SCOPE
690 003072 005037 001044 CLR TEMP
691 003076 013777 001044 175720 TBCI MOV TEMP,ABC
692 003104 023777 001044 175712 CMP TEMP,ABC
693 003112 001401 BEQ .+4
694 003114 104400 HLT ERROR, BYTE COUNT NOT =TEMP
695 003116 032737 010000 177570 BIT #10000,SR
696 003124 001002 BNE .+6 INHIBIT ITERATION?
697 003126 005237 001044 INC TEMP
698 003132 001361 BNE TBC
699 *****
700 TEST ALL BITS OF CURRENT MEMORY ADDRESS REGISTER TO ACCEPT COUNT PATTERN
701 003134 104402 SCOPE
702 003136 005037 001044 CLR TEMP
703 003142 013777 001044 175656 TMAI MOV TEMP,ACA
704 003150 023777 001044 175650 CMP TEMP,ACA
705 003156 001401 BEQ .+4
706 003160 104400 HLT ERROR, CA NOT = TEMP
707 003162 032737 010000 177570 BIT #10000,SR
708 003170 001002 BNE .+6 INHIBIT ITERATION?
709 003172 005237 001044 INC TEMP
710 003176 001361 BNE TMA
711 *****
712 TEST BITS 0-7 OF DATA-BUFFER TO ACCEPT COUNT PATTERN
713 003200 104402 SCOPE
714 003202 005037 001044 CLR TEMP
715 003206 113777 001044 175614 TDBI MOVR TEMP,AMTD
716 003214 123777 001044 175606 CMPB TEMP,AMTD
717 003222 001401 BEQ .+4
718 003224 104400 HLT ERROR, DATA BUFFER NOT = TEMP
719 003226 032737 010000 177570 BIT #10000,SR
720 003234 001002 BNE .+6 INHIBIT ITERATION?
721 003236 105237 001044 INCB TEMP INO
722 003242 001361 BNE TDB
723 *****
724 TEST BIT 14 OF MTRD CAN BE SET AND CLEARED
725 003244 104402 SCOPE
726 003246 052777 040000 175556 BIS #40000,AMTRD
727 003254 032777 040000 175550 BIT #40000,AMTRD
728 003262 001001 BNE .+4
729 003264 104400 HLT ERROR, BIT 14 OF MTRD NOT =1
730 003266 042777 040000 175536 BIC #40000,AMTRD
731 003274 032777 040000 175530 BIT #40000,AMTRD
732 003302 001401 BEQ .+4
733 003304 104400 HLT ERROR, BIT 14 OF MTRD NOT =0
734 *****
735 TEST FOR TAPE UNIT READY (BIT 0) SET
736 003306 104402 SCOPE
737 003310 104432 SELECT
738 003312 032777 000001 175500 BIT #1,AMTS
739 003320 001001 BNE .+4
740 003322 104400 HLT ERROR TU READY NOT SET
741 *****

MAIN. MACRO VU6-03 05-NOV-74 12:39 PAGE 1-13

742
 743 003324 104402
 744 003326 032777 000002 175464
 745 003334 001401
 746 003336 104400
 747
 748
 749 003340 104402
 750 003342 032777 000004 175450
 751 003350 001401
 752 003352 104400
 753
 754
 755 003354 104402
 756 003356 032777 000010 175434
 757 003364 001401
 758 003366 104400
 759
 760
 761 003370 006037 177570
 762 003374 103407
 763 003376 104402
 764 003400 032777 000020 175412
 765 003406 001401
 766 003410 104400
 767 003412 000406
 768
 769
 770 003414 104402
 771 003416 032777 000020 175374
 772 003424 001001
 773 003426 104400
 774
 775
 776 003430 104402
 777 003432 104402
 778 003434 032777 000040 175356
 779 003442 001001
 780 003444 104400
 781
 782
 783 003446 104402
 784 003450 032777 000100 175342
 785 003456 001001
 786 003460 104400
 787 003462 005037 001040
 788
 789
 790
 791
 792
 793 003466 005237 001042
 794 003472 104402
 795 003474 104404
 796 003476 104400
 797 003500 104400
 798 003502 104404

***** TEST FOR REWIND STATUS (BIT 1) CLEARED *****

SCOPE
BIT #2,0MTS
BEQ ,+4
HLT IERROR, REWIND STATUS IS SET

***** TEST FOR WRITE LOCK (BIT 2) CLEARED *****

SCOPE
BIT #4,0MTS
BEQ ,+4
HLT IERROR, WRITE LOCK IS SET

***** TEST FOR SETTLEDOWN (BIT 3) CLEARED *****

SCOPE
BIT #10,0MTS
BEQ ,+4
HLT IERROR, SETTLEDOWN IS SET

***** TEST FOR 7 CHANNEL (BIT 4) CLEARED IF 9 CHANNEL SELECTED *****

ROR SR IIS SW0=1
BCS T7CH IYES SKIP 9 CHANNEL TEST

SCOPE
BIT #20,0MTS
BEQ ,+4
HLT IERROR, 7 CHANNEL SET WITH 9 TRACK SELECTED
BR TSR ISKIP 7 CHANNEL TEST

***** TEST FOR 7 CHANNEL (BIT 4) SET IF 7 CHANNEL SELECTED *****

T7CH: SCOPE
BIT #20,0MTS
BNE ,+4
HLT IERROR, 7 CHANNEL NOT SET

***** TEST FOR BEGINNING OF TAPE (BIT 5) SET *****

TSR1 SCOPE
SELECT
BIT #40,0MTS
BNE ,+4
HLT IERROR, BOT NOT SET (DRIVE SHOULD BE AT BOT)

***** TEST FOR SELECT/REMOTE (BIT 6) SET *****

SCOPE
BIT #100,0MTS
BNE ,+4
HLT IERROR, SELECT/REMOTE NOT SET
CLR IDYST IALLOW IDEN STATUS CHECK (PE ONLY)

***** TAPE MOTION TESTS *****

***** TEST WRITE EOF *****

INC TMTNFL ISET TAPE MOTION FLAG
SCOPE
TSTCUR ITEST CONTROLLER READY
HLT IERROR, CONTROLLER DID NOT GO READY
MIN1BC ISET BYTE COUNT TO MINUS ONE
WBUFCA

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-14

799 003504 104422			WREOF	
800 003506 1057/7 175310			TSTRA	@MTC
801 003512 100001			BPL	.+4
802 003514 104400			HLT	
803 003516 013702 001020			MOV	MTS,R2
804 003522 012703 000040			MOV	#40,R3
805 003526 012704 000005			MOV	#5,R4
806 003532 104410			TSTRGR	
807 003534 104400			HLT	
808 003536 104404			TSTCUR	
809 003540 104400			HLT	
810 003542 104400			WAITTR	
811 003544 104400			HLT	
812 003546 104445			TSTEOF	
813 003550 001001			BNE	.+4
814 003552 104400			HLT	
815 003554 005777 175244			TST	@BC
816 003560 001001			BNE	.+4
817 003562 104400			HLT	
818 003564 0227/7 014556 175234			CMP	HWBUF,BCA
819 003572 001401			BEQ	.+4
820 003574 104400			HLT	
821 003576 104414			PWRCLR	
822 003600 104446			TSTEOF	
823 003602 001401			BEQ	.+4
824 003604 104400			HLT	
825				IERROR, POWER CLEAR DID NOT CLEAR EOF (BIT 14)
826				*****
827 003606 104402			TEST REWIND FUNCTION	*****
828 003610 104404			SCOPE	
829 003612 104400			TSTCUR	
830 003614 104422			HLT	IERROR, CONTROLLER DID NOT GO READY
831 003616 104404			WREOF	IWRITE EOF = 0
832 003620 104400			TSTCUR	IERROR, CONTROLLER READY
833 003622 104424			HLT	IERROR, CONTROLLER DID NOT GO READY
834 003624 104404			REWIND	
835 003626 104400			TSTCUR	IERROR, CONTROLLER READY
836 003630 0327/7 000002 175162			HLT	IERROR, CONTROLLER DID NOT GO READY
837 003636 001001			BIT	#2,@MTS
838 003640 104400			BNE	.+4
839 003642 0060/7 175152			HLT	
840 003646 103001			ROR	@MTS
841 003650 104400			BCC	.+4
842 003652 013702 001020			HLT	IERROR, TU READY NOT = 0
843 003656 012703 000002			MOV	MTS,R2
844 003662 012704 000007			MOV	#2,R3
845 003666 104410			MOV	#7,R4
846 003670 104400			TSTRGR	
847 003672 057702 175122			HLT	
848 003676 0327/7 000010 175114			BIS	@MTS,R2
849 003704 001001			BIT	#10,@MTS
850 003706 104400			BNE	.+4
851 003710 0327/7 000040 175102			HLT	
852 003716 001001			BIT	#40,@MTS
853 003720 104400			BNE	.+4
854 003722 013702 001020			HLT	IERROR, BOT (BIT 5) NOT = 1 WHEN SDWN (BIT 3) SET
855 003726 012703 000010			MOV	MTS,R2
			MOV	#10,R3
				IASSIGN STATUS REG TO BE TESTED
				IMASK SETTLEDOWN STATUS

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-15

856 003732 012704 000001
857 003736 104410
858 003740 104400
859 003742 0060/7 175052
860 003746 103401
861 003750 104400
862 003752 104414
863 **I TEST REWIND WHILE AT BOT TO BE IGNORED**
864 003754 104402
865 003756 104424
866 003760 104404
867 003762 104400
868 003764 0057/7 175030
869 003770 100001
870 003772 104400
871 003774 104414
872 *****
873 **I SPACE OVER EOF TEST**
874 **I TEST SPACE FORWARD TO STOP ON FIRST EOF**
875 003776 104402
876 004000 104424
877 004002 104400
878 004004 104400
879 004006 0127/7 177776 175010
880 004014 104436
881 004016 104426
882 004020 1057/7 174776
883 004024 100001
884 004026 104400
885 004030 104404
886 004032 104400
887 004034 104416
888 004036 001001
889 004040 104400
890 004042 0057/7 174754
891 004046 100401
892 004050 104410
893 004052 0227/7 177777 174744
894 004060 001401
895 004062 104400
896 004064 0227/7 014722 174734
897 004072 001401
898 004074 104400
899 004076 104414
900 004100 104446
901 004102 001401
902 004104 104400
903 **I TEST SPACE REVERSE TO STOP IN FIRST EOF**
904 004106 0127/7 177776 174710
905 004114 104436
906 004116 104400
907 004120 104404
908 004122 104400
909 004124 104446
910 004126 001001
911 004130 104400
912 004132 0327/7 000040 174660

MOV #1,R4 **I TEST REG FOR RESET**
TSTRGR
HLT **IERROR, SETTLEDOWN STATUS DID NOT RESET**
ROR @MTS
BCS .+4
HLT **IERROR, TU READY NOT SET AFTER SDWN CLEARED ON REWIND**
PWRCLR
SCOPE
REWIND
TSTCUR
HLT **I TEST CONTROLLER READY**
TST @MTS
BPL .+4
HLT **IERROR, CONTROLLER DID NOT GO READY**
PWRCLR
TST @MTS
BPL .+4
HLT **IERROR, ILC(BIT15)=1 AFTER REWIND WHILE AT BOT**
PWRCLR

SCOPE
REWIND
WAITIR
HLT **IERROR, TAPE UNIT READY DID NOT GO SET**
MOV #2,ABC
RBUFCA
SPACEB
TSTB @MTC
BPL .+4
HLT **IERROR, CONTROLLER DID NOT GO BUSY**
TSTCUR
HLT **I TEST CONTROLLER READY**
TSTEOF
BNE .+4
HLT **IERROR, CONTROLLER DID NOT GO READY**
TSTEOF
BNE .+4
HLT **IERROR, EOF (BIT 14) NOT =1**
TST @MTC
BMI .+4
HLT **IERROR, (BIT 15) OF COMMAND REGISTER NOT=1 WITH EOF STATUS**
CMP #-1,ABC
BEQ .+4
HLT **IERROR, BYTE COUNT SHOULD HAVE INCREMENTED FROM ZERO**
CMP #RBUF,ACA
BEQ .+4
HLT **IERROR, CURRENT ADDRESS REGISTER SHOULD NOT INCR**
PWRCLR
TSTEOF
BEQ .+4
HLT **IERROR, PWR CLEAR DIDN'T CLEAR EOF (BIT 14)**
TSTEOF
BNE .+4
HLT **ITEST CONTROLLER READY**
BIT #40,@MTS
BNE .+4
HLT **IERROR, EOF (BIT 14) NOT =1**

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-16

913 004140 001401
914 004142 104400
915 004144 0227/7 177777 174652
916 004152 001401
917 004154 104400
918 004156 0227/7 014722 174642
919 004164 001401
920 004166 104400
921 004170 104414
922 004172 104424
923 004174 104450
924 004176 104400
925
926
927
928
929 004200 104402
930 004202 104440
931 004204 104454
932 004206 104416
933 004210 104404
934 004212 104400
935 004214 0327/7 000004 177570
936 004222 001412
937 004224 0057/7 001040
938 004230 001007
939 004232 0052/7 001040
940 004236 0327/7 001000 174566
941 004244 001001
942 004246 104400
943 004250 0057/7 174550
944 004254 001401
945 004256 104400
946 004260 0227/7 014557 174540
947 004266 001401
948 004270 104400
949 004272 104414
950
951
952
953
954 004274 104402
955 004276 104424
956 004300 104450
957 004302 104400
958 004304 0327/7 000040 174506
959 004312 001001
960 004314 104400
961 004316 104440
962 004320 104436
963 004322 104420
964 004324 013702 001020
965 004330 012703 000040
966 004334 012704 000005
967 004340 104410
968 004342 104400
969 004344 104404

BEQ .+4
HLT
CMP #1,0BC
BEQ .+4
HLT
CMP #RBUF,0CA
BEQ .+4
HLT
PWRCLR
REWIND
WAITTR
HLT

IWRITE 1 BYTE RECORD FROM BOT
IBOT (BIT 5) SHOULD CLEAR, CU READY SHOULD SET, BYTE COUNT AND
CURRENT ADDRESS SHOULD INCREMENT
SCOPE
MIN1BC
WBUFCA
WRITE
TSTCUR
HLT
BIT #4,SR
BEQ IDBYP
TST IDTST
BNE IDBYP
INC IDTST
BIT #1000,0MTRD ITEST FOR IDEN STATUS
BNE .+4
HLT
IDBYP: TST 0BC
BEQ .+4
HLT
CMP #WBUF+1,0CA ITEST CURRENT MEMORY ADDRESS TO COUNT
BEQ .+4
HLT
PWRCLR

IREAD 1 BYTE RECCOND FROM BOT
IBOT (BIT 5) SHOULD CLEAR, CU READY SHOULD SET, BYTE COUNT AND
CURRENT ADDRESS SHOULD INCREMENT
SCOPE
REWIND
WAITTR
HLT
BIT #40,0MTS
ONE .+4
HLT
MIN1BC
RBUFCA
READ
MOV MTS,R2
MOV #40,R3
MOV #5,R4
TSTRGR
HLT
TSTCUR

IERROR, BOT=1, SHOULD NOT HAVE REACHED BOT.
IERROR, BYTE COUNT SHOULD HAVE INCREMENTED FROM ZERO
IERROR, CURRENT ADDRESS REGISTER SHOULD NOT INCR.
IERROR, TAPE UNIT READY DID NOT GO TRUE

ISET BYTE COUNT TO MINUS ONE
IERROR, CONTROLLER DID NOT GO READY
ITEST IF PHASE ENCODED
IBYPASS IDEN TEST IF NRZI
IIS THIS FIRST OPEN FROM BOT
INO
ITEST FOR IDEN STATUS
IERROR, IDEN STATUS NOT SET
ITEST BYTE COUNT TO = 0
IERROR, BYTE COUNT DIDN'T INCREMENT
ITEST CURRENT MEMORY ADDRESS TO COUNT
IERROR, CURRENT MEMORY ADDRESS DIDN'T INCREMENT

ISET BYTE COUNT TO MINUS ONE
IERROR, TAPE UNIT READY DID NOT GO SET
IERROR, DRIVE NOT AT BOT
ISET BYTE COUNT TO MINUS ONE
IASSIGN STATUS REG TO BE TESTED
IMASK BOT
ITEST REG FOR RESET
IERROR, BOT (BIT 5) NOT CLEARED
ITEST CONTROLLER READY

,MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-17

970 004346 104400
971 004350 005777 174450
972 004354 001401
973 004356 104400
974 004360 022777 014723 174440
975 004366 001401
976 004370 104400
977 004372 104414
978 004374 104424
979 004376 104400
980 004400 104400
981
982
983 004402 104402
984 004404 104424
985 004406 104434
986 004410 104416
987 004412 104404
988 004414 104400
989 004416 022777 014561 174402
990 004424 001401
991 004426 104400
992 004430 005777 174370
993 004434 001401
994 004436 104400
995 004440 005777 174356
996 004444 100001
997 004446 104400
998 004450 104414
999
1000
1001 004452 104402
1002 004454 104424
1003 004456 104400
1004 004460 104400
1005 004462 104436
1006 004464 104424
1007 004466 104400
1008 004470 104404
1009 004472 104400
1010 004474 022777 014725 174324
1011 004502 001401
1012 004504 104400
1013 004506 005777 174312
1014 004512 001401
1015 004514 104400
1016 004516 005777 174300
1017 004522 100001
1018 004524 104400
1019 004526 104414
1020
1021
1022
1023
1024 004530 104402
1025 004532 104404
1026 004534 104400

HLT IERROR, CONTROLLER DID NOT GO READY
TST @BC !TEST BYTE COUNT TO =0
BEQ .+4
HLT IERROR, BYTE COUNT DIDN'T INCREMENT
CMP #RBUF+1,@CA !TEST CURRENT MEMORY ADDRESS TO COUNT
BEQ .+4
HLT IERROR, CURRENT MEMORY ADDRESS DIDN'T INCREMENT
PWRCLR
REWIND
WAITTR
HLT IERROR, TAPE UNIT READY DID NOT GO TRUE

!TEST WRITE A 3 BYTE RECORD
SCOPE
MIN3BC !SET BYTE COUNT TO MINUS THREE
WBUFCA
WRITE
TSTCUR !TEST CONTROLLER READY
HLT IERROR, CONTROLLER DID NOT GO READY
CMP #WBUF+3,@CA
BEQ .+4
HLT IERROR, CURRENT MEMORY ADDRESS DIDN'T INCREMENT
TST @BC
BEQ .+4
HLT IERROR, BYTE COUNT DIDN'T INCREMENT TO 0
TST @MTC
BPL .+4
HLT IERROR, BIT 15 SET IN COMMAND REGISTER
PWRCLR

!TEST READ A 3 BYTE RECORD
SCOPE
REWIND
WAITTR
HLT IERROR, TAPE UNIT READY DID NOT GO SET
RBUFCA
MIN3BC !SET BYTE COUNT TO MINUS THREE
READ
TSTCUR !TEST CONTROLLER READY
HLT IERROR, CONTROLLER DID NOT GO READY
CMP #RBUF+3,@CA
BEQ .+4
HLT IERROR, CURRENT MEMORY ADDRESS DIDN'T INCREMENT
TST @BC
BEQ .+4
HLT IERROR, BYTE COUNT DIDN'T INCREMENT TO 0
TST @MTC
BPL .+4
HLT IERROR, BIT 15 SET IN COMMAND REGISTER
PWRCLR

!TEST SPACE FORWARD & REVERSE
!FIRST WRITE 2 RECORDS FOLLOWED BY EOF
!SPACE FORWARD 2 RECORDS, SHOULD NOT REACH EOF
SCOPE
TSTCUR !TEST CONTROLLER READY
HLT IERROR, CONTROLLER DID NOT GO READY

.MAIN. MACRO V06-03 05-NOV-74 12139 PAGE 1-18

1027 004536 104424	REWIND	I TEST CONTROLLER READY
1028 004540 104404	TSTCUR	I ERROR, CONTROLLER DID NOT GO READY
1029 004542 104400	HLT	I SET BYTE COUNT TO MINUS THREE
1030 004544 104442	MIN3BC	
1031 004546 104434	WBUFCA	
1032 004550 104416	WRITE	
1033 004552 104404	TSTCUR	I TEST CONTROLLER READY
1034 004554 104400	HLT	I ERROR, CONTROLLER DID NOT GO READY
1035 004556 104442	MIN3BC	I SET BYTE COUNT TO MINUS THREE
1036 004560 104434	WBUFCA	
1037 004562 104416	WRITE	
1038 004564 104404	TSTCUR	I TEST CONTROLLER READY
1039 004566 104400	HLT	I ERROR, CONTROLLER DID NOT GO READY
1040 004570 104442	WREOF	
1041 004572 104404	TSTCUR	I TEST CONTROLLER READY
1042 004574 104400	HLT	I ERROR, CONTROLLER DID NOT GO READY
1043 004576 104424	REWIND	
1044 004600 104404	TSTCUR	I TEST CONTROLLER READY
1045 004602 104400	HLT	I ERROR, CONTROLLER DID NOT GO READY
1046 004604 012777 177776 174212	MOV #2,ABC	
1047 004612 104426	SPACEF	
1048 004614 104404	TSTCUR	I TEST CONTROLLER READY
1049 004616 104400	HLT	I ERROR, CONTROLLER DID NOT GO READY
1050 004620 104446	TSTEOF	
1051 004622 001401	BEQ .+4	
1052 004624 104400	HLT	I ERROR, EOF (BIT 14)=1, SHOULDN'T SPACE THIS FAR
1053 004626 0057/7 174172	TST ABC	I TEST BYTE COUNT TO =0
1054 004632 001401	BEQ .+4	
1055 004634 104400	HLT	I ERROR, BYTE COUNT DIDN'T INCREMENT TO ZERO
1056	INOW SPACE FORWARD TO EOF	
1057 004636 0050/7 174162	CLR ABC	
1058 004642 104426	SPACEF	
1059 004644 104404	TSTCUR	I TEST CONTROLLER READY
1060 004646 104400	HLT	I ERROR, CONTROLLER DID NOT GO READY
1061 004650 104446	TSTEOF	
1062 004652 001001	BNE .+4	
1063 004654 104400	HLT	I ERROR, EOF NOT =1
1064 004656 0227/7 000001 174140	CMP #1,ABC	
1065 004664 001401	BEQ .+4	
1066 004666 104400	HLT	I ERROR BYTE COUNT SHOULD =0
1067	INOW SPACE REVERSE 2 RECORDS (FIRST MUST BACKSPACE OVER EOF)	
1068 004670 104442	MIN3BC	I SET BYTE COUNT TO MINUS THREE
1069 004672 104434	WBUFCA	
1070 004674 104430	SPACEB	
1071 004676 104404	TSTCUR	I TEST CONTROLLER READY
1072 004700 104400	HLT	I ERROR, CONTROLLER DID NOT GO READY
1073 004702 104446	TSTEOF	
1074 004704 001001	BNE .+4	
1075 004706 104400	HLT	I ERROR, EOF (BIT 14) NOT =1 AFTER BACKSPACE OVER EOF
1076 004710 104430	SPACLB	I RESUME BACKSPACE
1077 004712 104404	TSTCUR	I TEST CONTROLLER READY
1078 004714 104400	HLT	I ERROR, CONTROLLER DID NOT GO READY
1079 004716 105777 174102	TSTB ABC	
1080 004722 001401	BEQ .+4	
1081 004724 104400	HLT	I ERROR, BYTE COUNT NOT=0
1082 004726 0227/7 014556 174072	CMP #WBUF,ACA	
1083 004734 001401	BEQ .+4	

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-19

1084 004736 104400	HLT	IERROR, CURRENT MEMORY ADDRESS SHOULDN'T COUNT 0
1085 004740 032777 000040 174052	BIT #40,0MTS	
1086 004746 001401	BEQ .+4	
1087 004750 104400	HLT	IERROR, BACKSPACE SHOULD NOT HAVE REACHED BOT
1088 004752 104414	PWRCLR	
1089	*****	*****
1090	I TEST READ TO FIND EOF	*****
1091 004754 104412	SCOPE	
1092 004756 104404	TSTCUR	I TEST CONTROLLER READY
1093 004760 104400	HLT	IERROR, CONTROLLER DID NOT GO READY
1094 004762 104422	WEOF	
1095 004764 104404	TSTCUR	I TEST CONTROLLER READY
1096 004766 104400	HLT	IERROR, CONTROLLER DID NOT GO READY
1097 004770 104430	SPACEB	
1098 004772 104404	TSTCUR	I TEST CONTROLLER READY
1099 004774 104400	HLT	IERROR, CONTROLLER DID NOT GO READY
1100 004776 005057 014722	CLR RBUF	
1101 005002 012777 177771 174014	MOV #-7,ABC	
1102 005010 104436	RBUFCA	
1103 005012 104420	READ	
1104 005014 104404	TSTCUR	I TEST CONTROLLER READY
1105 005016 104400	HLT	IERROR, CONTROLLER DID NOT GO READY
1106 005020 032777 040000 173772	BIT #40000,0MTS	
1107 005026 001001	BNE .+4	
1108 005030 104400	HLT	IERROR, EOF (BIT 14) NOT - DURING A READ OPERATION
1109 005032 032757 000004 177570	BIT #4,SR	IIS TAPE PHASE ENCODED
1110 005040 001024	BNE TRLE	IYES
1111 005042 006037 177570	ROR SR .	IIS 7 CHANNEL SELECTED
1112 005046 103406	BCS TREOF	IYES
1113 005050 022757 011423 014722	CMP #11423,RBUF	
1114 005056 001401	BEQ .+4	
1115 005060 104400	HLT	IERROR, EOF (23) NOT TRANSFERRED FOR 2 BYTES DURING READ
1116 005062 000413	BR TRLE	
1117 005064 032757 000010 177570	TREOF: BIT #10,SR	IIS CONTROLLER CONFIGURED FOR IBM
1118 005072 001402	BEQ .+6	INO
1119 005074 000357 014722	SWAB RBUF	IYES
1120 005100 022757 000377 014722	CMP #377,RBUF	
1121 005106 001401	BEQ .+4	
1122 005110 104400	HLT	IERROR, EOF (17-7 CHANNEL) NOT XFERRED DURING READ
1123	*****	*****
1124	I TEST RECORD LENGTH ERROR	*****
1125 005112 104414	TRLE: PWRCLR	
1126 005114 104412	SCOPE	
1127 005116 104404	TSTCUR	I TEST CONTROLLER READY
1128 005120 104400	HLT	IERROR, CONTROLLER DID NOT GO READY
1129 005122 012757 177777 014556	MOV #-1,WBUF	
1130 005130 012757 177777 014560	MOV #-1,WBUF+2	
1131 005136 104444	MIN4BC	ISET BYTE COUNT TO MINUS FOUR
1132 005140 104434	WBUFCA	
1133 005142 104416	WHITE	
1134 005144 104404	TSTCUR	I TEST CONTROLLER READY
1135 005146 104400	HLT	IERROR, CONTROLLER DID NOT GO READY
1136 005150 104440	MIN1BC	ISET BYTE COUNT TO MINUS ONE
1137 005152 104400	SPACEB	
1138 005154 104404	TSTCUR	I TEST CONTROLLER READY
1139 005156 104400	HLT	IERROR, CONTROLLER DID NOT GO READY
1140 005160 005057 014722	CLR RBUF	

,MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-20

```
1141 005164 005037 014724      CLR    RBUF+2
1142 005170 104442      MIN3BC      !SET BYTE COUNT TO MINUS THREE
1143 005172 104446      RBUFCA
1144 005174 104440      READ
1145 005176 104444      TSTCUR      !TEST CONTROLLER READY
1146 005200 104440      HLT      !ERROR, CONTROLLER DID NOT GO READY
1147 005202 0327/7 001000 173610      BIT    #1000,8MTS
1148 005210 0010U1      BNE    .+4
1149 005212 104440      HLT      !ERROR, RECORD LENGTH ERROR (BIT 9) NOT =1
1150 005214 0057/7 173602      TST    #MTC
1151 005220 1004U1      BMI    .+4
1152 005222 104440      HLT      !ERROR, BIT 15 NOT =1 WHEN RLS (BIT 9) =1
1153 005224 0227/7 177777 014722      CMP    #-1,RBUF
1154 005232 0014U1      BEQ    .+4
1155 005234 104440      HLT      !ERROR, BYTES 1+2 NOT READ PROPERLY
1156 005236 0327/7 000010 177570      BIT    #10,SR      !IS CONTROLLER CONFIGURED FOR IBM
1157 005244 0014U2      BLQ    .+6      INO
1158 005246 0003/7 014724      SWAB   RBUF+2      YES
1159 005252 0227/7 000377 014724      CMP    #377,RBUF+2
1160 005260 0014U1      BEQ    .+4
1161 005262 104440      HLT      !ERROR, BYTE 3 READ ERROR OR SOMETHING XFERRED TO
1162                           IIS DEC/IBM SWITCH IN CORRECT POSITION?
1163 005264 104414      PWRCLR
1164 005266 0327/7 001000 173524      BIT    #1000,8MTS
1165 005274 0014U1      BEQ    .+4
1166 005276 104440      HLT      !ERROR PWR CLEAR DIDN'T CLR RLE (BIT 9)
1167
1168
1169      !TEST ILLEGAL COMMAND TO =1 ON A DAT0 OR DAT0B TO MTC WITH CU READY=0
1170 005300 104402      SCOPE
1171 005302 104404      TSTCUR      !TEST CONTROLLER READY
1172 005304 104400      HLT      !ERROR, CONTROLLER DID NOT GO READY
1173 005306 104442      MIN3BC      !SET BYTE COUNT TO MINUS THREE
1174 005310 104404      WRUFCA
1175 005312 104422      WREOF
1176 005314 104424      REWIND
1177 005316 104404      TSTCUR      !TEST CONTROLLER READY
1178 005320 104440      HLT      !ERROR, CONTROLLER DID NOT GO READY
1179 005322 0057/7 173472      TST    #MTS
1180 005326 1004U1      BMI    .+4
1181 005330 104440      HLT      !ERROR, ILLEGAL COMMAND (BIT 15) NOT =1
1182 005332 0057/7 173464      TST    #MTC
1183 005336 1004U1      BMI    .+4
1184 005340 104440      HLT      !ERROR, (BIT 15) NOT =1 WITH ILLEGAL COMMAND
1185 005342 104440      WAITTR
1186 005344 104440      HLT      !ERROR, TAPE UNIT READ DID NOT GO SET
1187 005346 104414      PWRCLR
1188
1189      !TEST ILLEGAL COMMAND BY ISSUING A COMMAND TO TYPE A UNIT WITH SELECT RE
1190 005350 104402      SCOPE
1191 005352 0137U0 001106      MOV    TCSL,RO
1192 005356 0327U0 002000      BIT    #2000,RO      !MASK UNIT SELECT MSB
1193 005362 0010U4      BNE    .+12      !IS UNIT SELECT MSB SET?
1194 005364 0427/7 010000 005414      BIC    #10000,CINST INO, MAKE CINST A BIC INSTRUCTION
1195 005372 0004U3      BR     .+10
1196 005374 0527/7 010000 005414      BIS    #10000,CINST YES, MAKE CINST A BIS INSTRUCTION
1197 005402 0137/7 001106 001044      MOV    TCSL,TEMP
```

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-21

1198 005410	105257	001045			INCB	TEMP+1	
1199 005414	042757	002000	001044	CINST:	BIC	#2000,TEMP	I CAN BE A BIC OR BIS INSTRUCTION
1200 005422	013777	001044	173372		MOV	TEMP,@MTC	ISELECT OFF LINE UNIT
1201 005430	104404				TSTCUR		ITEST CONTROLLER READY
1202 005432	104400				HLT		IEERROR, CONTROLLER DID NOT GO READY
1203 005434	006077	173360			ROR	@MTS	
1204 005440	103001				BCC	.+4	
1205 005442	104400				HLT		IEERROR NON DESIGNATED TAPE UNIT ON LINE
1206 005444	032777	000100	173346		BIT	#100,@MTS	
1207 005452	001401				BEQ	.+4	
1208 005454	104400				HLT		IEERROR, SELECT REMOTE (BIT 6) NOT =0 WITH NONEXISTANT DRIVE
1209 005456	052777	000017	173356		BIS	#17,@MTC	ISSUE REWIND
1210 005464	104404				TSTCUR		ITEST CONTROLLER READY
1211 005466	104400				HLT		IEERROR, CONTROLLER DID NOT GO READY
1212 005470	005777	173324			TST	@MTS	
1213 005474	100401				BMI	.+4	
1214 005476	104400				HLT		IEERROR, ILLEGAL COMMAND (BIT 15) NOT =1
1215 005500	104414				PWKCLR		
1216 005502	005777	173312			TST	@MTS	
1217 005506	100001				BPL	.+4	
1218 005510	104400				HLT		IEERROR, POWER CLEAR DIDN'T CLEAR ILC (BIT 15)
1219					***** TEST BACKSPACE WHILE AT BOT TO BE IGNORED *****		
1220					SCOPE		
1221 005512	104402				REWIND		
1222 005514	1044<4				TSTCUR		ITEST CONTROLLER READY
1223 005516	104404				HLT		IEERROR, CONTROLLER DID NOT GO READY
1224 005520	104400				WAITTR		
1225 005522	104400				HLT		IEERROR, TAPE UNIT READY DID NOT GO SET
1226 005524	104400				MIN1BC		ISET BYTE COUNT TO MINUS ONE
1227 005526	104440				SPACEB		
1228 005530	104450				TSTCUR		ITEST CONTROLLER READY
1229 005532	104404				HLT		IEERROR, CONTROLLER DID NOT GO READY
1230 005534	1044<0				TST	@MTS	
1231 005536	005777	173256			BPL	.+4	
1232 005542	100001				HLT		IEERROR, ILC (BIT 15) =1 AFTER BACKSPACE WHILE AT BOT
1233 005544	104400				BIT	#40,@MTS	
1234 005546	032777	000040	173244		BNE	.+4	
1235 005554	001001				HLT		IEERROR, NOT AT BOT AFTER BACKSPACE
1236 005556	104400				***** TEST BAD TAPE ERROR (BIT 8) TO =1 *****		
1237					***** TEST BAD TAPE ERROR (BIT 8) TO =1 *****		
1238					***** USE MAINTENANCE BIT 13 OF MTRD TO SET PREMATURE CU READY TO CAUSE BAD TAPE ERROR *****		
1239					SCOPE		
1240 005560	104402				BIT	#4,SR	I IS TAPE PHASE ENCODED
1241 005562	032757	000004	177570		BNE	NXMT	I YES
1242 005570	001041				MIN4BC		ISET BYTE COUNT TO MINUS FOUR
1243 005572	104444				WUUFCA		
1244 005574	104434				TSTCUR		ITEST CONTROLLER READY
1245 005576	104404				HLT		IEERROR, CONTROLLER DID NOT GO READY
1246 005600	104400				WRITE		
1247 005602	104416				MOV	BC,R2	I ASSIGN BYTE COUNT REG TO BE TESTED
1248 005604	013702	001024			MOV	H-1,R3	I TEST ALL OF REG
1249 005610	012703	177777			MOV	#1,R4	
1250 005614	012704	000001			TSTRGR		ITEST REG FOR RESET
1251 005620	1044<0				HLT		IEERROR, BYTE COUNT DID NOT GO TO ZERO
1252 005622	104400				BIS	#20000,@MTRD	ISET PREMATURE CU READY
1253 005624	052777	020000	173200		WAITTR		
1254 005632	104400						

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-22

1255 005634 104400 HLT IERROR, TAPE UNIT READ DID NOT GO SET
1256 005636 0327/7 000400 173154 BIT #400,AMTS
1257 005644 001001 BNE .+4
1258 005646 104400 HLT IERROR, BAD TAPE ERROR (BIT 8) NOT =1
1259 005650 0057/7 173146 TST @MTC
1260 005654 100401 BMI .+4
1261 005656 104400 HLT IERROR, BIT 15 NOT =1 WITH BTE=1
1262 005660 104414 PWRCLR
1263 005662 0327/7 000400 173130 BIT #400,AMTS
1264 005670 001401 BEQ .+4
1265 005672 104400 HLT IERROR, POWER CLEAR DIDN'T CLEAR BTE (BIT 8)
1266 *****
1267 ITEST NON-EXISTENT MEMORY (BIT 7) AND ERROR (BIT 15) TO =1.
1268 005674 104402 NXMT: SCOPE
1269 005676 104400 MIN1HC ISET BYTE COUNT TO MINUS ONE
1270 005700 012777 173000 173120 MOV #173000,ACA INIT CURRENT MEMORY ADDRESS FOR NON EXISTENT MEM
1271 005706 104404 TSTCUR ITEST CONTROLLER READY
1272 005710 104400 HLT IERROR, CONTROLLER DID NOT GO READY
1273 005712 0127/7 000060 173102 MOV #60,AMTC ISLT EA=5
1274 005720 053777 001116 173074 BIS TCWT,AMTC IWRITE, EA=5, 800 BPI, GO
1275 005726 104404 TSTCUR ITEST CONTROLLER READY
1276 005730 104400 HLT IERROR, CONTROLLER DID NOT GO READY
1277 005732 0327/7 000200 173060 BIT #200,AMTS
1278 005740 001001 BNE .+4
1279 005742 104400 HLT IERROR, NON-EXISTENT MEMORY (BIT 7) NOT =1
1280 005744 0057/7 173052 TST @MTC SEE NOTICE AT BACK OF PAPERWORK
1281 005750 100401 BMI .+4
1282 005752 104400 HLT IERROR, (BIT 15) NOT =1 WITH NXN (BIT 7) =1
1283 005754 104414 PWRCLR
1284 005756 0327/7 000600 173034 BIT #600,AMTS
1285 005764 001401 BEQ .+4
1286 005766 104400 HLT IERROR, POWER CLEAR DIDN'T CLEAR BTE (BIT 8) OR
1287 **** INTERRUPT TESTS ****
1288 *****
1289 ITEST FOR PROCESSOR PRIORITY LEVEL MTPM TO ALLOW INTERRUPT
1290 005770 104402 SCOPE
1291 005772 012706 000776 MOV #BUFF,SP ISET UP STACK
1292 005776 013737 00110 177776 MOV MTPM,CC ISET PRIORITY LEVEL
1293 006004 0137/7 00110 173004 MOV MTPM,AMTVS ISLT INTERRUPT VECTOR C
1294 006012 0127/7 006040 172774 MOV #IR1,AMTVIINIT INTERRUPT RETURN
1295 006020 012777 000100 172774 MOV #100,AMTC ISET INT ENABLE
1296 006026 005777 172770 TST @MTC IWAIT FOR INTERRUPT
1297 006032 0050/7 172764 CLR @MTC IWAITED TOO LONG WITHOUT INTERRUPT, CLEAR INT ENABLE
1298 006036 104400 HLT IERROR, INT ENABLE FAILED TO CAUSE INT
1299 *****
1300 ITEST FOR PROCESSOR PRIORITY LEVEL MTP TO SUPPRESS INTERRUPT
1301 006040 104414 IH1: PWRCLR
1302 006042 104402 SCOPE
1303 006044 012706 000776 MOV #BUFF,SP ISET UP STACK
1304 006050 013737 001104 177776 MOV MTP,CC ISET PROCESSOR PRIORITY TO MAG TAPE LEVEL
1305 006056 0137/7 001104 172732 MOV MTP,AMTVS ISET INTERRUPT VECTOR C
1306 006064 013737 001104 000036 MOV MTP,36
1307 006072 012777 006114 172714 MOV #IR2,AMTVIINIT INTERRUPT RETURN
1308 006100 012777 000100 172714 MOV #100,AMTC ISET INIT ENABLE
1309 006106 005777 172710 TST @MTC IWAIT FOR INTERRUPT
1310 006112 000401 BR IR2A
1311 006114 104400 IR21 HLT IERROR, SHOULDN'T HAVE INTERRUPT WITH PROCESSOR

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-23

1312
1313
1314
1315 006116 104414 *****
1316 006120 104402 TEST CU READY TO CAUSE INTERRUPT WITH INT ENABLE 1
1317 006122 012706 000776 INT ENABLE (BIT6) AND GO (BIT 0) SET AT SAME TIME SHOULDN'T CAUSE INTERRUPT
1318 006126 013757 001110 177776 IR2A: PWRCLR
1319 006134 013757 001110 001016 SCOPE
1320 006142 013757 001110 000036 MOV #BUFF,SP ISET UP STACK
1321 006150 012777 006214 172636 MOV MTPM,CC ISET PRIORITY LEVEL
1322 006156 104432 MOV MTPM,MTVS ISET INTERRUPT VECTOR C
1323 006160 104404
1324 006162 104400
1325 006164 013700 001120
1326 006170 052700 000100
1327 006174 010077 172622
1328 006200 104404
1329 006202 000411
1330 006204 005777 172612
1331 006210 104400
1332 006212 000406
1333 006214 105777 172602 IR3B
1334 006220 100401
1335 006222 104400
1336 006224 000401
1337 006226 104400
1338 006230 104414
1339 *****
1340 TEST REWIND TO CAUSE TWO INTERRUPTS
1341 1ST AFTER CU READY AND 2ND AFTER REWIND COMPLETE
1342 006232 104402 SCOPE
1343 006234 012706 000776 MOV #BUFF,SP ISET UP STACK
1344 006240 013757 001110 177776 MOV MTPM,CC ISET PRIORITY LEVEL
1345 006246 013757 001110 000036 MOV MTPM,36
1346 006254 012777 006326 172532 MOV #IR4,AMTV
1347 006262 104432
1348 006264 104404
1349 006266 104400
1350 006270 104422
1351 006272 104404
1352 006274 104400
1353 006276 013700 001130
1354 006302 052700 000100
1355 006306 010077 172510
1356 006312 104404
1357 006314 000416
1358 006316 005777 172500 IR4B
1359 006322 104400
1360 006324 000413
1361 006326 105777 172470
1362 006332 100401
1363 006334 104400
1364 006336 032777 000040 172454
1365 006344 100001
1366 006346 104400
1367 006350 000401
1368 006352 104400 *****
TEST CONTROLLER READY
TERROR, CONTROLLER DID NOT GO READY
IWRITE EOF, INT ENABLE GO
TEST CONTROLLER READY
IWAIT FOR INTERRUPT
TERROR, NO INTERRUPT AT COMPLETION OF WRITE
IERROR, INTERRUPT NOT CAUSED BY CU READY
TERROR, CONTROLLER DID NOT GO READY
IERROR, CONTROLLER DID NOT GO READY
PWRCLR

TEST REWIND TO CAUSE TWO INTERRUPTS
1ST AFTER CU READY AND 2ND AFTER REWIND COMPLETE
TEST CONTROLLER READY
TERROR, CONTROLLER DID NOT GO READY
WREOF
TEST CONTROLLER READY
TERROR, CONTROLLER DID NOT GO READY
TEST CONTROLLER READY
TERROR, CONTROLLER DID NOT GO READY
MOV TCRW,RO
BIS #100,RO
MOV RO,AMTC
TSTCUR
BR IR4A-2
TST AMTC
HLT
BR IR4A
TSTB AMTC
BMI +4
MOV #40,AMTS
BPL +4
HLT
IR4A
HLT
IERROR, INTERRUPT NOT CAUSED BY CU READY
IINT ENABLE, REWIND, GO
TEST CONTROLLER READY
IWAIT FOR INTERRUPT
TERROR, NO INT AFTER ISSUING REWIND
IERROR, CONTROLLER DID NOT GO READY
IERROR, CONTROLLER DID NOT GO READY
IERROR, SHOULDN'T BE AT BOT SO SOON AFTER 1ST INTERRUPT
IERROR, CONTROLLER DID NOT GO READY

.MAIN. MACRO V06-03 05-NOV-74 12139 PAGE 1-24

```
1369 006354 0127// 006376 172432 IR4A: MOV WIR5,AMTV
1370 006362 104450 WAITTR
1371 006364 000412 BR IR5A-2
1372 006366 0057// 172430 TST AMTC IWAIT FOR INTERRUPT
1373 006372 104400 HLT TERROR, NO INT AT END OF REWIND
1374 006374 000407 BR IR5A
1375 006376 0327// 000040 172414 IR5? BIT #40,AMTS
1376 006404 001901 BNE +4
1377 006406 104400 HLT IERROR, 2ND INTERRUPT NOT CAUSED BY REWIND COMPLETE
1378 006410 000401 BR IR5A
1379 006412 104400 HLT TERROR, TAPE UNIT READ DID NOT GO SET
1380 006414 104414 IR5A: PWRCLR
1381 **** DATA TRANSFER TESTS ****
1382 ***** IWRITE RECORD, BACKSPACE, READ RECORD ****
1383 ***** IREPEAT FOR ALL BYTE PATTERNS FROM 0 THRU ALL DATA PATTERNS ****
1384
1385 006416 104402 SCOPE
1386 006420 012706 000776 MOV #BUFF,SP ISET UP STACK
1387 006424 005037 177776 CLR CC ISET PROCESSORPRIORITY TO 0
1388 006430 005037 000036 CLR 36 ISET TRAP PRIORITY TO
1389 006434 0127// 000340 001016 MOV #340,MTVS ISET INTERRUPT VECTOR C
1390 006442 0127// 011450 172344 MOV #MTTRP,AMTV ISET UP ILLEGAL INTERRUPT RETURN
1391 006450 005037 001044 WBR5: CLR TEMP IINITIALIZE DATA PATTERN
1392 006454 012700 014556 WBR5: MOV #WBUF,RO
1393 006460 013720 001044 MOV TEMP, (R0)+ ISET UP WHITE BUFFER
1394 006464 022700 014602 CMP #WBUF+24,RO
1395 006470 0013// BNE WBR+4
1396 006472 0127// 177754 172324 MOV #-20,,ABC1INIT BYTE COUNT
1397 006500 104434 WBUFCA
1398 006502 104404 TSTCUR ITEST CONTROLLER READY
1399 006504 104400 HLT TERROR, CONTROLLER DID NOT GO READY
1400 006506 104416 WRITE
1401 006510 104404 TSTCUR ITEST CONTROLLER READY
1402 006512 104400 HLT TERROR, CONTROLLER DID NOT GO READY
1403
1404 006514 012700 014556 I(AFTER WRITE, CHECK WRITE BUFFER TO MAKE CERTAIN IT WASN'T MODIFIED)
1405 006520 0237// 001044 WBR1: MOV #WBUF,RO
1406 006524 001401 WBR1: CMP TEMP, (R0)+
1407 006526 104400 BEQ +4
1408 006530 022700 014602 HLT IERROR, DATA BUFFER MODIFIED DURING WRITE
1409 006534 0013// CMP #WBUF+24,RO
1410
1411 006536 104440 BNE WBR1
1412 006540 104450 IBACKSPACE 1 RECORD
1413 006542 104404 MINIBC ISET BYTE COUNT TO MINUS ONE
1414 006544 104400 SPACEB
1415 006546 012700 014722 TSTCUR ITEST CONTROLLER READY
1416 006552 005020 WBR2: HLT TERROR, CONTROLLER DID NOT GO READY
1417 006554 022700 014746 MOV #RBUF,RO
1418 006560 0013// WBR2: CLR (R0)+ ICLEAR READ BUFFER
1419
1420 006562 012777 177754 172234 WIREAD RECORD
1421 006570 104456 CMP #RBUF+24,RO
1422 006572 104420 BNE WBR2
1423 006574 104404 TSTCUR ITEST CONTROLLER READY
1424 006576 104400 HLT TERROR, CONTROLLER DID NOT GO READY
1425 006600 0057// 172216 TST AMTC
```

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-25

1426 006604 100001
1427 006606 104400
1428 006610 012700 014722
1429 006614 023720 001044
1430 006620 001401
1431 006622 104400
1432 006624 022700 014746
1433 006630 001371
1434 006632 104402
1435 006634 105237 001044
1436 006640 013700 001116
1437 006644 042700 117777
1438 006650 022700 060000
1439 006654 001403
1440 006656 142737 000300 001044
1441 006664 105737 001044
1442 006670 001405
1443 006672 113737 001044 001045
1444 0066700 000137 006454
1445 006704 162737 020000 001116 WBR4:
1446 006712 162737 020000 001114
1447 006720 032737 060000 001116
1448 006726 001200
1449 006730 013700 001106
1450 006734 062700 060003
1451 006740 010037 001114
1452 006744 062700 000002
1453 006750 010037 001116
1454
1455
1456 006754 104402
1457 006756 012700 017000
1458 006762 162700 014722
1459 006766 005400
1460 006770 010037 001044
1461 006774 013777 001044 172022
1462 007002 012777 002000 172016
1463 007010 104404
1464 007012 104400
1465 007014 104416
1466 007016 104404
1467 007020 104400
1468 007022 104440
1469 007024 104430
1470 007026 104404
1471 007030 104400
1472 007032 013777 001044 171764
1473 007040 104456
1474 007042 104420
1475 007044 104404
1476 007046 104400
1477 007050 005777 171746
1478 007054 100001
1479 007056 104400
1480 007060 012700 002000
1481 007064 012701 014722
1482 007070 022041
BPL .+4
HLT
MOV #RBUF, R0
CMP TEMP, (R0)+
BEQ .+4
HLT
CMP #RBUF+24, R0
BNE WBR3
SCOPE
INC B TEMP !DONE FOR ALL DATA PATTERN ?
MOV TCWT, R0
BIC #117777, R0
CMP #60000, R0 !IS CORE DUMP MODE SELECTED?
BEQ .+10 !YES
BICA #300, TEMP !NO
TSTB TEMP
BEQ WBR4 !YES, EXIT
MOVB TEMP, TEMP+1 !NO
JMP WBR !REPEAT
SUB #20000, TCWT !CHANGE DENSITY OF WRITE COMMAND
SUB #20000, TCRD !CHANGE DENSITY OF READ COMMAND
BIT #60000, TCWT !MASK DENSITY STATUS
BNE WHRS !REPEAT FOR ALL DENSITYS
MOV TCSL, R0 !RESTORE TCWT & TC RD
ADD #60003, R0
MOV R0, TC RD
ADD #2, R0
MOV R0, TCWT
!WRITE AND READ A LONG RECORD
!USES MEMORY OCCUPIED BY THE PROGRAM AS A WRITE BUFFER
SCOPE
MOV #17000, R0
SUB #RBUF, R0 !CALCULATE SIZE OF READ BUFFER
NEG R0 !GEN 2'S COMPLEMENT
MOV R0, TEMP
MOV TEMP, ABC
MOV #2000, ACA
TSTCUR
HLT
WRITE
TSTCUR
HLT
MIN1BC
SPACEB
TSTCUR
HLT
MOV TEMP, ABC
RBUFCA
READ
TSTCUR
HLT
TST #MTC
BPL .+4
HLT
MOV #2000, R0
MOV #RBUF, R1
CMP (R0)+, (R1)+ !DO A DATA COMPARISON
WBR5:
WBR3:
WBR4:

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-26

1483 007072 001401 BEQ .+4
1484 007074 104400 HLT I ERROR, DATA READ NOT EQUAL DATA WRITTEN
1485 007076 022701 017000 CMP #17000,R1 I CHECK THE WHOLE BUFFER
1486 007102 0013/2 BNE WBR5 INO
1487 *****
1488 !TEST PARITY
1489 !WRITE 3 BYTE RECORD ODU PARITY, READ EVEN PARITY
1490 !BIT 14 OF MTRD =1 SHOULD CAUSE LPS TO BE LOADED IN DATA BUFFER AFTER RE
PAR: SCOPE
1491 007104 104402 BEQ .+4
1492 007106 032737 000004 177570 BIT #4,SR I IS TAPE PHASE ENCODED
1493 007114 001402 BEQ .+6 INO
1494 007116 000157 010252 JMP TMRT YES
1495 007122 012737 177777 014556 MOV #-1,WBUF
1496 007130 012737 177777 014560 MOV #-1,WBUF+2
1497 007136 104402 MIN3UC ISET BYTE COUNT TO MINUS THREE
1498 007140 104404 WBUFCA
1499 007142 104404 TSTCUR I TEST CONTROLLER READY
1500 007144 104400 HLT I ERROR, CONTROLLER DID NOT GO READY
1501 007146 013700 001116 MOV TCWT,R0
1502 007152 005300 DEC R0
1503 007154 0100/1 171642 MOV R0,@MTC I WRITE, 800 BPI, 9 TRACK
1504 007160 006037 177570 ROR SR
1505 007164 103003 BCC .+10
1506 007166 0427/7 020000 171626 BIC #20000,@MTC I MAKE COMMAND 7 TRACK
1507 007174 0052/7 171622 INC @MTC IGO
1508 007200 104404 TSTCUR I TEST CONTROLLER READY
1509 007202 104400 HLT I ERROR, CONTROLLER DID NOT GO READY
1510 007204 104440 MIN1UC ISET BYTE COUNT TO MINUS ONE
1511 007206 104430 SPACEB
1512 007210 104404 TSTCUR I TEST CONTROLLER READY
1513 007212 104400 HLT I ERROR, CONTROLLER DID NOT GO READY
1514 007214 0527/7 040000 171610 BIS #40000,@MTRD
1515 007222 104442 MIN3UC ISET BYTE COUNT TO MINUS THREE
1516 007224 104436 RBUFCA
1517 007226 013700 001114 MOV TCRD,R0
1518 007232 052700 004000 BIS #4000,R0 I MAKE EVEN PARITY
1519 007236 005300 DEC R0
1520 007240 0100/1 171556 MOV R0,@MTC I READ
1521 007244 006037 177570 ROR SR
1522 007250 103003 BCC .+10
1523 007252 0427/7 020000 171542 BIC #20000,@MTC I MAKE COMMAND 7 TRACK
1524 007260 0052/7 171536 INC @MTC IGO
1525 007264 104404 TSTCUR I TEST CONTROLLER READY
1526 007266 104400 HLT I ERROR, CONTROLLER DID NOT GO READY
1527 007270 0327/7 010000 171522 BIT #10000,@MTS
1528 007276 001001 BNE .+4
1529 007300 104400 HLT I ERROR, PARITY ERROR (BIT 12) NOT =1
1530 007302 017700 171522 MOV @MTO,R0
1531 007306 042700 177000 BIC #177000,R0
1532 007312 006037 177570 ROR SR
1533 007316 103405 BCS PAR1
1534 007320 022700 000744 CMP #744,R0
1535 007324 001401 BEQ .+4
1536 007326 104400 HLT I ERROR, LPC NOT =744 OR BIT 14 OF MTRD DIDN'T CA
1537 007330 000404 BR PAR2
1538 007332 022700 000477 CMP #477,R0
1539 007336 001401 BEQ .+4

MAIN MACRO V06-03 05-NOV-74 12:39 PAGE 1-27

Line Number	Address	Op Code	Op Description	Comments		
1540	007340	104400	HLT	!ERROR, LPC NOT =477 (7 CHANNEL) OR LPC NOT READ		
1541			IWRITE EVEN PARITY, READ ODD PARITY			
1542	007342	104442	PAR2: MIN3BC	ISET BYTE COUNT TO MINUS THREE		
1543	007344	104434	WBUFCA			
1544	007346	013700	001116	MOV TCWT,R0		
1545	007352	052700	004000	BIS #4000,R0	IMAKE EVEN PARITY	
1546	007356	005300		DEC R0		
1547	007360	010077	171436	MOV R0,AMTC	IWHITE, 800 BPI, 9 TRACK	
1548	007364	006037	177570	ROR SR		
1549	007370	103003		BCC .+10		
1550	007372	042777	020000	171422	BIC #20000,AMTC	IMAKE 7 TRACK
1551	007400	005277	171416	INC @MTC	.IGO	
1552	007404	104404		TSTCUR	TEST CONTROLLER READY	
1553	007406	104460		HLT	!ERROR, CONTROLLER DID NOT GO READY	
1554	007410	104440		MIN1BC	ISET BYTE COUNT TO MINUS ONE	
1555	007412	104430		SPACEB		
1556	007414	104404		TSTCUR	TEST CONTROLLER READY	
1557	007416	104460		HLT	!ERROR, CONTROLLER DID NOT GO READY	
1558	007420	052777	040000	171404	BIS #40000,AMTRD	
1559	007426	104442		MIN3BC	ISET BYTE COUNT TO MINUS THREE	
1560	007430	104436		WBUFCA		
1561	007432	013700	001114	MOV TCRD,R0		
1562	007436	005300		DEC R0		
1563	007440	010077	171356	MOV R0,AMTC	IREAD, 800 BPI, 9 TRACK	
1564	007444	006037	177570	ROR SR		
1565	007450	103003		BCC .+10		
1566	007452	042777	020000	171342	BIC #20000,AMTC	IMAKE 7 TRACK
1567	007460	005277	171336	INC @MTC	.IGO	
1568	007464	104404		TSTCUR	TEST CONTROLLER READY	
1569	007466	104400		HLT	!ERROR, CONTROLLER DID NOT GO READY	
1570	007470	032777	010000	171322	BIT #10000,AMTS	
1571	007476	001001		BNE .+4		
1572	007500	104400		HLT	!ERROR, PARITY ERROR (BIT 12) NOT =1	
1573	007502	017700	171322	MOV @MTD,R0		
1574	007506	042700	177000	BIC #177000,R0		
1575	007512	006037	177570	KOR SR		
1576	007516	103411		BCS PAR4		
1577	007520	022700	000004	CMP #4,R0		
1578	007524	001401		HEQ .+4		
1579	007526	104400		HLT	!ERROR, LPC NOT =004 OR LP NOT READ PROPERLY	
1580	007530	000404		BR PAR4		
1581	007532	022700	000077	PAR3: CMP #77,R0		
1582	007536	001401		BEQ .+4		
1583	007540	104400		HLT	!ERROR, LPC NOT =77 (7 TRACK)	
1584	007542	104414		PWRCLR		
1585	007544	032777	010000	171246	BIT #10000,AMTS	
1586	007552	001401		HEQ .+4		
1587	007554	104400		HLT	!ERROR, POWER CLEAR DIDN'T CLEAR PARITY ERROR (B	
1588	007556	104402		SCOPE		
1589	007560	006037	177570	KOR SR	!IS SWC=1 TO INDICATE 7 CHANNEL	
1590	007564	103002		BCC .+6	IND	
1591	007566	000137	010252	JMP TMRT	YES SKIP CRC TEST	
1592				*****		
1593				!TEST CRC GENERATION AND LPC CHARACTER		
1594				!PROCEDURE USED IS TC WRITE A 4 BYTE RECORD AND READ IT BACK.		
1595				!THEN THE CRC WRITTEN IS COMPARED WITH CRC CALCULATED.		
1596				!THEN RECORD IS READ AGAIN AND LPC SHOULD = CRC		

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-28

1597
1598 007572 105037 001044
1599
1600 007576 112737 000001 001045
1601 007604 113701 001044
1602 007610 105701
1603 007612 001001
1604 007614 000410
1605 007616 106301
1606 007620 103002
1607 007622 105137 001045
1608 007626 042737 177000 001044
1609 007634 000765
1610 007636 013737 001044 001052
1611 007644 013700 001044
1612 007650 104454
1613 007652 010037 001054
1614 007656 013701 001044
1615 007662 104452
1616 007664 010137 001056
1617 007670 013700 001056
1618 007674 104454
1619 007676 010037 001060
1620 007702 013701 001044
1621 007706 104452
1622 007710 010137 001062
1623 007714 013700 001062
1624 007720 104454
1625 007722 010037 001064
1626 007726 013701 001044
1627 007732 104452
1628 007734 010137 001066
1629 007740 013700 001066
1630 007744 104454
1631 007746 010037 001070
1632 007752 010001
1633 007754 042701 000727
1634 007760 005100
1635 007762 042700 000050
1636 007766 050100
1637 007770 010037 001072
1638 007774 042737 177000 001072
1639
1640
1641 010002 104402
1642 010004 113737 001044 014556
1643 010012 113737 001044 014557
1644 010020 013737 014556 014560
1645 010026 104454
1646 010030 104444
1647 010032 104452
1648 010034 104404
1649 010036 104400
1650 010040 104416
1651 010042 104404
1652 010044 104400
1653 010046 104440

;TEST IS REPEATED FOR ALL DATA COMBINATIONS.
CRCTST: CLR R0 TEMP ;INITIALIZE DATA
;CALCULATE PARITY OF DATA TO BE WRITTEN IN CRC TEST (MAKE PARITY ODD)
CRCT1: MOVIH #1,TEMP+1;INITIALIZE ODD PARITY
MOVIB TEMP,R1
CRCP1: TSTB R1 ;IS DATA=0
BNE .+4 INO
BR CRCT2 ;YES, NOW TEMP=1 CONTAINS PARITY BIT
ASLH R1 ;SHIFT DATA BITS LEFT INTO C BIT
BCC .+6 ;WAS BIT=0?
COMB TEMP+1 INO, COMPLEMENT PARITY
BIC #1177000,TEMP
BR CRCP1 ;DO AGAIN UNTIL DATA=0
MOV TEMP,CRXOR1 ;SAVE 1ST DATA BYTE (+PARITY)
MOV TEMP,R0
ROT CMP
MOV R0,CRROT1 ;SAVE ROTATE
MOV TEMP,R1
XC LOR
MOV R1,CRXOR2
MOV CRXOR2,R0
ROT CMP
MOV R0,CRROT2
MOV TEMP,R1
XC LOR
MOV R1,CRXOR3
MOV CRXOR3,R0
ROT CMP
MOV R0,CRROT3
MOV TEMP,R1
XC LOR
MOV R1,CRXOR4
MOV CRXOR4,R0
ROT CMP
MOV R0,CRROT4
MOV R0,R1 ;COMPLEMENT ALL EXCEPT 4,6
BIC #727,R1
COM R0
BIC #50,R0
BIS R1,R0
MOV R0,CRCWRT
BIC #1177000,CRCWRT;SAVE CRC CALCULATED
;WRITE A FOUR BYTE RECORD
;ALL BYTES ARE = THEREFORE LPC SHOULD = CRC
CWRITB: SCOPE
MOVIB TEMP,WBUF
MOVIB TEMP,WBUF+1
MOVIB WBUF,WBUF+2
WHUFCA
MIN4HC ;SET BYTE COUNT TO MINUS FOUR
SELECT
TST CUR
HLT ;TEST CONTROLLER READY
WRITB ;ERROR, CONTROLLER DID NOT GO READY
TST CUR
HLT ;TEST CONTROLLER READY
MIN1BC ;ERROR, CONTROLLER DID NOT GO READY
MIN1BC ;SET BYTE COUNT TO MINUS ONE

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-29

1654 010050 104430
1655 010052 104404
1656 010054 104400
1657 010056 104436
1658 010060 104444
1659 010062 104420
1660 010064 104404
1661 010066 104460
1662 010070 023737 014556 014722
1663 010076 001401
1664 010100 104400
1665 010102 023737 014560 014724
1666 010110 001401
1667 010112 104400
1668 010114 017700 170710
1669 010120 017701 170706
1670 010124 042700 177000
1671 010130 042701 177000
1672 010134 001401
1673 010136 104400
1674 010140 020037 001072
1675 010144 001401
1676 010146 104400
1677 010150 104440
1678 010152 104430
1679 010154 104404
1680 010156 104400
1681 010160 1044**
1682 010162 104436
1683 010164 052777 040000 170640
1684 010172 104420
1685 010174 104404
1686 010176 104400
1687 010200 017700 170624
1688 010204 042700 177000
1689 010210 020037 001072
1690 010214 001401
1691 010216 104400
1692 010220 005037 001072
1693 010224 005077 170602
1694 010230 032737 040000 177570
1695 010236 001005
1696 010240 105237 001044
1697 010244 001402
1698 010246 000137 007576
1699
1700
1701 010252 104402
1702 010254 005000
1703 010256 005777 170550
1704 010262 100005
1705 010264 005200
1706 010266 001315
1707 010270 104400
1708 010272 005000
1709 010274 005777 170532
1710 010300 100404
SPACEB
TSTCUR
HLT
RBUFCA
MIN4BC
RLADJ
TSTCUR
HLT
CMP WBUF,RBUFI WHERE 1ST 2 BYTES WRITTEN AND READ OK?
BEQ .+4 IYES
HLT IERROR, DATA WRITTEN NOT = DATA READ
CMP WBUF+2,RBUF+2 WHERE 2ND 2 BYTES WRITTEN AND READ OK?
BEQ .+4 IYES
HLT IERROR, DATA WRITTEN NOT = DATA READ
MOV @MTD,R0 IGET CRC
MOV @MTDR,R1 IGET LPC ERROR
BIC #177000,R0 IMASK CRC
BIC #177000,R1 IMASK LPC ERROR
BEQ .+4
HLT IERROR, LPC NOT = 0
CMP R0,CRCWRT
BEQ .+4
HLT IERROR CRC WRITTEN NOT = CRC CALCULATED
MIN1BC ISET BYTE COUNT TO MINUS ONE
SPACEB
TSTCUR
HLT ITEST CONTROLLER READY
MIN4BC IERROR, CONTROLLER DID NOT GO READY
RBUFCA
BIS #40000,@MTRD IENABLE LPC READ
RLADJ
TSTCUR ITEST CONTROLLER READY
HLT IERROR, CONTROLLER DID NOT GO READY
MOV @MTD,R0
BIC #177000,R0
CMP R0,CRCWRT
BEQ .+4
HLT IERROR, LPC NOT=CRC
CLR CRCWRT
CLR @MTRD IENABLE CRC READ
BIT #40000,SR IIS SW 14 SET?
BNE .+14
INC B TEMP I+1 TO DATA PATTERN
BEQ TMRT
JMP CRCT1

1700 ITEST TIMER (BIT 15) TO BE COMPLIMENTING
TMRT: SCOPE
CLH R0
TST @MTRD
HPL .+10
INC R0 IDELAY LONG TIME
BNE .+10
HLT IERROR, TIMER (BIT 15) NEVER =0
CLR R0
TST @MTRD
BMI .+10

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-30

1711 010302 005200
1712 010304 001373
1713 010306 104400
1714
1715
1716
1717 010310 104414
1718 010312 005057 001042
1719 010316 104402
1720 010520 104424
1721 010322 104404
1722 010324 104400
1723 010326 032737 004000 177570
1724 010334 001402
1725 010336 000157 011304
1726 010342 012702 013144
1727 010346 104412
1728 010350 000000
1729 010352 032737 004000 177570
1730 010360 001402
1731 010362 000157 011304
1732
1733
1734 010366 013700 001106
1735 010372 032700 002000
1736 010376 001043
1737 010400 005077 170416
1738 010404 112737 000060 013276
1739 010412 012737 002000 001132
1740 010420 005057 001044
1741 010424 000414
1742 010426 112737 000064 013276 USS1:
1743 010434 012777 002000 170360
1744 010442 012737 004000 001132
1745 010450 012737 002000 001044
1746 010456 012702 013260 USS1:
1747 010462 104412
1748 010464 000000
1749 010466 104402
1750 010470 013777 001044 170324
1751 010476 032777 000100 170314
1752 010504 001001
1753 010506 104400
1754 010510 105777 170306
1755 010514 100401
1756 010516 104400
1757 010520 032777 000040 170272
1758 010526 001001
1759 010530 104400
1760 010532 104402
1761 010534 105237 013276
1762 010540 105237 001045
1763 010544 023737 001132 001044
1764 010552 001341
1765
1766 010554 104402
1767 010556 113700 001107
INC R0
BNE .+10
HLT ERROR, TIMER (BIT 15) NEVER =1
***** MANUAL INTERVENTION TESTS *****

PWRCLR
CLR TMTNFL
SCOPE
REWIND
TSTCUR TEST CONTROLLER READY
HLT ERROR, CONTROLLER DID NOT GO READY
BIT #4000,SR
BEQ .+6
JMP TSTEND
MOV #MSG3,R2
PRTMSG PRINT MESSAGE IN R2
HALT IWAIT FOR OPERATOR TO CONTINUE
BIT #4000,SR INHIBIT TESTS?
BEQ .+6 INO
JMP TSTEND IYES

TEST UNIT SELECT SWITCH
MOV TCSL,R0
BIT #2000,R0 IIS TESTED UNIT IN MOST SIG SELECT ADDRESSES
BNE USS1 IYES
CLR @MTC INO
MOVB #60,MSG4+16
MOV #2000,USLEN
CLR TEMP
BR USS
MOVB #64,MSG4+16
MOV #2000,@MTC
MOV #4000,USLEN
MOV #2000,TEMP
MOV #MSG4,R2
PRTMSG PRINT MESSAGE IN R2
HALT
SCOPE
MOV TEMP,@MTC;SELECT UNIT
BIT #100,@MTS1;IS SELECT REMOTE SET
BNE .+4
HLT ERROR, PROPER UNIT NOT SELECTED
TSTB @MTC
BMI .+4
HLT ERROR, CU READY NOT SET, IS UNIT SELECTED?
BIT #40,@MTS
BNE .+4
HLT ERROR, BOT AND TUR NOT SET, IS UNIT ON LINE & A
SCOPE
INC B MSG4+16 INCREMENT UNIT #
INC B TEMP+1
CMP USLEN,TEMP IDONE ALL UNITS?
BNE USS INO
TEST ONLINE-OFFLINE SWITCH
SCOPE
MOVB TCSL+1,R0

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-31

1768 010562 032700 000017	BIT #17,R0
1769 010566 052700 000060	BIS #60,R0
1770 010572 010037 001044	MOV R0,TEMP
1771 010576 113737 001044 013336	MOVB TEMP,MSG5+16
1772 010604 012702 013320	MOV #MSG5,R2
1773 010610 104412	PRTMSG IPRINT MESSAGE IN R2
1774 010612 000000	HALT
1775 010614 104402	SCOPE
1776 010616 104432	SELECT
1777 010620 032777 000100 170172	BIT #100,@MTS
1778 010626 001001	BEQ +4
1779 010630 104400	HLT
	IERROR, SELECT REMOTE SET, UNIT NOT OFF-LINE
1780	*****
1781	TEST WRITE LOCK SWITCH
1782 010632 113737 001044 013472	MOVB TEMP,MSG6+100
1783 010640 012702 013372	MOV #MSG6,R2
1784 010644 104412	PRTMSG IPRINT MESSAGE IN R2
1785 010646 000000	HALT
1786 010650 104402	SCOPE
1787 010652 104432	SELECT
1788 010654 032777 000004 170136	BIT #4,@MTS IIS WRITE LOCK SET?
1789 010662 001001	BNE +4 IYES
1790 010664 104400	HLT
	IERROR, WRL (BIT 2) NOT SET WITH WRITE LOCK RING REMOVED
1791	*****
1792	TEST WRITE WITH WRITE LOCK RING REMOVED TO CAUSE ILLEGAL COMMAND
1793 010666 104402	SCOPE
1794 010670 005077 170130	CLR @BC
1795 010674 005077 170126	CLR @CA
1796 010700 1044+6	WRITE
1797 010702 104444	TSTCUR
1798 010704 104400	HLT
1799 010706 005777 170110	TST @MTC
1800 010712 100401	BMI +4
1801 010714 104400	HLT
	IERROR (BIT 15) NOT SET AFTER WRITE WITH WRITE LK RNG REM'D
1802	*****
1803 010716 005777 170076	TST @MTS
1804 010722 100401	BMI +4
1805 010724 104400	HLT
	IERROR, ILLEGAL COMMAND (BIT 15) NOT SET AFTER WRT CMD
1806	*****
1807	TEST OFFLINE FUNCTION TO SET UNIT OFFLINE AND REWIND TO BOT
1808 010726 104402	SCOPE
1809 010730 113737 001044 013700	MOVB TEMP,MSG7+153
1810 010736 012702 013525	MOV #MSG7,R2
1811 010742 104412	PRTMSG IPRINT MESSAGE IN R2
1812 010744 000000	HALT
1813 010746 104414	PWRCLR
1814 010750 104432	SELECT
1815 010752 104404	TSTCUR
1816 010754 104400	HLT
1817 010756 032717 000100 170034	BIT #100,@MTS
1818 010764 001001	BNE +4
1819 010766 104400	HLT
1820 010770 104402	SCOPE
1821 010772 013777 001112 170022	MOV TCOL,@MTC
1822 011000 104404	TSTCUR
1823 011002 104400	HLT
1824 011004 032777 000100 170006	BIT #100,@MTS

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-32

1825 011012 001401
1826 011014 104400
1827
1828 011016 104402
1829 011020 113737 001044 014014
1830 011026 012702 013776
1831 011032 104412
1832 011034 000000
1833
1834
1835
1836 011036 012702 014057
1837 011042 104412
1838 011044 000000
1839 011046 005237 001042
1840 011052 032737 000002 177570
1841 011060 001052
1842 011062 012702 014201
1843 011066 104412
1844 011070 104402
1845 011072 104432
1846 011074 104404
1847 011076 104400
1848 011100 012777 177756 167716
1849 011106 104434
1850 011110 104416
1851 011112 005000
1852 011114 022777 014560 167704
1853 011122 002403
1854 011124 005200
1855 011126 001403
1856 011130 000771
1857 011132 000000
1858 011134 000401
1859 011135 104400
1860 011140 104404
1861 011142 104400
1862 011144 032777 004000 167646
1863 011152 001001
1864 011154 104400
1865 011156 005777 167640
1866 011162 100401
1867 011164 104400
1868 011166 104414
1869 011170 032777 004000 167622
1870 011176 001401
1871 011200 104400
1872 011202 104402
1873 011204 000437
1874 011206 012702 014247
1875 011212 104412
1876 011214 104402
1877 011216 104432
1878 011220 104404
1879 011222 104400
1880 011224 012777 177756 167572
1881 011232 104434

BEQ .+4
HLT IERROR, SELR (BIT 6) NOT CLEARED BY OFFLINE COMMAND
IRE-SET UNIT
SCOPE
MOVB TEMP,MSG8+16
MOV #MSG8,R2
PRTMSG IPRT MESSAGE IN R2
HALT

TEST BUS GRANT LATE (BIT 11) TO=1
HALT PROCESSOR DURING AN NPR SEQUENCE
MOV #MSG9,R2
PRTMSG IPRT MESSAGE IN R2
HALT
INC TMTNFL
BIT #2,SR
BNE BGL1
MOV #MSG10,R2
PRTMSG IPRT MESSAGE IN R2
SCOPE
SELECT
TSTCUR
HLT
MOV #-18.,ABC
WBUFCA
WRITE
CLR R0
CMP #WBUF+2,ACA
BLT .+10
INC R0
BEQ .+10
BR .+14
HALT
BR .+4
HLT
TSTCUR
HLT
BIT #4000,AMTS
BNE .+4
HLT
TST #MTC
BMI .+4
HLT
PWRCLR
BIT #4000,AMTS
BEQ .+4
HLT
SCOPE
BR TSTEND
MOV #MSG11,R2
PRTMSG IPRT MESSAGE IN R2
SCOPE
SELECT
TSTCUH
HLT
MOV #-18.,ABC
WBUFCA

IWAIT FOR NPR SEQUENCE TO START
ICAUSE BGL, WAIT FOR CONTINUE
IERROR, CA DID NOT INC EMENT ON WRITE COMMAND
IERROR, TU DID NOT GO READY
IERROR, BGL (BIT 11) NOT=1,
IERROR, BGL DID NOT SET ERROR STATUS
IERROR, POWER CLEAR DIDN'T CLEAR BGL (BIT 11)
IERROR, CONTROLLER DID NOT GO READY

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-33

1882 011234 000000		HALT
1883 011236 104416		WRITE
1884 011240 000240		NOP
1885 011242 000240		NOP
1886 011244 032777 004000 167546		BIT #4000, #MTS
1887 011252 001001		BNE .+4
1888 011254 104400		HLT
1889 011256 0057/7 167540		TST #MTS
1890 011262 100401		BMI .+4
1891 011264 104400		HLT
1892 011266 104414		PWRCLR
1893 011270 0327/7 004000 167522		BIT #4000, #MTS
1894 011276 001401		DEQ .+4
1895 011300 104400		HLT
1896 011302 104402		SCOPE
1897		I BELL ON PASS COMPLETE
1898 011304 012702 014541		TSTEND: MOV #MSG13,R2
1899 011310 104412		PRTMSG
1900 011312 105237 014554		INCB MSG13+13
1901 011316 122737 000072 014554		CMPB #72, MSG13+13
1902 011324 0010<5		BNE BELL
1903 011326 112737 000060 014554		MOVW #60, MSG13+13
1904 011334 105237 014553		INC B MSG13+12
1905 011340 122737 000072 014553		CMPB #72, MSG13+12
1906 011346 001014		BNE BELL
1907 011350 112737 000060 014553		MOVW #60, MSG13+12
1908 011356 105237 014552		INC B MSG13+11
1909 011362 122737 000072 014552		CMPB #72, MSG13+11
1910 011370 001003		BNE BELL
1911 011372 112737 000060 014552		MOVW #60, MSG13+11
1912 011400 1057/7 167432		BELL: TSTB #TCSR
1913 011404 1003/5		BPL .-4
1914 011406 0127/7 000207 167420		MOV #207, #TDBR
1915 011414 005000		CLR R0
1916 011416 005200		INC R0
1917 011420 001376		BNE .-2
1918 011422 104404		TSTCUR
1919 011424 104400		HLT
1920 011426 1044<4		REWIND
1921 011430 104404		TSTCUR
1922 011432 104400		HLT
1923 011434 104400		WAITTR
1924 011436 000240		NOP
1925 011440 104400		WAITTR
1926 011442 104400		HLT
1927 011444 000157 001350		JMP BEGIN
1928		I TEST CONTROLLER READY
1929		I ERROR, CONTROLLER DID NOT GO READY
1930		***** SUBROUTINES *****
1931		*****
1932		I ILLEGAL TAPE INTERRUPT SUBROUTINE
1933 011450 013737 001044 001050		MTTRP: MOV TEMP, TEMPS
1934 011456 013737 000036 001046		MOV 36, TEMPP
1935 011464 012737 000340 000036		MOV #340, 36
1936 011472 011637 001044		MOV #SP, TEMP
1937 011476 104400		HLT
1938 011500 013737 001050 001044		MOV TEMPS, TEMP
		I TEMP CONTAINS PC OF ILLEGAL INTERRUPT
		I ERROR, ILLEGAL TAPE INTERRUPT
		I RESTORE TEMP

.MAIN. MACRO V06-03 05-NOV-74 12139 PAGE 1-34

1939 011506 013757 001046 000036	MOV TEMPP,36	I RESTORE TRAP PRIORITY
1940 011514 0000U2	RTI	IRETURN FROM INTERRUPT
1941		
1942		*****
1943		*****
1944 011516 011666 000002	TRAP34: MOV @SP,2(SP)	IPUSH RETURN ADDRESS UP INTO STACK
1945 011522 162716 000002	SUB #2,@SP	ICALCULATE TRAP INSTRUCTION ADDRESS
1946 011526 013646	MOV @SP+,-(SP)	IGET TRAP INSTRUCTION
1947 011530 062716 105136	ADD #TABLE-104400,@SP	ICALCULATE TABLE POINTER
1948 011534 0136U7	MOV @SP+,PC	IPOP STACK, GO TO SUBROUTINE
1949 011536 011620	TABLE: PRINT	
1950 011540 01204	SCOPEA	
1951 011542 012120	CURTST	
1952 011544 012174	RGSTST	
1953 011546 012204	HGRSTST	
1954 011550 012240	TOP	
1955 011552 012324	STCH12	
1956 011554 012334	STCW1	
1957 011556 012344	STCRD	
1958 011560 012354	STCEF	
1959 011562 012364	STCRW	
1960 011564 012374	STCSF	
1961 011566 012404	STCSB	
1962 011570 012414	STCSL	
1963 011572 012424	CAWB	
1964 011574 012434	CARB	
1965 011576 012444	BCM1	
1966 011600 012454	BCM3	
1967 011602 012464	BCM4	
1968 011604 012474	EOTST	
1969 011606 012146	TSTRUY	
1970 011610 012504	CRCXOR	
1971 011612 012516	CRCROT	
1972 011614 012524	OCTPNT	
1973 011616 012660	OCTP	
1974		*****
1975		*****
1976		*****
1977		*****
1978 011620 0127U2 001134	ENTERED WITH SYSTEM TRAP CALL(HLT)	
	PRINT PC, STATUS REGISTER, COMMAND REGISTER, BYTE COUNT, CURRENT ADDRES	
	PRINT: MOV #SAVE,R2	
	MOV (SP), (R2)	
	SUB #2,(R2)+	
	MOV @MTS,(R2)+	
	MOV @MTC,(R2)+	
	MOV @BC,(R2)+	
	MOV @CA,(R2)+	
	MOV @MTD,(R2)+	
	BIC #177000,(R2)	
	MOV @MTRD,(R2)+	
	MOV TEMP,(R2)+	
	MOV CRCWRT,(R2)+	
	BIT SR,#200001 TEST FOR INHIBIT PRINT OUT	
	BEQ .+4 IBRANCH TO PRINT	
	RTS PC IINHIBIT, RETURN TO MAIN STREAM	
1993 011710 0127U2 013027	MOV #MSG1,R2	
1994 011714 005757 001100	TST PKINT1	
1995 011720 0014U2	BEQ .+6	

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-35

1996 011722 012702 013141	MOV #MSG2,R2	
1997 011726 104412	PRTMSG	IPRINT MESSAGE IN R2
1998 011730 005237 001100	INC PRINT1	
1999 011734 013702 001134	MOV SAVE,R2	
2000 011740 104456	PRTOCT	
2001 011742 013702 001136	MOV SAVE+2,R2	
2002 011746 104456	PRTOCT	
2003 011750 013702 001140	MOV SAVE+4,R2	
2004 011754 104456	PRTOCT	
2005 011756 013702 001142	MOV SAVE+6,R2	
2006 011762 104456	PRTOCT	
2007 011764 013702 001144	MOV SAVE+10,R2	
2008 011770 104456	PRTOCT	
2009 011772 013702 001146	MOV SAVE+12,R2	
2010 011776 104456	PRTOCT	
2011 012000 013702 001150	MOV SAVE+14,R2	
2012 012004 104456	PRTOCT	
2013 012006 013702 001152	MOV SAVE+16,R2	
2014 012012 104456	PRTOCT	
2015 012014 013702 001154	MOV SAVE+20,R2	
2016 012020 104456	PRTOCT	
2017 012022 005737 177570	TST SR	ICHECK SR FOR HALT SWITCH
2018 012026 100001	BPL +4	
2019 012030 000000	HALT	IHALT ON ERROR UP
2020 012032 000207	RTS PC	IEXIT
2021		
2022		
2023		IENTERED WITH SYSTEM TRAP CALL(SCOPE)
2024		ISCOPE LOOP FOR EACH TEST
2025 012034 032737 040000 177570	SCOPEA: BIT #40000,SR	ITEST SR FOR SCOPE
2026 012042 001003	BNE SCOPEB	IYES SCOPE
2027 012044 011637 001102	MOV @SP,RETURN	ISAVE SCOPE RETURN POINTER
2028 012050 000207	RTS PC	IRETURN INLINE-NEXT TEST
2029 012052 022606	SCOPEB: CMP (SP)+,SP	IREPOSITION THE STACK
2030 012054 005737 001042	TST TMNFL	IIS PROGRAM IN TAPE MOTION TESTS?
2031 012060 001413	DEQ SCPR	INU. RETURN TO BEGINING OF TEST
2032 012062 032777 002000 166730	BIT #2000,GMTS	ITEST EOT STATUS
2033 012070 001411	DEQ SCPR	IRETURN IF NOT AT EOT
2034 012072 104424	REWIND	
2035 012074 013702 001020	MOV MTS,R2	ISELECT STATUS REGISTE
2036 012100 012703 000001	MOV #1,R3	IMASK TUR BIT
2037 012104 012704 000300	MOV #300,R4	ISET UP DELAY
2038 012110 104406	TSTRGS	
2039 012112 104400	HLT	ITERROR, UNIT DID NOT REWIND
2040 012114 00017 166762	SCPR: JMP @RETURN	ISCOPE RETURN
2041		
2042		
2043		IENTERED WITH SYSTEM TRAP CALL(TSTCUR)
2044		ITEST CONTROLLER READY SUBROUTINE
2045		IARGUMENTS:
2046		I EXIT TO RETURN IF TIMEOUT
2047		I EXIT TO RETURN +2 IF NOT TIMEOUT
2048		
2049 012120 013702 001022	CURTST: MOV MTC,R2	ISELECT COMMAND REGISTER
2050 012124 012703 000200	MOV #200,R3	IMASK CUR BIT
2051 012130 012704 000010	MOV #C,R4	ISET UP DELAY
2052 012134 104406	TSTRGS	

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-36

2053 012136 0002U7	RTS	PC	IEXIT
2054 012140 062716 000002	ADD	#2,ASP	INCREMENT STACK POINTER
2055 012144 0002U7	RTS	PC	IEXIT
2056	*****		
2057	;ENTERED WITH SYSTEM TRAP CALL(WAITTR)		
2058	;TEST TAPE UNIT READY SUBROUTINE		
2059	;ARGUMENTS:		
2060	; EXIT TO RETURN +2 IF NOT TIMEOUT		
2061	; EXIT TO RETURN IF TIMEOUT		
2062	;TSTRDY: MOV MTS,R2 ISELECT STATUS REGISTER		
2063 012146 0137U2 001020	MOV	#1,R3	IMASK TUR BIT
2064 012152 0127U3 000001	MOV	#15,R4	ISET UP DELAY
2065 012156 0127U4 000015	TSTRGS		
2066 012162 1044U6	RTS	PC	IEXIT
2067 012164 0002U7	ADD	#2,ASP	INCREMENT STACK POINTER
2068 012166 062716 000002	RTS	PC	IEXIT
2069 012172 0002U7	RTS	PC	IEXIT
2070	*****		
2071	;ENTERED WITH SYSTEM TRAP CALL(TSTRGR & TSTRGS)		
2072	;TEST REGISTER BIT(S) SUBROUTINE		
2073	;ARGUMENTS:		
2074	; R2= ADDRESS OF REGISTER		
2075	; R3= MASK FOR BIT(S) TO BE TESTED		
2076	; R4= # OF SECONDS TO TIMEOUT		
2077	; EXIT TO RETURN IF TIMEOUT		
2078	; EXIT TO RETURN +2 IF NOT TIMEOUT		
2079	;RGSTST: BIS #400,TSTIN ISETUP FOR BIT SET TEST		
2080 012174 052757 000400 012216	BR	TSTA	
2081 012202 0004U3	BIC	#400,TSTIN	ISETUP FOR BIT CLEAR TEST
2082 012204 042757 000400 012216	TSTB:	CLR	R5
2083 012212 0050U5	BIT	#R2,R3	
2084 012214 0312U3	TSTIN:	BEQ	TSTL
2085 012216 0014U3	AUD	#2,ASP	LOOP IF TEST NEGATIVE
2086 012220 062716 000002	KTS	PC	INCREMENT STACK POINTER
2087 012224 0002U7	TSTL:	INC	R5
2088 012226 0052U5	BNE	TSTB+2	IRETRY IF LOOP COUNTER NOT ZERO
2089 012230 0013/1	DEC	R4	
2090 012232 0053U4	BNE	TSTA	START LOOP OVER IF NOT MAXIMUM TIME
2091 012234 0013U6	RTS	PC	IEXIT
2092 012236 0002U7	RTS	PC	IEXIT
2093	*****		
2094	;ENTERED WITH SYSTEM TRAP CALL(PRTMSG)		
2095	;MOV ADDRESS OF MESSAGE TO REGISTER 2		
2096	;THEN PRINT MESSAGE		
2097	;TOP1: BICH #177,ATCSH1CLR INT FLAG		
2098 012240 142777 000177 166570	MOVB	(R2)+,EOMK	MOVE IN EOM MARKER
2099 012246 112257 012710	CMPB	#R2,EOMK	COMPARE FOR EOM
2100 012252 121257 012710	BNE	.+4	IND
2101 012256 0010U1	RTS	PC	IYES, EXIT
2102 012260 0002U7	CMPB	#R2,#1@	
2103 012262 121247 000100	BEQ	TOP2	
2104 012266 0014U4	MOVB	(R2)+,CHAR	IPRINT MESSAGE CHARACTER
2105 012270 112257 001076	PRTOUT		
2106 012274 1044U0	BR	TOP1	IBRANCH BACK
2107 012276 0007U3	MOVB	#215,CHAR	ISEND CARRIAGE RETURN
2108 012300 112757 000215 001076	PRTOUT		
2109 012306 1044U0	RTS	PC	IEXIT

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-37

```
2110 012310 112747 000212 001076      MOVB #212,CHAR    ISEND LINE FEED
2111 012316 104460      PRTOUT
2112 012320 005202      INC R2      IINCRMTN R2
2113 012322 000753      BR TOP1     INO EOM, SO LOOP
2114
2115
2116
2117
2118
2119 012324 012777 010000 166470  STCB12: MOV #10000,AMTC
2120 012332 000207      RTS PC      IEXIT
2121 012334 013777 001116 166460  STCWT: MOV TCWT,AMTC
2122 012342 000207      RTS PC      IEXIT
2123 012344 013777 001114 166450  STCRD: MOV TCRD,AMTC
2124 012352 000207      RTS PC      IEXIT
2125 012354 013777 001120 166440  STCEF: MOV TCWF,AMTC
2126 012362 000207      RTS PC      IEXIT
2127 012364 013777 001130 166430  STCRW: MOV TCRW,AMTC
2128 012372 000207      RTS PC      IEXIT
2129 012374 013777 001122 166420  STCSF: MOV TCSF,AMTC
2130 012402 000207      RTS PC      IEXIT
2131 012404 013777 001124 166410  STCSB: MOV TCRS,AMTC
2132 012412 000207      RTS PC      IEXIT
2133 012414 013777 001106 166400  STCSL: MOV TCSL,AMTC
2134 012422 000207      RTS PC      IEXIT
2135 012424 012777 014556 166374  CAWB: MOV #WBUF,ACA
2136 012432 000207      RTS PC      IEXIT
2137 012434 012777 014722 166364  CARB: MOV #RBUF,ACA
2138 012442 000207      RTS PC      IEXIT
2139 012444 012777 177777 166352  BCM1: MOV #-1,ABC
2140 012452 000207      RTS PC      IEXIT
2141 012454 012777 177775 166342  BCM3: MOV #-3,ABC
2142 012462 000207      RTS PC      IEXIT
2143 012464 012777 177774 166332  BCM4: MOV #-4,ABC
2144 012472 000207      RTS PC      IEXIT
2145 012474 032777 040000 166316  EOFTSTI: BIT #40000,AMTS
2146 012502 000207      RTS PC      IEXIT
2147
2148
2149
2150
2151 012504 010103      CRCXOR: MOV R1,R3
2152 012506 040001      BIC R0,R1
2153 012510 040300      BIC R3,R0
2154 012512 050001      BIS R0,R1
2155 012514 000207      RTS PC      IEXIT
2156
2157
2158
2159
2160 012516 042700 177000  CRCROT: DIC #177000,R0
2161 012522 006000      ROR R0
2162 012524 103011      BCC CRCH1  INO EXIT
2163 012526 052700 000400  BIS #400,R0  IMAKE BIT1=1
2164 012532 010001      MOV R0,R1
2165 012534 042701 000074  BIC #74,R1
2166 012540 005100      COM R0
```

.MAIN. MACHO V06-03 05-NOV-74 12:39 PAGE 1-38

2167 012542 042700 000703 BIC #703,R0
2168 012546 050100 BIS R1,R0 IRECOMBINE COMPLEMENTED BITS
2169 012550 000207 CRCR1: RTS PC IEXIT
2170
2171 *****
2172 IENTERED WITH SYSTEM TRAP CALL(PRTOUT)
2173 IPRINT OCTAL VALUE IN REGISTER2
2174 012552 012737 000060 001076 OCTPRT: MOV #0,CHAR IINITIALIZE 2ST NUMBER AS 0
2175 012560 005702 TST R2 IIS VALUE POSITIVE
2176 012562 100003 BPL OCT1 IYES PRINT 0
2177 012564 012737 000061 001076 MOV #1,CHAR INO PRINT 1
2178 012572 104400 OCT1: PRTOUT
2179 012574 006102 ROL R2
2180 012576 006102 ROL R2
2181 012600 012737 177773 001074 MOV #5,OCT ICOUNT 5 DIGITS
2182 012606 006102 OCT2: ROL R2
2183 012610 006102 ROL R2
2184 012612 006102 ROL R2
2185 012614 010207 001076 MOV R2,CHAR ISAVE DIGIT
2186 012620 042707 177770 001076 BIC #177770,CHARICLEAR OTHER BITS
2187 012626 052737 000060 001076 BIS #60,CHAR IMAKE ASCII DIGIT
2188 012634 006002 ROR R2
2189 012636 104400 PRTOUT
2190 012640 006102 ROL R2
2191 012642 005207 001074 INC OCT I+1 TO DIGIT COUNT
2192 012646 001307 UNE OCT2 INOT DONE
2193 ITYPE 2 SPACES
2194 012650 012702 014535 MOV #MSG12,R2
2195 012654 104412 PRTMSG IPRINT MESSAGE IN R2
2196 012656 000207 RTS PC IEXIT
2197
2198 *****
2199 IENTERED WITH SYSTEM TRAP CALL(PRTOUT)
2200 012660 032737 020000 177570 OCTP1: BIT #20000,SR
2201 012666 001401 BEQ .+4 IINHIBIT PRINTOUT?
2202 012670 000207 RTS PC IYES, EXIT
2203 012672 1057/7 166140 TSTB #TCSR INO, PRINT
2204 012676 1003/5 DPL .-4 IWAIT FOR READY
2205 012700 0137/7 001076 166126 MOV CHAR,#TOBRIPRINT
2206 012706 000207 RTS PC IEXIT
2207 012710 000 EOMK1: .BYTE 0
2208
2209 ***** MESSAGES ****
2210
2211 *****
2212 012711 057 100 123 MSG0: .ASCII I/ASET SWITCH REGISTER ACCORDING TO I
012714 105 124 040
012717 123 127 111
012722 124 103 110
012725 040 122 105
012730 107 111 123
012733 124 105 122
012736 040 101 103
012741 103 117 122
012744 104 111 116
012747 107 040 124
012752 117 040

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-39

,MAIN. MACRO V06-U3 05-NOV-74 12:39 PAGE 1-40

013222	040	102	105	
013225	040	102	131	
013230	120	101	123	
013233	125	105	104	
013236	040	053	040	
013241	120	122	105	
013244	123	123	040	
013247	103	117	116	
013252	124	111	116	
013255	125	105	057	
2219 013260	057	100	123	MSG4: .ASCII !/SELECT UNIT 0, PRESS CONTINUE!
013263	105	114	105	
013266	103	124	040	
013271	125	116	111	
013274	124	040	060	
013277	054	040	120	
013302	122	105	123	
013305	123	040	103	
013310	117	116	124	
013313	111	116	125	
013316	105	057		
2220 013320	057	100	123	MSG5: .ASCII !/SELECT UNIT 0, OFF-LINE, PRESS CONTINUE!
013323	105	114	105	
013326	103	124	040	
013331	125	116	111	
013334	124	040	060	
013337	054	040	117	
013342	106	106	055	
013345	114	111	116	
013350	105	054	040	
013353	120	122	105	
013356	123	123	040	
013361	105	117	116	
013364	124	111	116	
013367	125	105	057	
2221 013372	057	100	104	MSG6: .ASCII !/DISMOUNT TAPE, REMOVE WRITE LOCK RING, MOUNT TAPE!
013375	111	123	115	
013400	117	125	116	
013403	124	040	124	
013406	101	120	105	
013411	054	040	122	
013414	105	115	117	
013417	126	105	040	
013422	127	122	111	
013425	124	105	040	
013430	114	117	103	
013433	113	040	122	
013436	111	116	107	
013441	054	040	115	
013444	117	125	116	
013447	124	040	124	
013452	101	120	105	
2222 013455	100	123	105	.ASCII !/SELECT UNIT 0, ON LINE, PRESS CONTINUE!
013460	114	105	103	
013463	124	040	125	
013466	116	111	124	
013471	040	060	054	

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-41

013474	040	117	116	
013477	040	114	111	
013502	116	105	054	
013505	040	120	122	
013510	105	123	123	
013513	040	103	117	
013516	116	124	111	
013521	116	125	105	
013524	057	100	104	MSG7: .ASCII I@DISMOUNT TAPE, REPLACE WRITE LOCK RING, MOUNT TAPE!
2223 013525	057	123	115	
013530	111	125	116	
013533	117	125	116	
013536	124	040	124	
013541	101	120	105	
013544	054	040	122	
013547	105	120	114	
013552	101	103	105	
013555	040	127	122	
013560	111	124	105	
013563	040	114	117	
013566	105	115	040	
013571	122	111	116	
013574	107	054	040	
013577	115	117	125	
013602	116	124	040	
013605	124	101	120	
013610	105			
2224 013611	100	115	117	.ASCII I@MOVE TAPE SHORT DISTANCE FORWARD FROM BOT!
013614	125	105	040	
013617	124	101	120	
013622	105	040	123	
013625	110	117	122	
013630	124	040	104	
013633	111	123	124	
013636	101	116	105	
013641	105	040	106	
013644	117	122	127	
013647	101	122	104	
013652	040	106	122	
013655	117	115	040	
013660	102	117	124	
2225 013663	100	123	105	.ASCII I@SELECT UNIT 0, ON LINE, PRESS CONTINUE!
013666	114	105	103	
013671	124	040	125	
013674	116	111	124	
013677	040	060	054	
013702	040	117	116	
013705	040	114	111	
013710	116	105	054	
013713	040	120	122	
013716	105	123	123	
013721	040	103	117	
013724	116	124	111	
013727	116	125	105	
2226 013732	100	125	116	.ASCII I@UNIT SHOULD GO OFFLINE AND REWIND@I
013735	111	124	040	
013740	123	110	117	

MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-42

013743	125	114	104	
013746	040	107	117	
013751	040	117	106	
013754	106	114	111	
013757	116	105	040	
013762	101	116	104	
013765	040	122	105	
013770	127	111	116	
013773	104	100	057	
2227 013776	057	100	123	MSG8: .ASCII !/oSELECT UNIT 0, ON LINE, AT BOT, PRESS CONTINUE/!
014001	105	114	105	
014004	103	124	040	
014007	125	116	111	
014012	124	040	060	
014015	054	040	117	
014020	116	040	114	
014023	111	116	105	
014026	054	040	101	
014031	124	040	102	
014034	117	124	034	
014037	040	120	122	
014042	105	123	123	
014045	040	103	117	
014050	116	124	111	
014053	116	125	105	
014056	057			
2228 014057	057	100	111	MSG9: .ASCII !/oIF PROCESSOR IS A PDP11-45, SET SW 1=1!
014062	106	040	120	
014065	122	117	103	
014070	105	123	123	
014073	117	122	040	
014076	111	123	040	
014101	101	040	120	
014104	104	120	061	
014107	061	055	084	
014112	065	054	040	
014115	123	105	124	
014120	040	123	127	
014123	040	061	075	
014126	061			
2229 014127	100	111	106	.ASCII !/oIF ANY OTHER, SET SW 1=0, PRESS CONTINUE/!
014132	040	101	116	
014135	101	040	117	
014140	124	110	105	
014143	122	054	040	
014146	123	105	124	
014151	040	123	127	
014154	040	061	075	
014157	060	054	040	
014162	120	122	105	
014165	123	123	040	
014170	105	117	116	
014173	124	111	116	
014176	125	105	057	
2230 014201	057	100	120	MSG10: .ASCII !/oPROCESSOR WILL HALT, PRESS CONTINUE/!
014204	122	117	103	
014207	105	123	123	

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-43

014212	117	122	040	
014215	127	111	114	
014220	114	040	110	
014223	101	114	124	
014226	034	040	120	
014231	1<2	105	123	
014234	1<3	040	103	
014237	117	116	124	
014242	111	116	125	
014245	105	057		
2231 014247	057	100	120	MSG611: .ASCII I/O PROCESSOR WILL HALT, PUT "ENAB E=HALT" SW ON "HALT"
014252	1<2	117	103	
014255	105	123	123	
014260	117	122	040	
014263	040	127	111	
014266	114	114	040	
014271	110	101	114	
014274	1<4	054	040	
014277	1<0	125	124	
014302	040	042	105	
014305	116	101	102	
014310	114	105	0:5	
014313	110	101	114	
014316	1<4	042	040	
014321	1<3	127	040	
014324	117	116	040	
014327	042	110	101	
014332	114	124	042	
2232 014335	100	120	125	.ASCII I/A PUT "S=INST-S-BUS CYCLE" SW ON " -BUS CYCLE"
014340	1<4	040	042	
014343	1<3	055	111	
014346	116	123	124	
014351	055	123	055	
014354	102	125	123	
014357	040	103	131	
014362	103	114	105	
014365	042	040	123	
014370	1<7	040	117	
014373	116	040	042	
014376	123	055	102	
014401	1<5	123	040	
014404	103	131	103	
014407	114	105	042	
2233 014412	100	120	122	.ASCII I/A PRESS "CONTINUE" 6 TIMES!
014415	105	123	123	
014420	040	042	103	
014423	117	116	124	
014426	111	116	125	
014431	105	042	040	
014434	056	040	124	
014437	111	115	105	
014442	1<3			
2234 014443	100	120	125	.ASCII I/A PUT SW'S BACK TO "ENABLE" & "S= NST", I
014446	1<4	040	123	
014451	1<7	047	123	
014454	040	040	102	
014457	101	103	113	

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-44

014462	040	124	117	
014465	040	042	105	
014470	116	101	102	
014473	114	105	042	
014476	040	046	040	
014501	042	123	055	
014504	111	116	123	
014507	124	042	054	
2235 014512	040	120	122	,ASCII 1 PRESS "CONTINUE"@/1
014515	105	123	123	
014520	040	042	103	
014523	117	116	124	
014526	111	116	125	
014531	105	042	100	
014534	057			
2236 014535	057	040	040	MSG12: ,ASCII 1/ /1
014540	057			
2237 014541	057	100	103	MSG13: ,ASCII 1/0CYCLE #001/1
014544	131	103	114	
014547	105	040	043	
014552	060	060	061	
014555	057			
2238				.EVEN
2239 014556	000000			WBUF: 0
2240	014722			,=WBUF+100.
2241 014722	000000			RBUF: 0
2242				*****
2243	000001*			.END

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-45
 SYMBOL TABLE

BC	001024	BCM1	012444	BCM3	012454
BCM4	012464	BEGIN	001350	BELL	011400
BGL1	011206	BUFF	= 000776	CA	001026
CARB	012434	CAWB	012424	CC	= 177776
CHAR	001076	CINST	005414	CRCPI	007610
CRCROT	012516	CRCH1	012550	CRCTST	007572
CRCT1	007576	CRCT2	007636	CRCWHT	001072
CRCXOR	012504	CRROT1	001054	CRROT2	001060
CRROT3	001064	CRROT4	001070	CRXOR1	001052
CRXOR2	001056	CRXOR3	001062	CRXOR4	001066
CURTST	012120	CWRITE	010002	EOFST	012474
EOMK	012710	HLT	= 104400	IDBYP	004250
IDTST	001040	IR1	005040	IK2	006114
IR2A	006116	IR3	006214	IR3A	006230
IR4	006326	IR4A	006354	IR5	006376
IR5A	006414	MIN1BC	= 104440	MIN3BC	= 104442
MIN4BC	= 104444	MSG0	012711	MSG1	013027
MSG10	014201	MSG11	014247	MSG12	014535
MSG13	014541	MSG2	013141	MSG3	013144
MSG4	013260	MSG5	013320	MSG6	013372
MSG7	013525	MSG8	013776	MSG9	014057
MTAAD	001002	MTAS	001012	MTAV	001010
MTC	001022	MTD	001030	MINAD	001000
MINS	001006	MTNV	001004	MTP	001104
MTPM	001110	MTRD	001032	MIS	001020
MTTRP	011450	MTV	001014	MTVN	001320
MTVS	001016	NOP	= 000240	NXMT	005674
OCT	001074	OCTP	012660	OCTPRT	012552
OCT1	012572	OCT2	012606	PAK	007104
PAR1	007332	PAR2	007342	PAR3	007532
PAR4	007542	PHINT	011620	PRINT1	001100
PRTMSG	= 104412	PRTOCT	= 104456	PRTOUT	= 104460
PWRCLR	= 104414	RBUF	014722	RBUFCA	= 104436
READ	= 104420	RETURN	001102	REWIND	= 104424
RGRNST	012204	RGRNST	012174	ROTCMP	= 104454
SAVE	001134	SCOPE	= 104402	SCOPEA	012034
SCOPEB	012052	SCPRT	012114	SELECT	= 104432
SPACEB	= 104430	SPACEF	= 104426	SR	= 177570
START	001160	STCH12	012324	STCEF	012354
STCRD	012344	STCRW	012304	STCSB	012404
STCSF	012374	STCSL	012414	STCWT	012334
TABLE	011536	TAMD	001242	TBC	003076
TCOL	001112	TCRD	001114	TCRS	001124
TCRW	001130	TCSF	001122	TCSL	001106
TCSR	001036	TCWE	001126	TCWF	001120
TCWT	001116	TDB	= 003206	TDBR	001034
TEMP	001044	TEMPP	001046	TEMPS	001050
TMA	003142	TMRT	010252	TMTNFL	001042
TOP	012240	TOP1	012252	TOP2	012500
TRAP34	011516	TRLOF	005064	TRLE	005112
TSR	003430	TSTB	012212	TSTCUR	= 104404
TSTEND	011304	TSTE OF	= 104446	TSTIN	012216
TSTL	012226	TSTRDY	012146	TSTRGR	= 104410
TSTRGS	= 104406	T7CH	003414	USLEN	001132
USS	010456	USS1	010426	WAITTH	= 104450
WBR	006454	WDRS	006450	WBR1	006520
WBR2	006552	WBR3	006414	WBR4	006704

.MAIN. MACRO V06-03 05-NOV-74 12:39 PAGE 1-46
SYMBOL TABLE

WBRS 007070 WBUF 014556 WBUFCA= 104434
WREOF = 104422 WRITE = 104416 XCLOH = 104452

. ABS. 014724 000
000000 001
ERRORS DETECTED: 0
FREE CORE: 11167. WORDS
P466,P466/CRF<P466

CROSS REFERENCE TABLE S-1

BC	1- 307#	1- 423	1- 473	1- 691#	1- 692	1- 815	1- 879#
	1- 893	1- 904#	1- 915	1- 943	1- 971	1- 992	1-1013
	1-1046#	1-1053	1-1057#	1-1064	1-1079	1-1101#	1-1248
	1-1396#	1-1420#	1-1461#	1-1472#	1-1794#	1-1848#	1-1880#
	1-1983	1-2139#	1-2141#	1-2145#			
BCM1	1-1965	1-2139#					
BCM3	1-1966	1-2141#					
BCM4	1-1967	1-2143#					
BEGIN	1- 330	1- 371	1- 376#	1-1927			
BELL	1-1902	1-1906	1-1910	1-1912#			
BGL1	1-1841	1-1874#					
BUFF	1- 285#	1- 346	1- 377	1-1291	1-1303	1-1317	1-1343
	1-1386						
CA	1- 308#	1- 430	1- 480	1- 703#	1- 704	1- 818	1- 896
	1- 918	1- 946	1- 974	1- 989	1-1010	1-1082	1-1270#
	1-1462#	1-1795#	1-1852	1-1984	1-2135#	1-2137#	
CARB	1-1964	1-2157#					
CAWB	1-1963	1-2155#					
CC	1- 283#	1- 379#	1-1292#	1-1304#	1-1318#	1-1344#	1-1387#
CHAR	1- 328#	1-2105#	1-2108#	1-2110#	1-2174#	1-2177#	1-2185#
	1-2186#	1-2187#	1-2205				
CINST	1-1194#	1-1196#	1-1199#				
CRCPI	1-1602#	1-1609					
CRCHOT	1-1971	1-2150#					
CRCR1	1-2162	1-2169#					
CRCTST	1-1598#						
CRCT1	1-1600#	1-1698					
CRCT2	1-1604	1-1610#					
CRCWHT	1- 326#	1- 384#	1-1637#	1-1638#	1-1674	1-1689	1-1692#
	1-1989						
CRCXOR	1-1970	1-2151#					
CRROT1	1- 319#	1-1613#					
CRROT2	1- 321#	1-1619#					
CRROT3	1- 323#	1-1625#					
CRROT4	1- 325#	1-1631#					
CRXOR1	1- 318#	1-1610#					
CRXOR2	1- 320#	1-1616#	1-1617				
CRXOR3	1- 322#	1-1622#	1-1623				
CRXOR4	1- 324#	1-1628#	1-1629				
CURTST	1-1951	1-2049#					
CWRITE	1-1641#						
EOFTST	1-1968	1-2145#					
EOMK	1-2099#	1-2100	1-2207#				
HLT	1- 256#	1- 411	1- 418	1- 425	1- 432	1- 439	1- 446
	1- 453	1- 460	1- 468	1- 475	1- 482	1- 489	1- 496
	1- 503	1- 510	1- 518	1- 525	1- 530	1- 535	1- 540
	1- 545	1- 550	1- 555	1- 562	1- 570	1- 577	1- 582
	1- 607	1- 604	1- 609	1- 614	1- 619	1- 624	

1- 629	1- 634	1- 639	1- 647	1- 655	1- 662	1- 670
1- 676	1- 681	1- 686	1- 694	1- 706	1- 718	1- 729
1- 733	1- 740	1- 746	1- 752	1- 758	1- 766	1- 773
1- 780	1- 786	1- 796	1- 802	1- 807	1- 809	1- 811
1- 814	1- 817	1- 820	1- 824	1- 829	1- 832	1- 835
1- 838	1- 841	1- 846	1- 850	1- 853	1- 858	1- 861
1- 867	1- 870	1- 878	1- 884	1- 886	1- 889	1- 892
1- 895	1- 898	1- 902	1- 908	1- 911	1- 914	1- 917
1- 920	1- 924	1- 934	1- 942	1- 945	1- 948	1- 957
1- 960	1- 968	1- 970	1- 973	1- 976	1- 980	1- 988

CROSS REFERENCE TABLE S-2

1- 991	1- 994	1- 997	1-1004	1-1009	1-1012	1-1015
1-1018	1-1026	1-1029	1-1034	1-1039	1-1042	1-1045
1-1049	1-1052	1-1055	1-1060	1-1063	1-1066	1-1072
1-1075	1-1078	1-1081	1-1084	1-1087	1-1093	1-1096
1-1099	1-1105	1-1108	1-1115	1-1122	1-1128	1-1135
1-1139	1-1146	1-1149	1-1152	1-1155	1-1161	1-1166
1-1172	1-1178	1-1181	1-1184	1-1186	1-1202	1-1205
1-1208	1-1211	1-1214	1-1218	1-1224	1-1226	1-1230
1-1233	1-1236	1-1246	1-1252	1-1255	1-1258	1-1261
1-1265	1-1272	1-1276	1-1279	1-1282	1-1286	1-1298
1-1311	1-1324	1-1331	1-1335	1-1337	1-1349	1-1352
1-1359	1-1363	1-1366	1-1368	1-1373	1-1377	1-1379
1-1399	1-1402	1-1407	1-1414	1-1424	1-1427	1-1431
1-1464	1-1467	1-1471	1-1476	1-1479	1-1484	1-1500
1-1509	1-1513	1-1526	1-1529	1-1536	1-1540	1-1553
1-1557	1-1569	1-1572	1-1579	1-1583	1-1587	1-1649
1-1652	1-1656	1-1661	1-1664	1-1667	1-1673	1-1676
1-1680	1-1686	1-1691	1-1707	1-1713	1-1722	1-1753
1-1756	1-1759	1-1779	1-1790	1-1798	1-1801	1-1805
1-1816	1-1819	1-1823	1-1826	1-1847	1-1859	1-1861
1-1864	1-1867	1-1871	1-1879	1-1888	1-1891	1-1895
1-1919	1-1922	1-1926	1-1937	1-2039		
ID8YP	1- 936	1- 938	1- 943#			
IDTST	1- 313#	1- 787#	1- 937	1- 939#		
IR1	1-1294	1-1301#				
IR2	1-1307	1-1311#				
IR2A	1-1310	1-1315#				
IR3	1-1321	1-1333#				
IR3A	1-1329	1-1332	1-1336	1-1338#		
IR4	1-1346	1-1351#				
IR4A	1-1357	1-1360	1-1367	1-1369#		
IR5	1-1369	1-1375#				
IR5A	1-1371	1-1374	1-1378	1-1380#		
MIN1BC	1- 272#	1- 797	1- 930	1- 961	1-1136	1-1227
	1-1411	1-1468	1-1510	1-1554	1-1653	1-1677
MIN3BC	1- 273#	1- 984	1-1006	1-1030	1-1035	1-1068
	1-1173	1-1497	1-1515	1-1542	1-1559	
MIN4BC	1- 274#	1-1131	1-1243	1-1646	1-1658	1-1681
MSG0	1- 347	1-2<12#				
MSG1	1-1993	1-2<14#				
MSG10	1-1842	1-2<30#				
MSG11	1-1874	1-2<31#				
MSG12	1-2194	1-2<56#				
MSG13	1- 351#	1- 552#	1- 353#	1-1898	1-1900#	1-1901
	1-1904#	1-1905	1-1907#	1-1908#	1-1909	1-1911#
						1-2237#
MSG2	1-1996	1-2<16#				
MSG3	1-1726	1-2<17#				
MSG4	1-1738#	1-1742#	1-1746	1-1761#	1-2219#	
MSG5	1-1771#	1-1772	1-2220#			
MSG6	1-1792#	1-1783	1-2221#			
MSG7	1-1809#	1-1810	1-2223#			
MSG8	1-1829#	1-1830	1-2227#			
MSG9	1-1836	1-2228#				
MTAAD	1- 298#	1- 359				
MTAS	1- 302#	1- 368	1- 375#			
MTAV	1- 301#	1- 367	1- 374#			
MTC	1- 306#	1- 409	1- 444	1- 458	1- 494	1- 507#
	1- 514#	1- 515#	1- 516	1- 522#	1- 523	1- 527#
						1- 528

CROSS REFERENCE TABLE S-3

1- 532@	1- 553	1- 537@	1- 538	1- 542@	1- 543	1- 547@
1- 548	1- 552@	1- 553	1- 559@	1- 560	1- 566@	1- 567@
1- 568	1- 574@	1- 575	1- 579@	1- 580	1- 584@	1- 585
1- 591@	1- 592	1- 598@	1- 599@	1- 600	1- 606@	1- 607
1- 611@	1- 612	1- 616@	1- 617	1- 621@	1- 622	1- 626@
1- 627	1- 651@	1- 632	1- 636@	1- 637	1- 644@	1- 645
1- 651@	1- 652@	1- 653	1- 659@	1- 660	1- 666@	1- 667@
1- 668	1- 673@	1- 674	1- 678@	1- 679	1- 683@	1- 684
1- 800	1- 882	1- 890	1- 995	1-1016	1-1106	1-1150
1-1182	1-1400@	1-1209@	1-1259	1-1273@	1-1274@	1-1280
1-1295@	1-1296	1-1297@	1-1308@	1-1309	1-1327@	1-1330
1-1353	1-1355@	1-1358	1-1361	1-1372	1-1425	1-1477
1-1503@	1-1506@	1-1507@	1-1520@	1-1523@	1-1524@	1-1547@
1-1550@	1-1551@	1-1563@	1-1566@	1-1567@	1-1737@	1-1743@
1-1750@	1-1754	1-1799	1-1821@	1-1865	1-1889	1-1982
1-2049	1-2119@	1-2121@	1-2123@	1-2125@	1-2127@	1-2129@
1-2131@	1-2133@					
MTD	1- 309@	1- 437	1- 487	1- 715@	1- 716	1-1530
	1-1669	1-1687	1-1985			1-1573
MTNAD	1- 297@	1- 306				
MTNS	1- 300@	1- 370@	1- 373			
MTNV	1- 299@	1- 369@	1- 372			
MTP	1- 331@	1- 389@	1-1304	1-1305	1-1306	
MTPM	1- 333@	1- 391@	1-1292	1-1293	1-1318	1-1319
	1-1344	1-1345				1-1320
MTRO	1- 310@	1- 362	1- 451	1- 501	1- 726@	1- 727
	1- 731	1- 940	1-1253@	1-1514@	1-1558@	1-1669
	1-1693@	1-1703	1-1709	1-1997		
MTS	-	1- 305@	1- 455	1- 416	1- 466	1- 738
	1- 756	1- 764	1- 771	1- 778	1- 784	1- 803
	1- 839@	1- 842	1- 847	1- 848	1- 851	1- 854
	1- 868	1- 912	1- 958	1- 954	1-1085	1-1147
	1-1179	1-1203@	1-1206	1-1212	1-1216	1-1231
	1-1256	1-1263	1-1277	1-1284	1-1364	1-1375
	1-1570	1-1585	1-1751	1-1757	1-1777	1-1788
	1-1817	1-1824	1-1862	1-1859	1-1886	1-1893
	1-2032	1-2035	1-2063	1-2145		
MTTRP	1- 254	1- 569	1- 374	1- 381	1-1390	1-1933@
MTV	1- 303@	1- 367@	1- 372@	1- 381@	1-1294@	1-1307@
	1-1346@	1-1369@	1-1390@			1-1321@
MTVN	1- 366	1- 372@				
MTVS	1- 304@	1- 368@	1- 373@	1- 382@	1-1293@	1-1305@
	1-1389@					1-1319@
NOP	1- 284@					
NXMT	1-1242	1-1268@				
OCT	1- 327@	1-2181@	1-2191@			
OCTP	1-1973	1-2200@				
OCTPRT	1-1972	1-2174@				
OCT1	1-2176	1-2178@				
OCT2	1-2102@	1-2192				
PAR	1-1491@					
PAR1	1-1533	1-1538@				
PAR2	1-1537	1-1542@				
PAR3	1-1581@					
PAR4	1-1576	1-1580	1-1584@			
PC	1- 293@	1-1948@	1-1992@	1-2020@	1-2028@	1-2053@
	1-2067@	1-2069@	1-2087@	1-2092@	1-2102@	1-2120@
	1-2124@	1-2126@	1-2128@	1-2130@	1-2132@	1-2134@
						1-2136@

CROSS REFERENCE TABLE S-4

	1-2138@	1-2140@	1-2142@	1-2144@	1-2146@	1-2155@	1-2169@
PRINT	1-1949	1-1978@	1-2020@	1-2206@			
PRINT1	1- 329@	1- 383@	1-1994	1-1998@			
PRTMSG	1- 261@	1- 348	1-1727	1-1747	1-1773	1-1784	1-1811
	1-1831	1-1857	1-1843	1-1875	1-1899	1-1997	1-2195
PRTOCT	1- 279@	1-2000	1-2002	1-2004	1-2006	1-2008	1-2010
	1-2012	1-2014	1-2016				
PRTOUT	1- 280@	1-2106	1-2109	1-2111	1-2178	1-2189	
PWRCLR	1- 262@	1- 457	1- 465	1- 472	1- 479	1- 486	1- 493
	1- 500	1- 621	1- 862	1- 871	1- 899	1- 921	1- 949
	1- 977	1- 998	1-1019	1-1098	1-1125	1-1163	1-1187
	1-1215	1-1462	1-1283	1-1301	1-1315	1-1338	1-1360
	1-1584	1-1717	1-1813	1-1868	1-1892		
RBUF	1- 896	1- 918	1- 974	1-1010	1-1100@	1-1113	1-1119@
	1-1120	1-1140@	1-1141@	1-1153	1-1158@	1-1159	1-1415
	1-1417	1-1428	1-1432	1-1458	1-1481	1-1662	1-1665
	1-2137	1-2441@					
RBUFCA	1- 271@	1- 890	1- 905	1- 962	1-1005	1-1102	1-1143
	1-1421	1-1473	1-1516	1-1560	1-1657	1-1682	
READ	1- 264@	1- 563	1-1007	1-1103	1-1144	1-1422	1-1474
	1-1659	1-1654					
RETURN	1- 330@	1- 376@	1-2027@	1-2040			
REWIND	1- 266@	1- 853	1- 865	1- 876	1- 922	1- 955	1- 978
	1-1002	1-1027	1-1043	1-1176	1-1222	1-1720	1-1920
	1-2034						
RGRTST	1-1953	1-2082@					
RGSTST	1-1952	1-2080@					
ROTCMP	1- 278@	1-1612	1-1616	1-1624	1-1630		
RD	1- 206@	1- 387@	1- 388@	1- 389	1- 390@	1- 391	1- 393@
	1- 394@	1- 395	1- 396@	1- 398	1- 399@	1-1191@	1-1192
	1-1325@	1-1326@	1-1327	1-1353@	1-1354@	1-1355	1-1392@
	1-1393@	1-1394	1-1404@	1-1405	1-1408	1-1415@	1-1416@
	1-1417	1-1428@	1-1429	1-1432	1-1436@	1-1437@	1-1438
	1-1449@	1-1450@	1-1451	1-1452@	1-1453	1-1457@	1-1458@
	1-1459@	1-1460	1-1480@	1-1492	1-1501@	1-1502@	1-1503
	1-1517@	1-1518@	1-1519@	1-1520	1-1530@	1-1531@	1-1534
	1-1538	1-1544@	1-1545@	1-1546@	1-1547	1-1561@	1-1562@
	1-1563	1-1573@	1-1574@	1-1577	1-1581	1-1611@	1-1613
	1-1617@	1-1619	1-1623@	1-1625	1-1629@	1-1631	1-1632
	1-1634@	1-1635@	1-1636@	1-1637	1-1648@	1-1670@	1-1674
	1-1687@	1-1688@	1-1689	1-1702@	1-1705@	1-1708@	1-1711@
	1-1734@	1-1735	1-1767@	1-1768	1-1769@	1-1770	1-1851@
	1-1854@	1-1915@	1-1916@	1-2152	1-2153@	1-2154	1-2160@
	1-2161@	1-2163@	1-2164	1-2156@	1-2167@	1-2168@	
R1	1- 287@	1- 356@	1- 359@	1- 360	1- 361@	1- 397@	1- 398@
	1- 400	1-1481@	1-1482	1-1485	1-1601@	1-1602	1-1605@
	1-1614@	1-1616	1-1620@	1-1622	1-1626@	1-1628	1-1632@
	1-1635@	1-1636	1-1659@	1-1671@	1-2151	1-2152@	1-2154@
	1-2164@	1-2155@	1-2168				
R2	1- 208@	1- 347@	1- 355@	1- 360@	1- 362	1- 803@	1- 842@
	1- 847@	1- 854@	1- 964@	1-1248@	1-1726@	1-1746@	1-1772@
	1-1785@	1-1910@	1-1830@	1-1836@	1-1842@	1-1874@	1-1998@
	1-1978@	1-1979@	1-1980@	1-1981@	1-1982@	1-1983@	1-1984@
	1-1985@	1-1986@	1-1987@	1-1988@	1-1989@	1-1993@	1-1996@
	1-1999@	1-2001@	1-2003@	1-2005@	1-2007@	1-2009@	1-2011@
	1-2013@	1-2015@	1-2035@	1-2049@	1-2063@	1-2084	1-2099
	1-2100	1-2103	1-2105	1-2112@	1-2175	1-2179@	1-2180@

CROSS REFERENCE TABLE S-5

R3	1- 2182@	1-2183@	1-2184@	1-2185	1-2186@	1-2190@	1-2194@
	1- 289@	1- 804@	1- 843@	1- 855@	1- 965@	1-1249@	1-2036@
R4	1-2050@	1-2064@	1-2084	1-2151@	1-2153		
	1- 290@	1- 805@	1- 844@	1- 856@	1- 966@	1-1250@	1-2037@
R5	1- 291@	1-2083@	1-2088@				
SAVE	1- 344@	1-1978	1-1999	1-2001	1-2003	1-2005	1-2007
	1-2009	1-2011	1-2013	1-2015			
SCOPE	1- 257@	1- 407	1- 414	1- 421	1- 428	1- 435	1- 442
	1- 449	1- 456	1- 464	1- 471	1- 478	1- 485	1- 492
	1- 499	1- 506	1- 513	1- 521	1- 526	1- 531	1- 536
	1- 541	1- 546	1- 551	1- 557	1- 565	1- 573	1- 578
	1- 583	1- 590	1- 597	1- 605	1- 610	1- 615	1- 620
	1- 625	1- 630	1- 635	1- 643	1- 650	1- 658	1- 665
	1- 672	1- 677	1- 682	1- 689	1- 701	1- 713	1- 725
	1- 736	1- 743	1- 749	1- 755	1- 763	1- 770	1- 776
	1- 783	1- 794	1- 827	1- 854	1- 875	1- 929	1- 954
	1- 983	1-1001	1-1024	1-1031	1-1126	1-1170	1-1190
	1-1221	1-1240	1-1268	1-1290	1-1302	1-1316	1-1342
	1-1385	1-1434	1-1456	1-1491	1-1588	1-1641	1-1701
	1-1719	1-1749	1-1760	1-1766	1-1775	1-1786	1-1793
	1-1808	1-1920	1-1828	1-1844	1-1872	1-1876	1-1896
SCOPEA	1-1450	1-2025@					
SCOPEB	1-2026	1-2029@					
SCPRD	1-2031	1-2053	1-2040@				
SELECT	1- 269@	1- 737	1- 777	1-1322	1-1347	1-1647	1-1776
	1-1787	1-1814	1-1845	1-1877			
SP	1- 292@	1- 346@	1- 377@	1-1291@	1-1303@	1-1317@	1-1343@
	1-1586@	1-1936	1-1944@	1-1945@	1-1946@	1-1947@	1-1948
	1-1979	1-2027	1-2029	1-2054@	1-2068@	1-2086@	
SPACEB	1- 268@	1- 906	1-1070	1-1076	1-1097	1-1137	1-1228
	1-1412	1-1459	1-1511	1-1555	1-1654	1-1678	
SPACEF	1- 267@	1- 681	1-1047	1-1058			
SR	1- 282@	1- 557	1- 365	1- 387	1- 393	1- 695	1- 707
	1- 719	1- 761@	1- 935	1-1109	1-1111@	1-1117	1-1156
	1-1241	1-1492	1-1504@	1-1521@	1-1532@	1-1548@	1-1564@
	1-1575@	1-1589@	1-1694	1-1723	1-1729	1-1840	1-1990
	1-2017	1-2025	1-2200				
START	1- 295	1- 345@					
STCB12	1-1955	1-2119@					
S1CEF	1-1958	1-2125@					
STCRD	1-1957	1-2123@					
STCRW	1-1959	1-2127@					
STCSB	1-1961	1-2151@					
STCSF	1-1960	1-2129@					
STCSL	1-1962	1-2153@					
STCWWT	1-1956	1-2121@					
TABLE	1-1947	1-1749@					
TAMD	1- 358	1- 360@	1- 363				
TBC	1- 691@	1- 698					
TCOL	1- 335@	1- 397	1- 400	1-1821			
TCRD	1- 336@	1-1496@	1-1451@	1-1517	1-1561	1-2123	
TCRS	1- 340@	1-2151					
TCRW	1- 342@	1-1953	1-2127				
TCSF	1- 339@	1-2129					
TCSL	1- 332@	1- 395@	1-1191	1-1197	1-1449	1-1734	1-1767
	1-2153						
TCSR	1- 312@	1-1912	1-2098@	1-2203			

CROSS REFERENCE TABLE S-6

TCWE	1- 341#							
TCWF	1- 338#	1-1525	1-2125					
TCWT	1- 337#	1-1474	1-1436	1-1445#	1-1447	1-1453#	1-1501	
	1-1544	1-2121						
TDB	1- 715#	1- /22						
TDBR	1- 311#	1-1914#	1-2205#					
TEMP	1- 315#	1- 690#	1- 691	1- 692	1- 697#	1- 702#	1- 703	
	1- 704	1- /09#	1- 714#	1- 715	1- 716	1- 721#	1-1197#	
	1-1198#	1-1199#	1-1200	1-1391#	1-1393	1-1405	1-1429	
	1-1435#	1-1440#	1-1441	1-1443#	1-1460#	1-1461	1-1472	
	1-1598#	1-1600#	1-1601	1-1607#	1-1608#	1-1610	1-1611	
	1-1614	1-1620	1-1626	1-1642	1-1643	1-1696#	1-1740#	
	1-1745#	1-1750	1-1762#	1-1763	1-1770#	1-1771	1-1782	
	1-1809	1-1829	1-1933	1-1936#	1-1938#	1-1988		
TEMPP	1- 316#	1-1934#	1-1939					
TEMPS	1- 317#	1-1933#	1-1938					
TMA	1- 705#	1- 710						
TMRT	1-1494	1-1591	1-1697	1-1701#				
TMTNFL	1- 314#	1- 378#	1- 793#	1-1718#	1-1839#	1-2030		
TOP	1-1954	1-2098#						
TOP1	1-2100#	1-2107	1-2113					
TOP2	1-2104	1-2108#						
TRAP34	1- 248	1-1944#						
TREOF	1-1112	1-1117#						
TRLE	1-1110	1-1116	1-1125#					
TSR	1- 767	1- //6#						
TSTB	1-2081	1-2083#	1-2089	1-2091				
TSTCUR	1- 256#	1- /95	1- 808	1- 828	1- 831	1- 834	1- 866	
	1- 885	1- /07	1- 933	1- 969	1- 987	1-1008	1-1025	
	1-1028	1-1033	1-1038	1-1041	1-1044	1-1048	1-1059	
	1-1071	1-1077	1-1092	1-1095	1-1098	1-1104	1-1127	
	1-1134	1-1158	1-1145	1-1171	1-1177	1-1201	1-1210	
	1-1223	1-1229	1-1245	1-1271	1-1275	1-1323	1-1328	
	1-1348	1-1531	1-1356	1-1398	1-1401	1-1413	1-1423	
	1-1463	1-1466	1-1470	1-1475	1-1499	1-1508	1-1512	
	1-1525	1-1552	1-1556	1-1568	1-1648	1-1651	1-1655	
	1-1660	1-1679	1-1685	1-1721	1-1797	1-1815	1-1822	
	1-1846	1-1860	1-1878	1-1918	1-1921			
TSTEND	1-1725	1-1731	1-1873	1-1898#				
TSTEOF	1- 275#	1- 012	1- 822	1- 897	1- 900	1- 909	1-1050	
	1-1061	1-1073						
TSTIN	1-2080#	1-2082#	1-2085#					
TSTL	1-2085	1-2088#						
TSTRDY	1-1969	1-2063#						
TSTRGR	1- 260#	1- 806	1- 845	1- 857	1- 967	1-1251		
TSTRGS	1- 259#	1-2038	1-2052	1-2066				
T7CH	1- 762	1- /70#						
USLEN	1- 343#	1-1739#	1-1744#	1-1763				
USS	1-1741	1-1746#	1-1764					
USS1	1-1736	1-1742#						
WAITTR	1- 276#	1- 010	1- 877	1- 923	1- 956	1- 979	1-1003	
	1-1185	1-1225	1-1254	1-1370	1-1923	1-1925		
WBR	1-1392#	1-1395	1-1444					
WBRS	1-1391#	1-1448						
WBRS1	1-1405#	1-1409						
WBRS2	1-1416#	1-1418						
WBRS3	1-1429#	1-1453						
WBRS4	1-1442	1-1445#						

CROSS REFERENCE TABLE S-7

WBR5	1-1482#	1-1486						
WBUF	1- 818	1- 946	1- 989	1-1082	1-1129#	1-1130#	1-1392	
	1-1394	1-1404	1-1408	1-1495#	1-1496#	1-1642#	1-1643#	
	1-1644#	1-1662	1-1665	1-1852	1-2135	1-2239#	1-2240	
WBUFCA	1- 270#	1- 798	1- 931	1- 985	1-1031	1-1036	1-1069	
	1-1132	1-1174	1-1244	1-1397	1-1498	1-1543	1-1645	
	1-1849	1-1881						
WREOF	1- 265#	1- 799	1- 830	1-1040	1-1094	1-1175	1-1350	
WRITE	1- 263#	1- 932	1- 986	1-1032	1-1037	1-1133	1-1247	
	1-1400	1-1465	1-1650	1-1796	1-1850	1-1883		
XCLOR	1- 277#	1-1615	1-1621	1-1627				
*	1- 242#	1- 246	1- 247#	1- 250#	1- 294#	1- 296#	1- 344#	
	1- 401	1- 410	1- 417	1- 424	1- 431	1- 438	1- 445	
	1- 452	1- 459	1- 467	1- 474	1- 481	1- 488	1- 495	
	1- 502	1- 509	1- 517	1- 524	1- 529	1- 534	1- 539	
	1- 544	1- 549	1- 554	1- 551	1- 569	1- 576	1- 581	
	1- 586	1- 593	1- 601	1- 608	1- 613	1- 618	1- 623	
	1- 628	1- 633	1- 638	1- 646	1- 654	1- 661	1- 669	
	1- 675	1- 680	1- 685	1- 693	1- 696	1- 705	1- 708	
	1- 717	1- 720	1- 728	1- 732	1- 739	1- 745	1- 751	
	1- 757	1- 765	1- 772	1- 779	1- 785	1- 801	1- 813	
	1- 816	1- 819	1- 823	1- 837	1- 840	1- 849	1- 852	
	1- 860	1- 869	1- 883	1- 898	1- 891	1- 894	1- 897	
	1- 901	1- 910	1- 913	1- 916	1- 919	1- 941	1- 944	
	1- 947	1- 959	1- 972	1- 975	1- 990	1- 993	1- 996	
	1-1011	1-1014	1-1017	1-1051	1-1054	1-1062	1-1065	
	1-1074	1-1080	1-1083	1-1096	1-1107	1-1114	1-1118	
	1-1121	1-1148	1-1151	1-1154	1-1157	1-1160	1-1165	
	1-1180	1-1183	1-1193	1-1195	1-1204	1-1207	1-1213	
	1-1217	1-1252	1-1255	1-1257	1-1260	1-1264	1-1278	
	1-1281	1-1285	1-1334	1-1352	1-1365	1-1376	1-1406	
	1-1426	1-1430	1-1439	1-1478	1-1483	1-1493	1-1505	
	1-1522	1-1528	1-1535	1-1539	1-1549	1-1565	1-1571	
	1-1578	1-1582	1-1586	1-1590	1-1603	1-1606	1-1663	
	1-1666	1-1672	1-1675	1-1690	1-1695	1-1704	1-1706	
	1-1710	1-1712	1-1724	1-1730	1-1752	1-1755	1-1758	
	1-1778	1-1789	1-1800	1-1804	1-1818	1-1825	1-1853	
	1-1855	1-1856	1-1858	1-1863	1-1866	1-1870	1-1887	
	1-1890	1-1894	1-1913	1-1917	1-1991	1-1995	1-2018	
	1-2101	1-2201	1-2204	1-2240#				

CROSS REFERENCE TABLE C-1

• ABS. 054496 1- 258

SECTION II

RELIABILITY PROGRAM

1
2 .TITLE P468
3 .ENABL CDR
4
5 ABSTRACT
6
7
8 *****
9 * WP //PDP11 DATA RELIABILITY PROGRAM (7 AND 9 TRACK) *
10 *PROGRAM LISTING # 708.0 *
11 *****
12
13 THE WP DATA RELIABILITY PROGRAM COLLECTS STATISTICAL
14 INFORMATION PERTAINING TO THE DATA RELIABILITY OF THE TAPE SYSTEM
15 WHEN RUN FOR EXTENDED PERIODS OF TIME. IT USES A NUMBER OF
16 DIFFERENT PARAMETERS CONTROLLING DATA PATTERNS, PARITY, DENSITY
17 RECORD LENGTHS, WRITING AND READING SEQUENCES AND STOPPING MODES
18 (NONSTOP, START-STOP, RANDOM STALL DELAY).
19
20 12. REQUIREMENTS
21
22 12.1 EQUIPMENT
23
24 PDP-11 WITH TAPE CONTROLLER AND 1 TO 8 TAPE UNITS (7 AND/OR 9 TRACK)
25
26 12.2 STORAGE
27
28 12.2.1 PROGRAM STORAGE
29
30 THE ROUTINE REQUIRES 4K OF MEMORY.
31
32 12.3 PRELIMINARY PROGRAMS
33
34 THE 466.X TAPE INSTRUCTION TEST DIAGNOSTIC MUST RUN
35 PROPERLY BEFORE ATTEMPTING TO USE THIS PROGRAM.
36
37 13. LOADING PROCEDURE
38
39 13.1 METHOD
40
41 PROCEDURE FOR NORMAL BINARY TAPES SHOULD BE FOLLOWED
42
43 1. ABSOLUTE LOADER MUST BE IN MEMORY.
44 2. PLACE BINARY TAPE IN READLN.
45 3. LOAD ADDRESS #7500 (* DETERMINED BY LOCATION OF LOADER)
46 4. PRESS "START" (PROGRAM WILL LOAD).
47
48 14. STARTING PROCEDURE
49
50 14.1 CONTROL SWITCH SETTINGS
51
52 FOR INITIAL OPERATION OF PROGRAM ALL SWITCHES SHOULD BE = 0
53 (OR DOWN).
54
55 14.2 STARTING ADDRESS
56
57 200 - BASIC TEST (AUTOMATIC PARAMETER AND UNIT SELECTION)

FOR PDP-II, SET CONTROLLER
TD BUS LEVEL 5

58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114

204 - OPERATOR CONTROLLED PARAMETER TEST (WITH 4K MEMORY AVAILABLE)
210 - OPERATOR CONTROLLED PARAMETER TEST (WITH 8K MEMORY AVAILABLE)

4.3 PROGRAM AND/OR OPERATOR ACTION

LOAD PROGRAM INTO MEMORY
SET DESIRED TU10 TAPE UNITS ON-LINE
LOAD STARTING ADDRESS 200 (204 OR 210 TO SELECT PARAMETERS AND UNITS)
PRESS START-PROGRAM WILL BEGIN TESTING FOR LOAD ADDRESS OF 200 OTHERWISE
SELECT TAPE UNITS (REFERENCE 4.3.1.1)
SELECT PARAMETERS (REFERENCE 4.3.2)
TYPE CARriage RETURN AND PROGRAM WILL BEGIN TESTING.

4.3.1 TAPE UNIT SELECTION

STARTING THE PROGRAM AT 200 WILL RESULT IN AUTOMATIC SELECTION OF THE UNITS TO BE TESTED (REFERENCE 4.3.1.2) OTHERWISE STARTING AT 204 OR 210 WILL ALLOW OPERATOR TO SELECT UNITS.

THE PROGRAM WILL TYPE "SELECT UNITS". ANY CONFIGURATION OF 1 TO 8 UNITS MAY BE SELECTED BY TYPING THE UNIT NUMBERS ON THE TELETYPE. ANY SEQUENCE OF NUMBERS MAY BE TYPED. AFTER EACH NUMBER IS TYPED A COMMA (,) WILL BE PRINTED. TYPING THE SAME UNIT NUMBER TWICE WILL CAUSE THAT UNIT NUMBER TO BE DELETED. TYPING ANY KEY OTHER THAN 0 THRU 7 WILL CAUSE A QUESTION MARK (?) TO BE PRINTED AND THAT KEY WILL BE IGNORED.

TO TERMINATE UNIT SELECTION TYPE A CARriage RETURN. WHEN CARriage RETURN IS TYPED THE PROGRAM WILL CONTINUE TO THE "PARAMETER SELECTION" UNLESS NO UNITS WERE SELECTED AND IN THAT EVENT WILL RETURN TO THE BEGINNING OF "SELECT UNITS".

4.3.1.1 TAPE UNIT SELECTION EXAMPLES

SELECT UNITS 3,4,5
SELECT UNITS 5,3,4

IN EITHER CASE, UNITS 3,4,5 ARE SELECTED.

SELECT UNITS

A CARriage RETURN WAS TYPED WITH NO UNITS SELECTED.

SELECT UNITS 1,9?,1,2

ONLY UNIT 2 SELECTED, UNIT 1 WAS DELETED (TYPED TWICE) AND THE 9 WAS IGNORED.

4.3.1.2 STARTING AT 200 WILL RESULT IN AUTOMATIC SELECTION OF UNITS TO BE TESTED. A UNIT WILL BE SELECTED FOR TESLING IF IT MEETS THE FOLLOWING CRITERIA:
1. IT IS ON-LINE
2. IT IS WRITE ENABLED

115
116 IF THE ABOVE CRITERIA ARE NOT MET BY AT LEAST ONE (1) UNIT,
117 OPERATOR SELECTION WILL BE REQUIRED (REFERENCE 4.3.1).
118
119 4.3.2 PARAMETER SELECTION
120
121 STARTING THE PROGRAM AT 200 WILL RESULT IN AN AUTOMATIC SELECTION
122 OF TEST PARAMETERS (REFERENCE 4.3.2.10) OTHERWISE STARTING AT
123 ADDRESS 204 OR 210 WILL ALLOW OPERATOR TO SELECT PARAMETERS.
124 FOR 7 TRACK UNITS THERE ARE 7 PARAMETERS TO BE CONTROLLED BY CR
125 THE OPERATOR. THEY ARE: TEST NUMBER, PATTERN, PARITY, DENSITY, CR
126 RECORD LENGTH, WRITE MODE, AND READ MODE. FOR 9 TRACK UNITS CR
127 THERE ARE 5 OPERATOR CONTROLLED PARAMETERS. THEY ARE ALL THE CR
128 7 TRACK PARAMETERS JUST REFERENCED EXCEPT PARITY AND DENSITY. CR
129 IN EITHER CASE, THE PROGRAM PRINTS THE FOLLOWING: CR
130
131 "TEST PAT PAR DEN RLS WMO RMO"
132
133 TEST=TEST NUMBER
134 PAT=PATTERN
135 PAR=PARITY
136 DEN=DENSITY
137 RLS=RECORD LENGTH SEQUENCE
138 WMO=WRITE START/STOP MODE
139 RMO=READ START/STOP MODE
140
141 4.3.2.1 TEST NUMBER
142
143 THERE ARE 6 TESTS AVAILABLE FOR SELECTION (0 THRU 5).
144
145 TEST DESCRIPTION
146
147 0 WRITE 1 RECORD, REPEAT ON ALL UNITS, CONTINUE TO END
148 OF TAPE.
149
150 1 WRITE 256 RECORDS, REPEAT FOR ALL UNITS, CONTINUE TO END
151 OF TAPE.
152
153 2 WRITE 256 RECORDS, REPEAT FOR ALL UNITS, BACKSPACE 256
154 RECORDS, REPEAT FOR ALL UNITS, READ 256 RECORDS, REPEAT
155 FOR ALL UNITS, CONTINUE TO END OF TAPE.
156
157 3 WRITE 1 RECORD, REPEAT FOR ALL UNITS, BACKSPACE, REPEAT
158 FOR ALL UNITS, READ 1 RECORD, REPEAT FOR ALL UNITS,
159 CONTINUE TO END OF TAPE.
160
161 4 WRITE 1 RECORD, REPEAT FOR ALL UNITS, REPEAT FOR 256
162 RECORDS, BACKSPACE 256 RECORDS, REPEAT FOR ALL UNITS,
163 READ 1 RECORD, REPEAT FOR ALL UNITS, REPEAT FOR 256
164 RECORDS, CONTINUE TO END OF TAPE.
165 NOTE: THIS TEST WILL NOT FUNCTION PROPERLY WHEN OPERATING
166 ON A DUAL DENSITY SYSTEM (NRZ/PE) WHOSE DENSITY SELECTION
167 IS COMPUTER CONTROLLED.
168
169 5 READ 1 RECORD, REPEAT FOR ALL UNITS, CONTINUE TO END
170 OF TAPE.
171

172	1 4.0.2.2.1 PATTERN (7 TRACK)	CR
173	THERE ARE 8 DATA PATTERNS AVAILABLE FOR SELECTION (0 THRU 7) WITH EACH	
174	PARITY.	
175		
176	PATTERN DESCRIPTION	DATA
177	0 (EVEN) HIGH FREQUENCY OUTSIDE SKEW	01
178		01
179		ETC
180	0 (ODD) HALF FREQUENCY OUTSIDE SKEW	01
181		00
182		01
183		00
184		ETC
185	1 (EVEN) SLIDING "0"	37
186		57
187		67
188		73
189		75
190		76
191		ETC
192	1 (ODD) SLIDING "1"	40
193		20
194		10
195		4
196		2
197		1
198		ETC
199	2 (EVEN) HIGH FREQUENCY ALTERNATING	25
200	TRACKS	25
201		ETC
202	2 (ODD) HIGH FREQUENCY ALTERNATING	52
203	TRACKS	52
204		ETC
205	3 (EVEN) HALF FREQUENCY OUTSIDE TRACK	77
206	HIGH FREQUENCY INSIDE TRACKS	76
207		77
208		76
209		ETC
210	3 (ODD) HIGH FREQUENCY OUTSIDE TRACK	01
211	HIGH FREQUENCY INSIDE TRACKS	77
212		01
213		77
214		ETC
215	PATTERN DESCRIPTION	DATA
216	4 (EVEN) INCREMENTING PATTERN	01
217	(NO ALL 0'S)	02
218		
219		
220		
221		
222		
223		
224		
225		
226		
227		
228		

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-4

229		03
230		'
231		'
232		77
233		
234	4 (ODD) INCREMENTING PATTERN	00
235	INCLUDING ALL 0'S)	01
236		02
237		'
238		'
239		'
240		77
241		
242	5 (EVEN) THREE 0'S EACH TRACK EVERY	37
243	6TH WORD	37
244		37
245		57
246		57
247		57
248		67
249		67
250		67
251		73
252		73
253		73
254		75
255		75
256		75
257		76
258		76
259		76
260		ETC
261		
262	5 (ODD) THREE 1'S EACH TRACK EVERY	40
263	6TH WORD	40
264		40
265		20
266		20
267		20
268		10
269		10
270		10
271		04
272		04
273		04
274		02
275		02
276		02
277		01
278		01
279		01
280		ETC
281		
282	6 (ODD,EVEN) ALL 1'S	77
283		77
284		ETC
285		

286	7 (EVEN) RANDOM (NO ALL 0'S)	?	
287	7 (ODD) RANDOM (INCLUDING ALL 0'S)	?	
288			
289			
290	4.3.2.2.2 PATTERN (9 TRACK)		CR
291			CR
292	THERE ARE 8 DATA PATTERNS AVAILABLE FOR SELECTION (0 THRU 7)		CR
293			CR
294	PATTERN DESCRIPTION	DATA CHANNELS	CR
295			CR
296	4 INCREMENTING PATTERN	000 040	CR
297		001 200	CR
298		002 002	CR
299		003 202	CR
300		*	CR
301		*	CR
302		*	CR
303		377 777	CR
304		ETC. ETC.	CR
305			
306	5 EACH CHANNEL 3 BITS	000 040	CR
307		000 040	CR
308		000 040	CR
309		200 004	CR
310		200 004	CR
311		200 004	CR
312		100 010	CR
313		100 010	CR
314		100 010	CR
315		040 020	CR
316		040 020	CR
317		040 020	CR
318		020 100	CR
319		020 100	CR
320		020 100	CR
321		010 001	CR
322		010 001	CR
323		010 001	CR
324		004 400	CR
325		004 400	CR
326		004 400	CR
327		002 002	CR
328		002 002	CR
329		002 002	CR
330		001 200	CR
331		001 200	CR
332		001 200	CR
333		ETC. ETC.	CR
334			
335	6 HIGH FREQUENCY ALL CHANNELS	377 777	CR
336		377 777	CR
337		ETC. ETC.	CR
338			
339	7 RANDOM	?	CR
340		?	
341	4.3.2.3 PARITY (7 TRACK ONLY)		CR
342			

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-6

400
401 RMO DESCRIPTION
402
403 0 NONSTOP - NO WAITING BETWEEN READ OPERATIONS. NEW
404 COMMAND IS ISSUED WHEN CU READY SETS.
405
406 1 START/STOP - FULL STOP BETWEEN READ OPERATIONS. NEW
407 COMMAND IS ISSUED WHEN TU READY SETS.
408
409 2 RANDOM - FULL STOP WITH RANDOM DELAY (1-256 MILLISECONDS)
410
411
412
413 4.3.2.8 FINAL TEST SELECT APPROVAL
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456

402 RMO DESCRIPTION
403 0 NONSTOP - NO WAITING BETWEEN READ OPERATIONS. NEW
404 COMMAND IS ISSUED WHEN CU READY SETS.
405
406 1 START/STOP - FULL STOP BETWEEN READ OPERATIONS. NEW
407 COMMAND IS ISSUED WHEN TU READY SETS.
408
409 2 RANDOM - FULL STOP WITH RANDOM DELAY (1-256 MILLISECONDS)

4.3.2.8 FINAL TEST SELECT APPROVAL

AFTER SELECTING RMO. IF ALL PARAMETERS SELECTED ARE LEGAL, "OK" WILL BE PRINTED. IF THE PARAMETERS SELECTED STILL CORRESPOND TO THE OPERATORS INTENTIONS HE MUST TYPE A CARRIAGE RETURN TO SAVE THE PARAMETERS. TYPING ANY OTHER KEY NOW, OR IN FACT AT ANY TIME DURING PARAMETER SELECTION TYPING AN ILLEGAL KEY WILL CAUSE THE PRESLNT PARAMETERS TO BE DELETED AND A NEW PARAMETER SELECTION TO BE INITIATED. UP TO TEN SETS OF PARAMETER SELECTIONS CAN BE MADE. EACH SET WILL BE EXECUTED AFTER THE PREVIOUS SET REACHES END OF TAPE. TO TERMINATE PARAMETER SELECTION A SECOND CARRIAGE RETURN MUST BE TYPED AFTER SELECTING A SET OF PARAMETERS.

4.3.2.9 TEST SELECTION EXAMPLES

427 TST PAT PAR DEN RLS WMO RMO
428 3 2 0 2 1 0 0 OK (CR)
429 3 K?
430 0 0 1 8 2 2 2 OKX?
431 0 1 1 8 2 1 0 OK (CR)
432
433 (CR)

TWO PARAMETERS SETS WERE SELECTED BY THE ABOVE SEQUENCE

TEST3, PATTERN 2, EVEN PARITY, 200 BP1, MAXIMUM RECORD LENGTH, WRITE NONSTOP, AND READ NONSTOP.
TEST 0, PATTERN 1, ODD PARITY, 800 BP1, VARYING RECORD LENGTH (MIN TO MAX), WRITE START/STOP, READ NONSTOP,
(NOTE) EVEN THOUGH TEST 0 IS A WRITE ONLY TEST, ALL PARAMETERS MUST BE SATISFIED.) (IN THIS CASE RMO HAS NO EFFECT)

IN THE SECOND PARAMETER SET A "K" WAS TYPED WHICH WAS ILLEGAL AND THE SET WAS REINITIALIZED,

IN THE THIRD PARAMETER SET AN "X" WAS TYPED INSTEAD OF A CARRIAGE RETURN AND THE PARAMETERS WERE IGNORED. AFTER AT LEAST ONE GOOD SET WAS SELECTED A CARRIAGE RETURN WAS TYPED AT THE BEGINNING OF THE PARAMETER SELECTION AND THE PROGRAM WOULD START TESTING.

NOTE: IF NO 7 TRACK UNITS ARE AVAILABLE FOR TESTING, THE PROGRAM WILL PRINT XXX IN THE PARITY AND DENSITY POSITIONS SINCE THEIR SPECIFICATION IS NOT REQUIRED FOR 9 TRACK UNITS.

4.3.2.10 AUTOMATIC PARAMETER SELECTION

457
458 STARTING AT 200 WILL CAUSE THE FOLLOWING TEST PARAMETERS
459 TO BE SELECTED AUTOMATICALLY]
460
461 TST PAT PAR DEN RLS WMO RMO
462 3 7 1 C 2 1 1
463 3 0 0 8 3 1 1
464 2 1 1 5 2 0 0
465 NOTE: PARITY AND DENSITY PARAMETERS APPLICABLE TO 7 TRACK ONLY CR
466
467 5.0 OPERATING PROCEDURE
468
469 5.1 OPERATIONAL SWITCH SETTINGS
470
471 THE OPERATIONAL SWITCH SETTINGS ARE USED TO:
472
473 A. ALTER ERROR RECOVERY PROCEDURES
474
475 B. DELETE ERROR PRINTOUTS
476
477 C. CAUSE A TEST SEQUENCE TO BE REPEATED WITH A VARIATION
478 THE PATTERN, RECORD LENGTH SEQUENCE, WRITE MODE, OR READ MODE
479
480 5.1.1 SWITCHES TO ALTER ERROR RECOVERY
481
482 THE FUNCTION PERFORMED IS WITH THE SWITCH IN THE "1" (OR UP)
483 POSITION,
484
485 SW FUNCTION PURPOSE
486
487 4 DELETE READ RE-TRY USE OF THIS SWITCH WILL CAUSE
488 DELETION OF THE NORMAL SEQUENCE
489 OF TRYING TO RE-READ A RECORD
490 AFTER A READ ERROR. THIS WOULD
491 BE USEFUL FOR SCOPING READ
492 OPERATIONS.
493
494 5 DELETE WRITE XIRG USE OF THIS SWITCH WILL CAUSE
495 RECORDS WITH WRITE ERRORS TO
496 BE LEFT ON TAPE. THE READ PASS
497 WITH DATA TIMEOUTS SELECTED
498 WOULD BE USEFUL FOR DETERMINING
499 WRITE ERROR ORIGINS.
500
501 6 WRITE STATISTICAL USE OF THIS SWITCH WILL CAUSE
502 RECOVERY A BACKSPACE 2 RECORDS, SPACE
503 FORWARD 1 RECORD, REWRITE RECORD
504 SEQUENCE TO BE USED INSTEAD
505 OF WRITE XIRG SO THAT THE RECORD
506 WILL BE REWRITTEN ON APPROXIMATELY THE SAME AREA OF TAPE
507 WHERE THE WRITE ERROR OCCURRED. THIS METHOD KEEPS THE INTER-
508 RECORD GAP FROM GETTING LARGER, DATA IS WRITTEN OVER THE SAME
509 SPOT ON TAPE TO TRY AND FIND BAD TAPE.
510
511
512

514 | 5.1.2 SWITCHES TO CONTROL ERROR PRINTOUTS
515 |
516 | THE FUNCTION PERFORMED IS WITH THE SWITCH IN THE "1" (OR
517 | UP) POSITION.
518 |
519 | SW FUNCTION PURPOSE
520 | 13 SUPPRESS ERROR THE STATISTICS CONCERNING THE
521 | PRINTOUT NUMBER AND TYPES OF ERRORS WILL
522 | BE PRINTED WHEN THE TAPE UNIT
523 | REACHES END OF TAPE, FOR LONG
524 | PERIODS OF TESTING (OVERNIGHT, ETC)
525 | IT MAY BE SUFFICIENT TO RECEIVE
526 | THIS INFORMATION AND NOT HAVE A
527 | TYPEOUT EACH TIME AN ERROR OCCURRED
528 |
529 | 8 PRINT ERROR STATISTICS AFTER COMPLETION OF EVERY RECORD
530 | LENGTH SEQUENCE INSTEAD OF AFTER
531 | END OF TAPE AS IS NORMAL.
532 |
533 |
534 |
535 | 5.1.3 SWITCH TO ALTER TEST PATTERNS
536 |
537 | SW FUNCTION PURPOSE
538 | 0 CHANGE PATTERN AFTER COMPLETION OF A TEST SE-
539 | QUENCE REPEAT WITH NEXT PATTERN,
540 | UNTIL PATTERN 7 IS COMPLETED.
541 |
542 | THIS FEATURE IS USEFUL FOR TESTING MANY COMBINATIONS OF TEST
543 | PATTERNS WITHOUT REQUIRING THE OPERATOR TO TYPE IN A LARGE
544 | NUMBER OF PARAMETERS.
545 |
546 | EXAMPLE: TST PAT PAR DEN RLS WMO RMO
547 | 3 2 0 2 1 0 0
548 | 4 6 0 2 0 0 0
549 |
550 |
551 | WITH SW0=1
552 | TEST 3 WILL BE EXECUTED 6 TIMES (PATTERNS 2-7)
553 | AND THEN TEST 4 WILL BE EXECUTED 2 TIMES (PATTERNS 6,7)
554 | NOTE: XXX PRINTED FOR PARITY AND DENSITY IF ONLY 9 TRACK UNITS CR
555 |
556 | 6. ERRORS
557 |
558 | 6.1 WRITE ERRORS
559 |
560 | THE FOLLOWING ERROR TYPEOUTS ARE POSSIBLE DURING A WRITE
561 | OPERATION.
562 |
563 | A. WRITE STATUS ERROR
564 |
565 | COMD STATUS RECORD LENGTH EXPECTED ACTUAL
566 | XXXXXX XXXXXX
567 |
568 | THIS WILL OCCUR IF ERROR (BIT 15 OF COMMAND REGISTER) SETS
569 | ON A WRITE COMMAND. THE CONTENTS OF THE COMMAND AND STATUS
570 | REGISTERS IS PRINTED ALONG WITH THE RECORD NUMBER AND RECOR

571 LENGTH:
 572
 573 XIRG WRITTEN 4 TIMES
 574
 575 THIS WILL OCCUR IF A WRITE STATUS ERROR CANNOT BE ELIMIN-
 576 ATED IN 4 ATTEMPTS AT RE-WRITING THE RECORD WITH EXTENDED
 577 INTERRECORD GAP, NOT POSSIBLE DURING TEST 0 OR 1 AS THESE
 578 ARE "WRITE ONLY" TESTS AND IT IS NOT ABSOLUTELY NECESSARY
 579 FOR THE RECORDS TO BE WRITTEN PROPERLY. SETTING SWITCH
 580 5 TO A "1" WILL DELETE "WRITE" WITH XIRG.
 581
 582 END OF TAPE
 583
 584 DRV PAT PAR DEN MODE RECORD LENGTH
 585 0 7 0 800 SSTP 1276 MAX
 586
 587 WRITE ERRORS = 5
 588 RECOVERED AT 1 = 3
 589 RECOVERED AT 3 = 1
 590 PERMANENT BADSPOT = 1
 591
 592 DRV = UNIT NUMBER
 593 PAT = PATTERN NUMBER
 594 PAR = PARITY (7 TRACK ONLY)
 595 DEN = DENSITY (7 TRACK ONLY) CR
 596 MODE = WRITE START/STOP MODE
 597 RECORD = NUMBER OF RECORDS
 598 LENGTH = LENGTH OF RECORDS
 599
 600 ON UNIT 0, USING PATTERN 7, EVEN PARITY, 800 BP1, WRITE
 601 MODE START/STOP, 1276 RECORDS OF MAXIMUM (1048 BYTES) LENGTH
 602 WERE WRITTEN. DURING THAT TIME 5 WRITE STATUS ERRORS
 603 OCCURRED, 3 WERE RECOVERED ON THE 1ST RE-WRITE, 1 RECOVERED
 604 ON THE 3RD RE-WRITE, THE REMAINING ERROR NOT RECOVERED IS
 605 CONSIDERED TO BE CAUSED BY A PERMANENT BAD SPOT ON TAPE.
 606
 607 NOTE: THE ABOVE EXAMPLE ILLUSTRATES OUTPUT FOR A 7 TRACK UNIT. CR
 608 IF THE UNIT WAS 9 TRACK, X WOULD BE PRINTED IN THE PARITY CR
 609 AND DENSITY POSITIONS. CR
 610 CR
 611 6.2 READ ERRORS
 612
 613 THE FOLLOWING ERROR TYPEOUTS ARE POSSIBLE DURING A READ
 614 OPERATION:
 615
 616 A. READ STATUS ERROR
 617
 618 COMD STATUS RECORD LENGTH EXPECTED ACTUAL
 619 XXXXXX XXXXXX 47 4
 620
 621 THIS WILL OCCUR WHEN ERROR (BIT 15 OF COMMAND REGISTER)
 622 SETS DURING A READ OPERATION, THE CONTENTS OF THE COMMAND
 623 AND STATUS REGISTERS IS PRINTED ALONG WITH THE RECORD NUMBER
 624 AND RECORD LENGTH.
 625
 626 B. READ DATA ERROR
 627

628 | COMD STATUS RECORD LENGTH EXPECTED ACTUAL
629 | XXXXXX XXXXXX 107 1024 177777 175777
630 |
631 | THIS WILL OCCUR WHEN THE DATA READ DOES NOT AGREE WITH THE
632 | DATA WRITTEN. THE CONTENTS OF THE COMMAND AND STATUS REGISTERS
633 | IS PRINTED, ALONG WITH THE RECORD NUMBER AND RECORD LENGTH.
634 | ALSO PRINTED IS THE CONTENTS OF THE MEMORY ADDRESS FROM
635 | WHICH THE DATA WAS WRITTEN (EXPECTED) AND THE CONTENTS OF THE
636 | MEMORY ADDRESS INTO WHICH IT WAS READ (ACTUAL). THIS INDICATES
637 | THE FIRST DATA TRANSFER ERROR FOUND FOR THE RECORD,
638 | NO ATTEMPT IS MADE TO DETERMINE IF THERE ARE OTHER DATA ERRORS
639 | IN THE RECORD.
640 |
641 | C. READ PASS
642 |
643 | END OF TAPE
644 |
645 | DRV PAT PAR DEN MODE RECORD LENGTH
646 | 3 4 1 CD NSTP 1276 M-MAX
647 |
648 | HEAD STATUS ERRORS = 3
649 | DATA ERRORS = 1
650 | NON RECOVERABLE ERRORS = 0
651 |
652 | ON UNIT 3, USING PATTERN 4, ODD PARITY, CORE DUMP, READ MODE
653 | NONSTOP, 1276 RECORDS OF VARYING LENGTH (4 TO 1024) WERE
654 | READ, DURING THAT TIME 2 READ STATUS ERRORS AND 1 DATA
655 | ERROR OCCURRED. THERE WERE 0 NON-RECOVERABLE ERRORS WHICH
656 | INDICATES THAT THE STATUS AND DATA ERRORS WERE ELIMINATED BY
657 | RE-READING THE RECORD UP TO THREE TIMES.
658 |
659 | NOTE: THE SAME OUTPUT CONVENTIONS FOR PARITY AND DENSITY ARE CR
660 | APPLICABLE HERE AS IN SEC. 6.1.C CR
661 | CR
662 | 6.3 ERORR RECOVERY PROCEDURES
663 |
664 |
665 |
666 |
667 | 6.3.1 WRITE ERROR RECOVERY
668 |
669 | THE PROCEDURE TO RECOVER FROM A WRITE ERROR IS DETERMINED BY
670 | THE FOLLOWING:
671 |
672 | A. IS IT A "WRITE ONLY" TEST OR WILL THE DATA BE READ?
673 |
674 | B. IS "WRITE STATISTICAL RECOVERY" SELECTED (SW 6=1)?
675 |
676 | C. IS "DELETE WRITE WITH XIRG" SELECTED (SW 5=1)?
677 |
678 | 6.3.1.1 IF IT IS A "WRITE ONLY" TEST AND "WRITE STATISTICAL RECOVERY"
679 | IS NOT SELECTED (SW 6=0) THE WRITE ERROR IS SIMPLY COUNTED
680 | AND THE PROGRAM PROCEEDS TO THE NEXT RECORD.
681 |
682 | 6.3.1.2 IF IT IS A "WRITE ONLY" TEST AND "WRITE STATISTICAL
683 | RECOVERY" IS SELECTED (SW 6=1), A WRITE ERROR IS COUNTED AND THEN
684 | A RECOVERY SEQUENCE (BACKSPACE 2 RECORDS, SPACE FORWARD 1 RECORD,

685 REWRITE RECORD) IS ENTERED, THIS RECOVERY SEQUENCE WILL BE
686 REPEATED UP TO 7 TIMES IF THE WRITE ERROR PERSISTS. IF A
687 WRITE ERROR IS NOT ELIMINATED AFTER THE 8TH ATTEMPT IT IS
688 COUNTED AS A PERMANENT BAD SPOT ON TAPE; STATISTICS ARE SAVED
689 TO INDICATE HOW MANY TIMES THE REWRITE SEQUENCE HAD TO BE RE-
690 PEATED TO RECOVER FROM EACH WRITE ERROR.
691
692 16.3.1.3 IF IT IS A "WRITE AND READ" TEST AND "WRITE STATISTICAL RECOVERY"
693 IS SELECTED (SW 6=1) AND "WRITE WITH XIRG" IS NOT DELETED (SW 5=0)
694 THE PROGRAM WILL FIRST ATTEMPT TO DO A "WRITE STATISTICAL RECOVERY".
695 IF A PERMANENT BAD SPOT IS ENCOUNTERED THE PROGRAM WILL THEN
696 ATTEMPT TO RECOVER WITH A "WRITE WITH XIRG". FAILURE TO RECOVER
697 AT THIS POINT SHOULD RESULT IN A READ ERROR DURING THE READ PASS.
698
699 16.3.1.4 IF IT IS A "WRITE AND READ" TEST AND "WRITE STATISTICAL RECOVERY"
700 IS NOT SELECTED (SW 6=0) AND "WRITE WITH XIRG" IS NOT DELETED
701 (SW 5=0) THE PROGRAM WILL TRY TO RECOVER ONLY BY REWRITING THE
702 RECORD WITH EXTENDED INTERRECORD GAP. FAILURE TO RECOVER SHOULD
703 RESULT IN A READ ERROR DURING READ PASS.
704
705 16.3.2 READ ERROR RECOVERY
706
707 A READ ERROR CAN OCCUR FOR TWO REASONS: STATUS ERROR OR DATA
708 ERROR. A PROPER COUNT IS TAKEN FOR EACH TYPE OF ERROR. RECOVERY
709 OF A READ ERROR WILL CONSIST OF TRYING TO RE-READ THE RECORD UP
710 TO TWO MORE TIMES (UNLESS SW4=1 TO DELETE READ RE-TRY'S FOR
711 SCOPING PURPOSES). IF THE ERROR PERSISTS IT IS CONSIDERED "NON-
712 RECOVERABLE" AND THE PROGRAM WILL CONTINUE WITH THE NEXT RECORD.
713
714 7. RESTRICTIONS
715
716 NONE
717
718 8. MISCELLANEOUS
719
720 8.1 TAPE LENGTH
721
722 SINCE EACH OF THE TESTS DEPEND ON REACHING THE "EOT" REFLECTOR
723 FOR TERMINATING IT COULD BE ADVANTAGEOUS TO USE A "SHORT" TAPE.
724 THIS WOULD ALLOW FOR LESS TIME TO RUN A SERIES OF TESTS WHILE
725 VARYING THE TEST PARAMETERS (REFERENCE 5.1.3). HOWEVER, THIS
726 IS NOT INTENDED TO IMPLY THAT CONSTANTLY CHANGING THE TEST
727 PARAMETERS CONSTITUTES A MORE DIFFICULT TEST OF DATA RELIABILITY.
728 THE LENGTH OF TAPE UNDER TEST IS MORE LIKELY TO SUPPLY THAT,
729 IN ANY EVENT, IF A "SHORT" TAPE IS DESIRED, JUST PLACE AN "EOT"
730 REFLECTIVE STRIP APPROXIMATELY 50 FEET DOWN TAPE FROM THE "BOT"
731 MARKER, SO THAT THE TAPE IS STILL USEFUL AS A "LONG" TAPE.
732 ANOTHER "BOT" MARKER COULD BE PLACED A SHORT DISTANCE (APPROX-
733 IMATELY 10 FEET) FARTHER DOWN ON TAPE, THIS WOULD EFFECTIVELY
734 GIVE YOU TWO TAPES. CARE MUST BE EXERCISED WHEN MOUNTING THE TAPE
735 TO POSITION IT AT THE PROPER "BOT" MARKER.
736
737 8.2 MEMORY AVAILABLE
738
739 THE PROGRAM REQUIRES 4K OF MEMORY. IF 8K IS AVAILABLE,
740 STARTING THE PROGRAM AT ADDRESS 200 OR 210 WILL EXPAND THE WRITE
741 AND READ BUFFERS SO THAT MINIMUM LENGTH RECORDS WILL BE

742 | 8 BYTES AND MAXIMUM LENGTH RECORDS WILL BE 2048 BYTES.
743 |
744 | 9. PROGRAM DESCRIPTION
745 |
746 | 9.1 GENERAL DESCRIPTION
747 |
748 | THE PROGRAM IS DESIGNED AROUND TWO MAIN SUBROUTINES "WRITE" AND
749 | "READ" AND A SERIES OF MINOR SUBROUTINES FOR MANIPULATING UNIT
750 | SELECTION, HANDLING ERROR STATISTICS, AND RECORD POSITIONING.
751 | IF MORE THAN ONE UNIT IS SELECTED THE UNIT WITH THE LOWEST
752 | NUMBER IS SELECTED FIRST AND WHEN THE SEQUENCE IS COMPLETED
753 | THEN THE NEXT LOWEST UNIT NUMBER IS SELECTED UNTIL ALL UNITS HAVE
754 | BEEN SELECTED. THIS PROCESS IS REPEATED UNTIL ALL UNITS REACH
755 | END OF TAPE.
756 |
757 | 9.2 TEST 0
758 |
759 | THIS IS A "WRITE ONLY" TEST. THE PROCEDURE IS TO WRITE 1 RECORD,
760 | REPEAT FOR ALL UNITS, CONTINUE UNTIL EOT. WRITE MODE OF NONSTOP
761 | (WMO=0) WILL NOT BE AN EFFECTIVE SELECTION FOR THIS TEST BECAUSE
762 | THE WRITE ROUTINE IS EXITED AFTER EACH RECORD TO DETERMINE IF
763 | ANY OTHER UNITS ARE SELECTED. READ MODE (RMO) HAS NO EFFECT ON
764 | THIS TEST.
765 |
766 | 9.3 TEST 1
767 |
768 | THIS IS A "WRITE ONLY" TEST SIMILAR TO TEST 0 EXCEPT A SEQUENCE
769 | OF 256 RECORDS IS WRITTEN ON EACH UNIT BEFORE CHANGING TO THE
770 | NEXT UNIT. READ MODE (RMO) HAS NO EFFECT ON THIS TEST.
771 |
772 | 9.4 TEST 2
773 |
774 | THIS IS A "WRITE AND READ" TEST. THE PROCEDURE IS TO WRITE 256
775 | RECORDS ON EACH UNIT, THEN BACKSPACE 256 RECORDS ON EACH UNIT,
776 | THEN READ 256 RECORDS ON EACH UNIT, AND THEN REPEAT THE SEQUENCE
777 | UNTIL ALL UNITS ARE AT EOT.
778 |
779 | 9.5 TEST 3
780 |
781 | THIS IS A "WRITE AND READ" TEST. THE PROCEDURE IS TO WRITE 1
782 | RECORD, BACKSPACE, READ 1 RECORD AND REPEAT FOR EACH UNIT, THEN
783 | REPEAT THE SEQUENCE UNTIL ALL UNITS ARE AT EOT. WRITE MODE OR
784 | READ MODE OF NONSTOP (WMO=0 OR RMO=0) WILL NOT BE EFFECTIVE
785 | FOR THIS TEST.
786 |
787 | 9.6 TEST 4
788 |
789 | THIS IS A "WRITE AND READ" TEST. IT IS SIMILAR TO TEST 2 EXCEPT
790 | UNITS ARE CHANGED BETWEEN EACH RECORD DURING WRITE, BACKSPACE,
791 | AND READ. WRITE MODE OR READ MODE OF NONSTOP (WMO=0 OR RMO=0)
792 | WILL NOT BE EFFECTIVE FOR THIS TEST.
793 | NOTE: THIS TEST WILL NOT FUNCTION PROPERLY WHEN OPERATING
794 | ON A DUAL DENSITY SYSTEM (NRZ/PE) WHOSE DENSITY SELECTION
795 | IS COMPUTER CONTROLLED.
796 |
797 | 9.7 TEST 5
798 |

THIS IS A "READ ONLY" TEST. THE PROCEDURE IS TO READ 1 RECORD,
REPEAT FOR ALL UNITS, AND CONTINUE UNTIL ALL UNITS ARE AT EOT.
THE MAIN PURPOSE OF THIS TEST IS TO PROVE COMPATIBILITY AMONG
TAPE UNITS. A TAPE THAT IS WRITTEN ON ONE UNIT SHOULD BE ABLE
TO BE READ ON ANY OTHER UNIT. TEST PARAMETERS THAT SELECT
PATTERN AND RECORD LENGTH SEQUENCE MUST BE THE SAME AS THOSE USED
TO WRITE THE DATA ON TAPE. ANY OF THE OTHER TESTS (0 THRU 4)
CAN BE USED TO GENERATE THE DATA.

10. LISTING

STATUS AND COMMAND REGISTER BIT ASSIGNMENTS

COMMAND REGISTER

15 ERROR

14 DEN 8 00 = 200 BPI 7 TRACK 10 = 800 BPI 7 TRACK
13 DEN 5 01 = 556 BPI 7 TRACK 11 = 800 BPI 9 TRACK
12 POWER CLEAR

11 PARITY 0 = ODD 1 = EVEN

10 UNIT SEL, BIT 2
19 UNIT SEL, BIT 1

18 UNIT SEL, BIT 0

17 CONTROL UNIT READY

16 INTERRUPT ENABLE

15 ADDRESS BIT 17

14 ADDRESS BIT 16

13 FUNCTION BIT 2 000 = OFF LINE 100 = SPACE FORWARD
 001 = READ 001 = SPACE REVERSE
12 FUNCTION BIT 1 010 = WRITE 110 = WRITE XIRG
11 FUNCTION BIT 0 011 = WRITE EOF 111 = REWIND
10 GO

STATUS REGISTER

15 ILLEGAL COMMAND (ILC)

14 END OF FILE (EOF)
13 CYCLICAL REDUNDANCY ERROR (CRE)
12 PARITY ERROR (PAE)

11 BUS GRANT LATE (BGL)

10 END OF TAPE (EOT)
9 RECORD LENGTH ERROR (RLE)

8 BAD TAPE ERROR (BTE)
7 NON EXISTENT MEMORY (NMX)
6 SELECT REMOTE (SELR)

5 BEGINNING OF TAPE (BOT)
4 7 CHANNEL (7CH)
3 SETTLE DOWN (SDWN)

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-15

```

856
857     1 2      WRITE LOCK (WRL)
858     1 1      REWIND STATUS (RWS)
859     1 0      TAPE UNIT READY (TUR)
860
861
862    000000  .ENABL AMA
                  .ENABL ABS

863          .NLIST TTM
864
865
866
867          !TITLE DATUM DATA RELIABILITY - 7 AND 9 TRACK           CR
868    000000  R0=%0
869    000001  R1=%1
870    000002  R2=%2
871    000003  R3=%3
872    000004  R4=%4
873    000005  R5=%5
874    000006  SP=%6
875    000007  PC=%7

876    000000  .=0
877    000010  .=10
878    000005  .REPT 5
879
880          HALT
881          .ENDR
882    000034  .=34
883  000034  TRAP34
884    00C200  .=200
885  000200  000137  001152  JMP    AUTOST
886  000204  000137  001552  JMP    MEM4K
887  000210  000137  001556  JMP    MEM8K
888  000214  172520  MTS:  172520
889  000216  172522  MTC:  172522
890  000220  172524  BC:   172524
891  000222  172526  CA:   172526
892  000224  000000  0
893  000226  000000  0
894  000230  177716  CC:   177776
895  000232  177570  SR:   177570
896  000234  177560  TKS:  177560
897  000236  177562  TKB:  177562
898  000240  177564  TPS:  177564
899  000242  177566  TPB:  177566
900  000244  002000  MAXLEN: 1024.      ! MAX RECORD LENGTH
901  000246  000004  MINLEN: 4.       ! MIN RECORD LENGTH
902  000250  0133<4  WBUF:   BUFFER      ! STARTING ADDRESS OF WRITE BUFFER
903  000252  015324  RBUF:   BUFFER+1024.  ! STARTING ADDRESS OF READ BUFF
904  000254  0002<4  MTV:   224
905          !TEMPORARY STORAGE AREAS
906  000256  000000  ATST:  0
907  000260  000000  0
908  000262  000000  0
909  000264  000000  DRVSEL: 0
910  000266  000000  STRLEN: 0
911  000270  000000  LENGTH: 0
912  000272  000000  MSBITS: 0
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999

```

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-16

913 000274 000000	SVRLCR: 0	
914 000276 000000	COMMAND: 0	
915 000300 000000	CDRVBT: 0	
916 000302 000000	CDRIVE: 0	
917 000304 000000	RUPASS: 0	
918 000306 000000	WKPASS: 0	
919 000310 000000	BLKINC: 0	
920 000312 000000	STATRD: 0	
921 000314 000000	WRCHEK: 0	
922 000316 000000	0	
923 000320 000000	0	
924 000322 000000	0	
925 000324 000000	0	
926 000326 000000	0	
927 000330 000000	0	
928 000332 000000	0	
929 000334 000000	PERMBS: 0	
930 000336 000000	RECORD: 0	
931 000340 000000	WRRECR: 0	
932 000342 000000	LASRCR: 0	
933 000344 000000	RUERRS: 0	
934 000346 000000	DAEERRS: 0	
935 000350 000000	NRREAD: 0	
936 000352 000000	WRTLEN: 0	
937 000354 000000	READLN: 0	
938 000356 000000	MODES: 0	
939 000360 000450	DRVADDR: DOTAB	
940 000362 000514	D1TAB	
941 000364 000560	D2TAB	
942 000366 000624	D3TAB	
943 000370 000670	D4TAB	
944 000372 000734	D5TAB	
945 000374 001000	D6TAB	
946 000376 001044	D7TAB	
947 000450	STACK=450	
948 000450	.=450	
949 000450 000000	DOTAB: 0	
950 000514	.=DOTAB+44	
951 000514 000000	D1TAB: 0	
952 000560	.=D1TAB+44	
953 000560 000000	D2TAB: 0	
954 000624	.=D2TAB+44	
955 000624 000000	D3TAB: 0	
956 000670	.=D3TAB+44	
957 000670 000000	D4TAB: 0	
958 000734	.=D4TAB+44	
959 000734 000000	D5TAB: 0	
960 001000	.=D5TAB+44	
961 001000 000000	D6TAB: 0	
962 001044	.=D6TAB+44	
963 001044 000000	D7TAB: 0	
964 001140	.=D7TAB+44	
965 001110 000000	NUMTST: 0 I NUMBER OF TEST	
966 001112 000000	PARAM: 0 I TEST PARAMETERS	
967 001114 000000	TSTEX: 0 I POINTS TO TESTS PARAMETERS TO BE EXECUTED	
968 001116 000000	TEST: 0 I CONTAINS CURRENT TEST NUMBER	
969 001120 000000	TSTTBL: 0 I TEST TABLE	

CR
CR

```

970 001122 000000          0           I UP TO 10 TESTS CAN BE SELECTED
971 001124 000000          0           I BE RUN IN CONSECUTIVE OR ER
972 001126 000000          0
973 001130 000000          0
974 001132 000000          0
975 001134 000000          0
976 001136 000000          0
977 001140 000000          0
978 001142 000000          0
979 001144 000000          0
980 001146 000000          PGMODE: 0           IPATTERN GEN. MODE = 1 TT, 2=9T
981 001150 000000          STFLGS: 0           17 TRACK FLAGS-BIT SET FOR EACH TT UNIT CR
982 001152 012705 000450      AUTOST: MOV #STACK,SP    ISET STACK POINTER CR
983 001156 012737 177777 000256      MOV #1,ATST
984 001164 012737 037745 001120      MOV #37745,TSTTB1
985 001172 012737 030265 001122      MOV #30265,TSTTB1+2
986 001200 012737 021540 001124      MOV #21540,TSTTB1+4
987 001206 012737 000003 001110      MOV #3,NUMTST
988 001214 012737 123456 007260      MOV #123456,LONUM I PRIME RANDOM NUMBER GENERATOR
989 001222 012737 176543 007262      MOV #176543,HINUM
990                           I DETERMINE THE SIZE OF THE WRITE AND READ BUFFERS
991 001230 012737 001244 000004      MOV #NMRET,@#4   I SET UP NSM VECTOR
992 001236 005737 023324      TST BUFFER+4096, I OVER 4K OF MEMORY
993 001242 000403      BR OVER4K I BR IF YES
994 001244 022626      NXMRET: CMP (SP)+,(SP)+ I POP THE STACK
995 001246 104456      SETM4K
996 001250 000401      BR TU.SEL           I
997 001252 104440      OVER4K: SETM8K
998                           I DETERMINE DRIVES TO BE TESTED
999                           I A DRIVE WILL BE TESTED IF:
1000
1001                           I 1. IT CAN BE SELECTED
1002 001254 012737 000006 000004  TU.SEL: MOV #6,@#4   ISET TRAP CATCHER
1003 001262 012737 010000 176726      MOV #10000,@MTCL IPWR CLR
1004 001270 005037 000264      CLR DRVSEL  ICLEAR DRIVE TABLE
1005 001274 005037 001150      CLR STFLGS ICLEAR 7 TRACK UNIT FL GS
1006 001300 005037 000272      CLR MSBITS
1007 001304 012700 000200      MOV #200,R0  IRO=DRIVE 0
1008 001310 105777 176702      TSTB @MTCL
1009 001314 100035      BPL IDSELF IBR IF NO CU READY
1010 001316 013777 000264 176672  NXT.TU: MOV DRVSEL,@MTCL ISELECT A DRIVE
1011 001324 012702 000024      MOV #20,R2 ISET UP R2 FOR WAIT LO P
1012 001330 032777 000100 176656  USSTST: BIT #100,@MTS Does DRIVE EXIST?
1013 001336 001005      BNE USS.OK IBR IF YES
1014 001340 005302      DLC R2
1015 001342 003372      BGT USSST
1016 001344 000414      BR NO,SEL I DRIVE IS NON-EXISTENT
1017 001346 032777 000004 176640  USS.OK: BIT #4,@MTS IIS WRITE LOCK ON?
1018 001354 001010      BNE NO,SEL I YES
1019 001356 032777 000020 176630      BIT #20,@MTS IIS DRIVE 7 TRACK?
1020 001364 001402      BEQ USS10 I NO
1021 001366 050037 001150      BIS R0,STFLGS I YES - SET 7 TRACK DR VE BIT IN FLAGS WORD
1022 001372 050037 000272      USS10: BIS R0,MSBITS ISET DRIVE NO. IN TABL
1023 001376 105237 000265  NO,SEL: INC# DRVSEL+1 IINC. THE DRIVE NUMBER
1024 001402 000241      CLC
1025 001404 006000      NOR R0 I HAVE ALL DRIVES BEEN ESTED FOR EXISTENCE?
1026 001406 001343      BNE NXT.TU IBR IF NO

```

```

1027
1028 001410 012702 012502           ;TYPE-OUT NAME OF PROGRAM AND MIN. AND MAX. RECORD LENGTHS,
1029 001414 104404           ISELF: MOV #MSG10A,R2
1030 001416 013702 000246           TOP
1031 001422 104426           MOV MINLEN,R2
1032 001424 013702 000244           DECPRT  DECPRT   IPRT MIN. LENGTH
1033 001430 104426           MOV MAXLEN,R2
1034 001432 005707 000272           DECPRT  TST MSBITS  IPRT MAX. LENGTH
1035 001436 001002           BNE .+6    IWERE ANY DRIVES SELEC ED?
1036 001440 000157 001564           JMP START1 INU--GO HAVE OPERATOR ELECT DRIVES
1037
1038 001444 012702 012604           ;TYPE-OUT THE DRIVE/S TO BE TESTED
1039 001450 104404           MOV #MSG10B,R2
1040 001452 105007 013324           TOP
1041 001456 012701 013324           CLR B BUFFER
1042 001462 005000           MOV #BUFFER,R1
1043 001464 012702 000200           CLR R0      ISET R0 TO DRIVE 0
1044
1045 001470 105021           MOV #200,R2  ISET R2 TO DRIVE 0
1046 001472 112721 000040           FORM AND SAVE DRIVE NUMBER FOR TYPE-OUT
1047 001476 030257 000272           CLKB (R1)+  ISET EOM
1048 001502 001405           MOVB # , (R1)+  ISPACE
1049 001504 110011           LOOPER: BIT R2,MSBITS IDID THIS DRIVE NUMBER EXIST?
1050 001506 152721 000060           BEQ ZER000  IBR IF NO
1051 001512 112721 000054           MOVB R0,(R1)  IYES--SAVE THE NUMBER
1052 001516 000241           BISH #0,(R1)+  IMAKE IT ASCII
1053 001520 000002           MOVB # , ,(R1)+  ICOMMA
1054 001522 005200           ZER000: CLC      IPOSITION DRIVE BIT
1055 001524 020007 000007           NOR R2
1056 001530 003742           INC R0      IUPDATE DRIVE NUMBER
1057 001532 105011           CMP R0,#7   ILAST
1058 001534 112741 000100           BLE LOOPER  IBR IF NO
1059 001540 012702 013324           CLR B (R1)  ISET EOM
1060 001544 104404           MOVB #@,-(R1)  ICR & LF
1061 001546 000157 002602           MOV #BUFFER,R2  ITYPE THE DRIVE/S SELE TED
1062
1063
1064 001552 104456           JMP EXECUT IGO START TESTING
1065 001554 000401           MODIFY RECORD LENGTHS AND BUFFER AREAS FOR 4K.
1066
1067 001556 104440           MEM4K: SETM4K
1068 001560 005057 000256           BR START
1069 001564 012706 000450           MODIFY RECORD LENGTHS AND BUFFER AREAS FOR BK.
1070 001570 012707 123456 007260           MEM8K: SETMBK
1071 001576 012707 176543 007262           START: CLR ATST  INOT AUTO START
1072 001604 012702 012077           START1: MOV #STACK,SP  INITIALIZE STACK
1073 001610 104404           MOV #123456,LONUMIPRIME RANDOM
1074 001612 005057 000272           MOV #176543,HINUMINUMBER GERERATOR
1075 001616 005057 001150           MOV #MSG1,R2
1076 001622 104400           TOP
1077 001624 122705 000015           CLR MSBITS  IPRT 'SELECT UNITS'
1078 001630 001010           CLR STFLGS  ICLEAR SELECTED DRIVE NDICATOR
1079 001632 005707 000272           SELDRV: WAITKY
1080 001636 001702           CMPB #15,R3
1081 001640 005707 000256           BNE SELD1  INO
1082 001644 001441           TST MSBITS  IYES,WERE ANY DRIVES E LECTED
1083 001646 000157 002602           BEQ START1  INO
                                         TST ATST
                                         BEQ SELTST  IYES NOW SELECT TESTS
                                         JMP EXECUT

```

CR

CR

CR

CR

1084 001652	122703	000070	SEL01: CMPB #70,R3	IIS CHARACTER A VALID NUMBER 0-7?	CR
1085 001656	003403		BLE SELD2	INO,PRINT "?"	
1086 001660	122703	000060	CMPB #60,R3	IIS CHARACTER A VALID NUMBER 0-7?	CR
1087 001664	003404		BLE VALID	IYES	
1088 001666	012705	000077	SEL02: MOV #?,R5		CR
1089 001672	104434		PRC	IPRINT "?"	CR
1090 001674	000421		BR VAL4		
1091			IHAVE VALID DRIVE NUMBER		
1092 001676	142703	000270	VALID: BICB #270,R3	IMASK OUT NUMBER	CR
1093 001702	105103		CUMB R3		CR
1094 001704	012700	000200	MOV #200,R0	INITIALIZE BIT POSITION FOR DRIVE 0	
1095 001710	105203		INC B R3	I+1 TO DRIVE SELECT	CR
1096 001712	001402		BEQ VAL2	IHAVE DRIVE OF EQUAL TO ZERO	
1097 001714	006200		ASR R0	MOVE BIT POSITION TO EXT DRIVE	
1098 001716	000714		BR VAL1	TRY AGAIN	
1099 001720	130037	000272	VAL2: BITB R0,MSBITS	ICOMPARE DRIVE SELECT WITH PREVIOUS SELECTED	
1100 001724	001005		BNE VAL3		
1101 001726	150037	000272	BISO R0,MSBITS	IDRIVE WASN'T PREVIOUSLY SET, SO SET IT NOW.	
1102 001732	000402		BR VAL4		
1103 001734	140037	000272	VAL3: DICA R0,MSBITS	IDRIVE WAS SET, CLEAR T.	
1104 001740	012705	000054	VAL4: MOV #?,R5		CR
1105 001744	104434		PRC	IPRINT COMMA	CR
1106 001746	000745		BR SELDRV	IRETURN TO WAIT FOR NEXT KEY	
1107			IHAVE DRIVES SELECTED-NOW GET TEST SELECTION		
1108 001750	012702	012120	SELST: MOV #MSG2,R2		
1109 001754	104404		TOP	IPRINT*SELECT TESTS*	
1110 001756	005037	001110	CLR NUMTST	ICLEAR TEST NUMBERS SELECTED	
1111 001762	012700	001120	MOV #TSTTBL,R0	INITIALIZE TEST TABLE POINTER	
1112 001766	104400		SELT1: WAITKY		
1113 001770	122703	000015	CMPB #15,R3	IWAS CHARACTER A CARRIAGE RETURN?	CR
1114 001774	001005		BNE SELT2		
1115 001776	005737	001110	TST NUMTST	IWERE ANY TESTS SELECTED?	
1116 002002	001410		BEQ SELT3	INO	
1117 002004	000137	002602	JMP EXECUT	IYES, EXECUTE TESTS	
1118 002010	122703	000066	SELT2: CMPB #66,R3	IIS CHARACTER A VALID NUMBER 0-5	CR
1119 002014	003403		BLE SELT3	INO	
1120 002016	122703	000060	CMPB #60,R3	IIS CHARACTER A VALID NUMBER 0-5	CR
1121 002022	003404		BLE SELPAT	IYES	
1122 002024	012702	012072	SELT3: MOV #MSG0,R2		
1123 002030	104404		TOP		
1124 002032	000735		BR SELT1	IRETURN TO WAIT FOR TEST SELECT	
1125 002034	010304		SELPAT: MOV R3,R4		CR
1126 002036	000304		SWAB R4	ROTATE TEST NUMBER IN O POSITION	
1127 002040	006104		ROL R4		
1128 002042	006104		ROL R4		
1129 002044	006104		ROL R4		
1130 002046	006104		ROL R4		
1131 002050	042704	107777	BIC #107777,R4	ITYPE 3 SPACES	
1132 002054	104430		SP3		
1133			IHAVE VALID TEST SELECTED, NOW GET SELECTED PATTERN		
1134 002056	104400		WAITKY	IWAIT FOR PATTERN SELECTION	
1135 002060	122703	000070	CMPB #70,R3	IIS CHARACTER A VALID NUMBER 0-7	CR
1136 002064	003737		BLE SELT3	INO	
1137 002066	122703	000057	CMPB #57,R3	IIS CHARACTER A VALID NUMBER 0-7	CR
1138 002072	002304		BEQ SELT3	INO	
1139 002074	000303		SWAB R3	MOVE PATTERN SELECT I TO POSITION	CR
1140 002076	006103		ROL R3		CR

```

1141 002100 042705 170777      BIC #170777,R3          CR
1142 002104 050304      BIS R3,R4    !COMBINE PATTERN WITH EST   CR
1143 002106 104400      SP3
1144                               !DETERMINE WHICH, IF ANY, DRIVES ARE 7 TRACK AND S T CORRESPONDING   CR
1145                               ! BITS IN THE SEVEN TRACK FLAGS WORD (STFLGS)           CR
1146 002110 005007 000264      CLR DRVSEL    !INITIALIZE FOR 7 TRAC UNIT SEARCH   CR
1147 002114 012705 000200      MOV #200,R3
1148 002120 013707 000264 176070 DET7T: MOV DRVSEL,AMTC !SELECT NEXT DRIVE   CR
1149 002126 012702 000024      MOV #20.,R2  !SET UP WAIT LOOP           CR
1150 002132 032707 000100 176054 DET7T1: BIT #100,AMTS !DOES DRIVE EXIST?     CR
1151 002140 001005      BNE DET7T2  ! YES                   CR
1152 002142 005302      DEC R2    !WAIT A WHILE             CR
1153 002144 003302      BGT DET7T1
1154 002146 000406      BR DET7T3  !TRY NEXT DRIVE NO.       CR
1155 002150 032707 000020 176036 DET7T2: BIT #20,AMTS !IS DRIVE 7 TRACK?     CR
1156 002156 001402      BEQ DET7T3  ! NO                    CR
1157 002160 050007 001150      BIS R0,STFLGS !SET CORRESPONDING 7 T ACK DRIVE BIT   CR
1158 002164 105207 000265      INCB DRVSEL+1 !INCREMENT DRIVE NO.       CR
1159 002170 000241      CLC
1160 002172 006005      ROR R3    !HAVE ALL DRIVES BEEN HECKED?   CR
1161 002174 001301      BNE DET7T1 ! NO                    CR
1162 002176 005707 001150      TST STFLGS !ARE ANY DRIVES 7 TRAC ?     CR
1163 002202 001004      BNC SELPRO ! YES - REQUEST PARITY & DENSITY   CR
1164 002204 012702 013315      MOV #MSG31,R2 ! NO - POSITION PAST P & D       CR
1165 002210 104404      TOP
1166 002212 000407      BR SELDN3
1167                               !WAIT FOR PARITY SELECTION (0-EVEN, 1-ODD)           CR
1168 002214 104400      SELPRO: WAITKY
1169 002216 122705 000060      CMPB #60,R3    !IS CHARACTER=0           CR
1170 002222 001405      BEQ SELPR  !YES, EVEN PARITY        CR
1171 002224 122705 000061      CMPB #61,R3    !IS CHARACTER=1           CR
1172 002230 001205      BNE SELT3  !NO, HAVE ILLEGAL KEY      CR
1173 002232 052704 000400      BIS #400,R4  !YES, ODD PARITY         CR
1174 002236 104400      SELPR: SP3
1175                               !WAIT FOR DENSITY SELECTION           CR
1176 002240 104400      WAITKY
1177 002242 122705 000062      CMPB #62,R3    !IS CHARACTER=2           CR
1178 002246 001401      BEQ SELDN3 !YES, DENSITY=200 BPI      CR
1179 002250 122705 000065      CMPB #65,R3    !IS CHARACTER=5           CR
1180 002254 001005      BNE SELDN1 !NO
1181 002256 052704 000100      BIS #100,R4  !SET DENSITY=556 BPI      CR
1182 002262 000405      BR SELDN3
1183 002264 122705 000070      SELDN1: CMPB #70,R3    !IS CHARACTER=8           CR
1184 002270 001005      BNE SELDN2
1185 002272 052704 000200      BIS #200,R4  !SET DENSITY=800 BPI      CR
1186 002276 000405      BR SELDN3
1187 002300 122705 000103      SELDN2: CMPB #80,R3    !IS CHARACTER=C           CR
1188 002304 001207      BNE SELT3  !NO, HAVE ILLEGAL KEY      CR
1189 002306 052704 000300      BIS #300,R4  !SET CORE DUMP MODE      CR
1190 002312 104400      SELDN3: SP3
1191                               !WAIT FOR RECORD LENGTH SEQUENCES SELECTION           CR
1192 002314 104400      WAITKY
1193 002316 122705 000060      CMPB #60,R3    !IS CHARACTER=0           CR
1194 002322 001401      BEQ SELH3  !YES, RLS=MIN            CR
1195 002324 122705 000061      CMPB #61,R3    !IS CHARACTER=1           CR
1196 002330 001005      BNE SELR1
1197 002332 052704 000020      BIS #20,R4   !SLT RLS=MAX            CR

```

1198 002336 000413		BR SELR3		
1199 002340 122703 000062	SELR1:	CMPB #62,R3	IIS CHARACTER=2	CR
1200 002344 001003		BNE SELR2		
1201 002346 052704 000040		BIS #40,R4	ISET RLS=MIN-MAX	
1202 002352 000405		BR SELR3		
1203 002354 122703 000063	SELR2:	CMPB #63,R3	IIS CHARACTER=3	CR
1204 002360 001221		BNE SELT3		
1205 002362 052704 000060		BIS #60,R4	ISET RLS=MAX-MIN	
1206 002366 104450	SELR3:	SP3		
1207		IWAIT FOR WRITE MODE SELECTION		
1208 002370 104400		WAITKY		
1209 002372 122703 000060		CMPB #60,R3		CR
1210 002376 001415		BEQ SELW2	ISET WMO=NONSTOP	
1211 002400 122703 000061		CMPB #61,R3		CR
1212 002404 001003		BNE SELW1		
1213 002406 052704 000004		BIS #4,R4	ISET WMO=START-STOP	
1214 002412 000407		BR SELW2		
1215 002414 122703 000062	SELW1:	CMPB #62,R3		CR
1216 002420 001402		BEO SELW15		CR
1217 002422 000137 002024		JMP SELT3		CR
1218 002426 052704 000010	SELW15:	BIS #10,R4	ISET WMO=RANDOM	
1219 002432 104450	SELW21:	SP3		
1220		IWAIT FOR READ MODE SELECTION		
1221 002434 104400		WAITKY		
1222 002436 122703 000060		CMPB #60,R3		CR
1223 002442 001415		BEQ SELRM2	ISET RMO=NONSTOP	
1224 002444 122703 000061		CMPB #61,R3		CR
1225 002450 001003		BNE SELRM1		
1226 002452 052704 000001		BIS #1,R4	ISET RMO=START-STOP	
1227 002456 000407		BR SELRM2		
1228 002460 122703 000062	SELRM1:	CMPB #62,R3		CR
1229 002464 001402		BEO .+6		
1230 002466 000137 002024		JMP SELT3		
1231 002472 052704 000002		BIS #2,R4	ISET RMO=RANDOM	
1232 002476 104450	SELRM21:	SP3		
1233		IHAVE ALL PARAMETERS		
1234 002500 012702 012205		MOV #MSG6,R2		
1235 002504 104404		TOP	IPRINT "OK"	
1236 002506 104400		WAITKY	IWAIT FOR CARRIAGE RET RN	
1237 002510 122703 000015		CMPB #15,R3		CR
1238 002514 001402		BEO .+6		
1239 002516 000137 002024		JMP SELT3		
1240 002522 105777 175512		TSTB @TPS		
1241 002526 100375		BPL .-4		
1242 002530 012777 000012 175504		MOV #12,@TPB		
1243 002536 105777 175476		TSTB @TPS		
1244 002542 100375		HPL .-4		
1245 002544 012777 000040 175470		MOV #40,@TPB		
1246 002552 010420		MOV R4,(0)+		
1247 002554 005257 001110		INC NUMTST	I+1 TO TEST COUNT	
1248 002560 022757 000012 001110		CMP #10,NUMTST	IEQUAL TO TEN YET	
1249 002566 001402		BEQ SELOK1	IYES	
1250 002570 000137 001766		JMP SELT1	INO.ACCEPT NEXT SET	
1251 002574 012702 012160	SELOK1:	MOV #MSG5,R2		
1252 002600 104404		TOP	IPRINT "MAX TESTS SELE TED!"	
1253		EXECUTE SELECTED TEST		
1254 002602 005037 000356	EXECUT:	CLR MODES	IINITIALIZE MODES	

```

1255 002606 012737 001120 001114      MOV    #TSTBL,TSTEX
1256 002614 017737 176274 001112      EXEC:  MOV    @TSTEX,PARAM  IGET TEST PARAMS
1257 002622 0137U0 001112      EXEC1:  MOV    PARAM,R0
1258 002626 0427U0 007777      BIC    #7777,R0
1259 002632 005037 001146      CLR    PGMODE      IENABLE PATTERN GENERATION
1260 002636 010037 001116      MOV    R0,TEST
1261 002642 0014U0      BEQ    TEST0
1262 002644 0227U0 010000      CMP    #10000,R0
1263 002650 0015U0      BEQ    TEST1
1264 002652 0227U0 020000      CMP    #20000,R0
1265 002656 0015U1      BEQ    TEST2
1266 002660 0227U0 030000      CMP    #30000,R0
1267 002664 001544      BEQ    TEST3
1268 002666 0227U0 040000      CMP    #40000,R0
1269 002672 0014U2      BEQ    .+6
1270 002674 000137 003526      JMP    TEST5
1271 002700 000137 003206      JMP    TEST4
1272      IRETURN HERE AFTER COMPLETION OF TEST
1273 002704 0127U2 013310      DONE1:  MOV    #MSG30,R2
1274 002710 1044U4      TOP
1275 002712 006037 175314      ROR    ASR      IIS SW0=1 TO REPEAT TEST WITH ALL PATTERNS
1276 002716 103015      BCC    DONF1      INO
1277 002720 0137U0 001112      MOV    PARAM,R0
1278 002724 0427U0 170777      BIC    #170777,R0
1279 002730 0227U0 007000      CMP    #7000,R0      IREACHED PAT 7
1280 002734 0014U4      BEQ    DONE1      IYES
1281 002736 062737 001000 001112      ADD    #1000,PARAM  INO, +1 TO PAT
1282 002744 000726      BR     EXEC1      IREPEAT
1283 002746 005337 001110      DONE1:  DEC    NUMTST
1284 002752 001010      BNE    DOAGN
1285 002754 0137U2 000042      MOV    @#42,R2
1286 002760 0010U1      BNE    ENAODR
1287 002762 0000U0      HALT
1288 002764 004712      ENAODR: JSR    PC,(2)      IFINISHED ALL TESTS
1289 002766 000240      240
1290 002770 060240      240
1291 002772 000240      240
1292 002774 062737 000002 001114      OUGN:  ADD    #2,TSTEX
1293 003002 0007U4      BR     EXEC      IDO NEXT TEST
1294      ITEST0
1295      IWRITE ONE RECORD, CHANGE DRIVES, GO TO EOT
1296 003004 052737 000002 000356      TEST0: BIS    #2,MODES
1297 003012 1044U0      TOLEN: CLRALL
1298 003014 104410      TO:    RSFORV
1299 003016 104414      TOA:   MVCTRHS
1300 003020 032737 000040 000356      BIT    #40,MODES
1301 003026 0010U2      BNE    TOB      IEXIT WRITE EVERY RECD, NO READ PASS
1302 003030 1044U2      WRITIT
1303 003032 1044U6      SVCTRS
1304 003034 1044U2      TOB:   CHGDRV
1305 003036 000757      BR     TOA      ICLEAR ERROR COUNTERS ND REWIND
1306 003040 004737 004400      JSR    PC,ALLEOT  IRESET DRIVE SELECTION TO LOWEST NUMBER
1307 003044 000753      BR     TO      IRESTORE DRIVE COUNTER
1308 003046 000137 002704      JMP    DONE      IIS THIS DRIVE AT EOT?
1309      ITEST1
1310      IWRITE RECORD LENGTH SEQUENCE, GO TO NEXT DRIVE, CONTINUE TO EOT ON ALL DRIVE
1311 003052 052737 000001 000356      TEST1: BIS    #1,MODES
1312      IEXIT WRITE AFTER RLS, NO READ PASS

```

CR

1312 003060 000754	BR	T01ENT	CR
1313	I TEST2		
1314	I WRITE A RECORD LENGTH SEQUENCE , CHANGE DRIVES		
1315	I BACKSPACE, CHANGE DRIVES, READ, CHANGE DRIVES, CO TINUE TO EOT ON ALL DRIVES		
1316 003062 052757 000005 000356	TEST2:	BIS #5,MODES	I EXIT WRITE AFTER RLS, DO READ PASS
1317 003070 104420	T23ENT:	CLRALL	I CLEAR ERROR COUNTERS ND REWIND
1318 003072 104410	T2:	RSFDRV	I SET DRIVE SELECTION T LOWEST NUMBER
1319 003074 104414	T2A:	MVCTRHS	I RESTORE DRIVE COUNTER
1320 003076 032757 000040 000356		BIT #40,MODES	I IS THIS DRIVE AT EOT?
1321 003104 001002		BNE T2B	I YES, SKIP WRITE
1322 003106 104402		WRITIT	I WRITE
1323 003110 104405		SVCTRHS	I SAVE DRIVE COUNTERS
1324 003112 104422		CHGDRV	I ANYMORE DRIVES SELECT D?
1325 003114 000767		HR T2A	I YES
1326 003116 104414	T2C:	MVCTRHS	I RESTORE DRIVE COUNTER
1327 003120 032757 000020 000356		BIT #20,MODES	I IS THIS READ AT EOT?
1328 003126 001003		BNC T2D	I YES, SKIP BACKSPACE
1329 003130 004757 010540		JSR PC,GOBKWD	I BACKSPACE
1330 003134 104406		SVCTRHS	I SAVE DRIVE COUNTERS
1331 003136 104422		CHGDRV	I ANY MORE DRIVES SELEC ED?
1332 003140 000766		BR T2C	I YES
1333 003142 104414	T2E:	MVCTRHS	I RESTORE DRIVE COUNTER
1334 003144 032757 000020 000356		BIT #20,MODES	I IS THIS READ AT EOT
1335 003152 001001		BNE T2F	I YES, SKIP READ
1336 003154 104424		READIT	I READ
1337 003156 104406		SVCTRHS	I SAVE DRIVE COUNTERS
1338 003160 104422		CHGDRV	I ANYMORE DRIVES SELECT D?
1339 003162 000767		BR T2E	I YES
1340 003164 004757 004400		JSR PC,ALLEOT	I ARE ALL DRIVES AT EOT
1341 003170 000740		BR T2	I NO
1342 003172 000157 002704		JMP DONE	I YES EXIT
1343			I
1344			I
1345	I TEST3		
1346	I WRITE ONE RECORD, CHANGE DRIVES, BACKSPACE, CHANG DRIVES, READ, CHANGE DRIV 8		
1347 003176 052757 000006 000356	TEST3:	BIS #6,MODES	I EXIT WRITE EVERY RECO D, DO READ PASS
1348 003204 000731		BR T23ENT	CR
1349	I TEST4		
1350	I WRITE RECORD, CHANGE DRIVES, REPEAT FOR RECORD LE GTH SEQUENCE		
1351	I READ RECORD, CHANGE DRIVES, REPEAT FOR RLS		
1352 003206 052757 000006 000356	TEST4:	BIS #6,MODES	I EXIT WRITE EVERY RECO D, DO READ PASS
1353 003214 032777 000014 175672		BIT #14,ATSTEX	
1354 003222 001006		BNE T4	
1355 003224 042757 000007 000356		BIC #7,MODES	
1356 003232 052757 000005 000356		RIS #5,MODLS	I EXIT WRITE AFTER RLS, DO READ PASS
1357 003240 104420	T4:	CLRALL	I CLEAR ERROR COUNTERS ND REWIND
1358 003242 104410	T4A:	RSFDRV	I SET DRIVE SELECTION T LOWEST NUMBER
1359 003244 104414	T4B:	MVCTRHS	I RESTORE DRIVE COUNTER
1360 003246 013757 000336 000340		MOV RECORD,WRRECR	I SAVE RECORD
1361 003254 104406		SVCTRHS	I SAVE DRIVE COUNTERS
1362 003256 104422		CHGDRV	I ANYMORE DRIVES SELECT D?
1363 003260 000711		BR T4B	I YES
1364 003262 042757 000010 000356		BIC #10,MODES	I INDICATE RLS END
1365 003270 104410	T4C:	RSFDRV	I RESTORE DRIVE COUNTER
1366 003272 104414	T4D:	MVCTRHS	I IS DRIVE AT EOT
1367 003274 032757 000040 000356		BIT #40,MODES	I YLS, SKIP WRITE
1368 003202 001010		BNE T4E	

```

1369 003304 013737 000340 000274      MOV    WRRECH,SVRECR|SAVE START OF RLS
1370 003312 104402      WRITIT   IWRITE
1371 003314 013737 000274 000340      MOV    SVRECR,WRRECR|RESTORE START OF RLS
1372 003322 104405      SVCTHS   ISAVE DRIVE COUNTERS
1373 003324 104422      T4E:    CHGDRV   IANMORE DRIVES SELECT D?
1374 003326 000761      BR     T4D     IYES
1375 003330 032737 000010 000356      BIT    #10,MODES  IARE WE AT END OF RLS
1376 003336 001007      BNE    T4G     IYES
1377 003340 104414      T4F:    MVCTRS   IRLSTORE DRIVE COUNTER
1378 003342 032737 000040 000356      BIT    #40,MODES  IARE WE AT EOT?
1379 003350 001797      BEQ    T4C     INO
1380 003352 104422      CHGDRV   IANMORE DRIVES SELECT D?
1381 003354 000711      BR     T4F     IYES
1382 003356 104410      T4G:    RSFDRV   ISET DRIVE SELECTION T LOWEST NUMBER
1383 003360 104414      T4H:    MVCTRS   IRESTORE DRIVE COUNTER
1384 003362 032737 000020 000356      BIT    #20,MODES  IIS THIS DRIVE AT EOT?
1385 003370 001002      BNE    T4J     IYES, SKIP BACKSPACE
1386 003372 004737 010540      JSR    PC,GOBKWD IBACKSPACE
1387 003376 104406      T4J:    SVCTHS   ISAVE DRIVE COUNTERS
1388 003400 104422      CHGDRV   IANY MORE DRIVES SELEC ED?
1389 003402 000766      BR     T4H     IYES
1390 003404 104410      T4K:    RSFDRV   ISET DRIVE SELECTION T LOWEST NUMBER
1391 003406 104414      T4L:    MVCTRS   IRESTORE DRIVE COUNTER
1392 003410 032737 000020 000356      BIT    #20,MODES  IIS THIS READ AT EOT?
1393 003416 001025      BNE    T4N     IYES, SKIP READ
1394 003420 023737 000342 000336      CMP    LASRCR,RECORD|HAVE WE READ LAST REC RD WRITTEN?
1395 003426 0014-1      BEQ    T4N     IYES
1396 003430 013737 000342 000274      MOV    LASRCR,SVRECR|SAVE LAST RECORD
1397 003436 032737 000003 001112      BIT    #3,PARAM  IIS READ MODE NONSTOP?
1398 003444 0014L5      BEQ    T4M     IYES
1399 003446 013737 000336 000342      MOV    RECORD,LASRCR
1400 003454 005237 000342      INC    LASRCR  I+1 TO LAST RECORD WR1 TEN
1401 003460 104424      T4M:    READIT   IREAD
1402 003462 013737 000274 000342      MOV    SVRECR,LASHCR|RESTORE LAST RECORD W ITTEN
1403 003470 104406      SVCTHS   ISAVE DRIVE COUNTERS
1404 003472 104422      CHGDRV   IANMORE DRIVES SELECT D?
1405 003474 000794      BR     T4L     IYES
1406 003476 104414      T4P:    MVCTHS   IRESTORE DRIVE COUNTER
1407 003500 023737 000342 000336      CMP    LASRCR,RECORD|ARE WE AT END OF RLS?
1408 003506 001356      BNE    T4K     INO
1409 003510 104422      CHGDRV   IANMORE DRIVES SELECT D?
1410 003512 000711      BR     T4P     IYES
1411 003514 004737 004400      JSR    PC,ALLEOT  IARE ALL DRIVES AT EOT
1412 003520 000650      BR     T4A     INO
1413 003522 000137 002704      JMP    DONE    IYES, EXIT
1414
1415
1416
1417
1418      TESTS
1419 003526 052737 000002 000356      TESTS: BIS    #2,MODES
1420 003534 104420      CLRALL  ICLEAR ERROR COUNTERS NO REWIND
1421 003536 012737 177777 004004  T5:    MOV    #-1,T5FLAG IENABLE EXIT FROM WRIT ROUTINE
1422 003544 104402      WRITIT  IENTER WRITE ONLY TO I INITIALIZE RECORD SEQUENCE
1423 003546 032737 000010 000356      BIT    #10,MODES  IARE WE AT END OF RLS?
1424 003554 001402      BEQ    T5A     IYES
1425 003556 004737 005206      JSR    PC,TESINC ISLE IF RECORD LENGTH HOULD BE CHANGED

```

```

1426 003562 013757 000336 004006 T5A: MOV RECORD,T5INC
1427 003570 005057 000336 CLR RECORD
1428 003574 052757 000010 000356 T5B: BIS #10,MODES   IINDICATE AT START OF LS
1429 003602 104410 RSFDRV ISET DRIVE SELECTION T LOWEST DRIVE NUMBER
1430 003604 104414 MVCTR SVCTRS IRESTORE DRIVE COUNTER
1431 003606 032757 000020 000356 BIT #20,MODES IIS THIS DRIVE AT EOT
1432 003614 001007 BNE T5D IYES
1433 003616 013757 000336 000342 MOV RECORD,LASRCR
1434 003624 063757 004006 000342 ADD T5INC,LASKCR ICURRENT RECORD + SEQU NCE LENGTH
1435 003632 104406 SVCTR SVCTRS ISAVE DRIVE COUNTERS
1436 003634 104422 CHGDRV IANYMORE DRIVES?
1437 003636 000762 RSFDRV BR T5C ISET DRIVE SELECTION T LOWEST NUMBER
1438 003640 104410 MVCTR IRESTORE DRIVE COUNTER
1439 003642 104414 T5E: MVCTR SVCTRS BIT #20,MODES IIS THIS DRIVE AT EOT?
1440 003644 032757 000020 000356 BNE T5G IYES
1441 003652 001041 MOV LASRCR,SVRECRISAVE END OF RLS RECOR S
1442 003654 013757 000342 000274 BIT #3,PARAM IIS READ MODE NONSTOP
1443 003662 032757 000003 001112 BEQ T5F IYES GO TO END RLS
1444 003670 001405 MOV RECORD,LASRCRINEXT TO BE READ
1445 003672 013757 000336 000342 INC LASRCR I+1 EXIT READ AFTER ON RECORD
1446 003700 005257 000342 T5F: READIT IREAD
1447 003704 104424 MOV SVRECR,LASRCRIRESTORE END RECOD
1448 003706 013757 000274 000342 SVCTR ISAVE DRIVE COUNTERS
1449 003714 104406 CHGDRV IANY MORE DRIVES?
1450 003716 104422 T5G: BR T5E IYES
1451 003720 000750 JSR PC,ALLEOT IALL AT EOT?
1452 003722 004757 004400 BR T5H INO
1453 003726 000402 JMP DONE IYES EXIT
1454 003730 000137 002704 T5H: RSFDRV ISET DRIVE SELECTION T LOWEST NUMBER
1455 003734 104410 T5J: MVCTR IRESTORE DRIVE COUNTER
1456 003736 104414 CMP RECORD,LASRCRARE WE AT END OF RLS?
1457 003740 023757 000336 000342 BNE T5K INO
1458 003746 001003 BIC #10,MODES IYES,
1459 003750 042757 000010 000356 CHGDRV IANYMORE DRIVES SELECT D7
1460 003756 104422 BR T5J IYES
1461 003760 000766 T5K: BIT #10,MODES IAT END OF RLS?
1462 003762 032757 000010 000356 BNE T5E INO
1463 003770 00134 JSR PC,ALLEOT IALL DRIVES AT EOT?
1464 003772 004757 004400 BR T5 INO
1465 003776 000657 JMP DONE IYES. EXIT
1466 004000 000137 002704 T5FLAG: 0
1467 004004 000000 TSINC: 0
1468 004006 000000 ISAVE DR;SAVE DRIVE RECORD AND ERROR COUNTERS
1469 SVCTR: JSR PC,CTRDEX
1470 004010 004757 004044 SVC1: MOV (0)+(1)+ SVCTR: JSR PC,CTRDEX
1471 004014 012041 CMP #DRVADR,RO SVC1: MOV (1)+(0)+ SVCTR: JSR PC,CTRDEX
1472 004016 022700 000360 BNE SVC1 CMP #DRVADR,RO SVC1: MOV (1)+(0)+ SVCTR: JSR PC,CTRDEX
1473 004022 00134 RTS PC
1474 004024 000207 IRESET DRIVE COUNTERS BACK INTO PROGRAM
1475 MVCTR: JSR PC,CTRDEX
1476 004026 004757 004044 MV1: MOV (1)+(0)+ MVCTR: JSR PC,CTRDEX
1477 004032 012120 CMP #DRVADR,RO MV1: MOV (1)+(0)+ MVCTR: JSR PC,CTRDEX
1478 004034 022700 000360 BNE MV1 CMP #DRVADR,RO MV1: MOV (1)+(0)+ MVCTR: JSR PC,CTRDEX
1479 004040 00134 RTS PC
1480 004042 000207 ISET UP POINTERS FOR MOVE AND SAVE COUNTERS
1481 004044 012700 000314 CTRDEX: MOV #WRCHEK,RO

```

```

1483 004050 012701 000360      MOV    #URVAUR,R1
1484 004054 063701 000302      ADD    CDRIVE,R1
1485 004060 063701 000302      ADD    CDRIVE,R1
1486 004064 011101              MOV    @R1,R1
1487 004066 000207              RTS    PC

1488          !CLEAR ALL DRIVE COUNTERS
1489 004070 104410              CLRRL: RSFDRV
1490 004072 004757 004342      CLR1: JSR    PC,REWIND
1491 004076 004757 004506      CLR1: JSR    PC,CLRTBL
1492 004102 104406              SVCTR
1493 004104 104422              CHGDRV
1494 004106 000771              BR    CLR1
1495 004110 052757 000010 000356 HIS    #10,MODES   !AT END OF RLS
1496 004116 005057 004004      CLR    TSFLAG
1497 004122 000207              RTS    PC

1498          !RESET DRIVE SELECTION TO LOWEST NUMBER
1499 004124 005057 000302      RSFDR: CLR    CDRIVE   !START WITH DRIVE 0
1500 004130 012757 000200 000300 MOV    #200,CDRVBT  !BIT FOR DRIVE 0
1501 004136 033757 000272 000300 RSF1: BIT    MSBITS,CDRVBT!IS DRIVE SELECTED?
1502 004144 001006              BNE    HSF2    !YES
1503 004146 005257 000302      INC    CDRIVE   !NO + 1 TO DRIVE
1504 004152 000241              CLC
1505 004154 006057 000300      ROR    CDRVBT  !ROTATE DRIVE BIT
1506 004160 000766              RR     RSF1    !REPEAT
1507 004162 013757 000302 000276 RSF2: MOV    CDRIVE,COMMAND
1508 004170 000357 000276              SWAR  COMMAND
1509 004174 032757 001150 000300 BIT    STFLGS,CDRVBT!IS DRIVE 7 TRACK?
1510 004202 001013              BNE    RSF3    ! YES
1511 004204 052757 060000 000276 BIS    #60000,COMMAND!800 BPI, 9 TRACK
1512 004212 032777 001000 174012 BIT    #1000,@SR  !TEST PARITY SELECTED
1513 004220 001403              BEQ    .+10    ! ODD
1514 004222 052757 004000 000276 BIS    #4000,COMMAND ! EVEN
1515 004230 000207              RTS    PC
1516 004232 105757 001112      RSF3: TSTB  PARAM   !SET APPROPRIATE 7 TRA K DENSITY BITS
1517 004236 100003              BPL    .+10
1518 004240 052757 040000 000276 BIS    #40000,COMMAND
1519 004246 032757 000100 001112 BIT    #100,PARAM
1520 004254 001403              BEQ    .+10
1521 004256 052757 020000 000276 BIS    #20000,COMMAND
1522 004264 032757 000400 001112 BIT    #400,PARAM !TEST PARITY SELECTED
1523 004272 001003              BNE    .+10    1000
1524 004274 052757 004000 000276 BIS    #4000,COMMAND !EVEN
1525 004302 000207              RTS    PC

1526          !SELECT NEXT DRIVE IN SEQUENCE
1527          !+1 WORD TO EXIT ADDRESS IF LAST DRIVE TESTED
1528 004304 005257 000302      CHGDR: INC    CDRIVE   !+1 TO DRIVE NUMBER
1529 004310 000241              CLC
1530 004312 006057 000300      ROR    CDRVBT  !MOVE MASK BIT OVER 1 LACE
1531 004316 001004              BNE    CHG1    !BRANCH IF MORE DRIVES SELECTED
1532 004320 104410              RSFDRV  !RESET DRIVE SELECT TO LOWEST NUMBER
1533 004322 062716 000002      ADD    #2,@SP   !+2 TO SKIP OVER FIRST EXIT
1534 004326 000207              RTS    PC
1535 004330 033757 000300 000272 CHG1: BIT    CDRVBT,MSBITS
1536 004336 001762              BEQ    CHGDR
1537 004340 000710              BH     RSF2
1538          !REWIND DRIVE TO BOT
1539 004342 105777 173650      REWIND: TSTA  #MTC

```

```

1540 004346 100375          BPL   .-4      IWAIT FOR CONTROL UNIT
1541 004350 013777 000276 173640  MOV    COMAND, @MTC  ISELECT DRIVE
1542 004356 006077 173632  ROR    @MTS
1543 004362 103375          BCC   .-4      IWAIT FOR TU READY
1544 004364 052777 000016 173624  BIS    #16, @MTC  IREWIND
1545 004372 004737 004532  JSR    PC, GOWAIT
1546 004376 000207          RTS    PC      IEXIT
1547                               IARE ALL DRIVES AT END OF TAPE
1548 004400 104410          ALLEOT: RSFDRV
1549 004402 104414          ALL1: MVCTR
1550 004404 032737 000060 000356  BIT    #60, MODES  IAT EOT?
1551 004412 001403          BEQ    ALLEOS  INO
1552 004414 104422          CHGDRV
1553 004416 000771          BR    ALL1      IDONE ALL DRIVES?
1554 004420 000477          BR    ALL3
1555 004422 032777 000400 173602  ALLEOS: BIT    #400, @SR  ITEST SWITCH 8 TO EXIT AT END OF SEQUENCE
1556 004430 001425          BEQ    ALL2      INO, GO TO EOT
1557 004432 032737 000010 000356  BIT    #10, MODES  IAT END OF SEQUENCE
1558 004440 001421          BEQ    ALL2      INO, EXIT, DON'T DUMP RROR COUNTERS
1559                               IDUMP ERROR COUNTERS ON ALL DRIVES
1560 004442 104410          CTRDMP: RSFDRV
1561 004444 104414          MVCTR
1562 004446 005737 004004  TST    T5FLAG
1563 004452 001006          BNE    CTRD1  IDUMP READ ONLY
1564 004454 004737 005542  JSR    PC, ENDT1
1565 004460 032737 000004 000356  BIT    #4, MODES  IREAD PASS SELECTED?
1566 004466 001402          BEQ    COMFNO  INO
1567 004470 004737 010110  CTRD1: JSR    PC, RNOTP1
1568 004474 104422          COMEND: CHGDRV
1569 004476 000762          BR    CTRDMP+2  INO
1570 004500 062716 000002  ALL3: ADD    #2, (6)  INCREMENT RETURN POIN
1571 004504 000207          ALL2: RTS    PC
1572                               ICLEAR READ AND WRITE TABLES
1573 004506 012700 000314  CLRTBL: MOV    #WRCHEK, R0
1574 004512 005020          CLRT1: CLR    (0)+
1575 004514 020077 000356  CMP    R0, #MODES
1576 004520 001374          BNE    CLRT1
1577 004522 042737 000070 000356  BIC    #70, MODES
1578 004530 000207          RTS    PC
1579                               IINTERRUPT ENABLE, GO, WAIT FOR INTERRUPT
1580 004532 012777 000200 173470  GOWAIT: MOV    #200, @CC  ISET PRIORITY LEVEL 4
1581 004540 012777 004566 173506  MOV    #GW1, @MTV  ISET INTERRUPT RETURN
1582 004546 052777 000101 173442  BIS    #101, @MTC  IINTERRUPT ENABLE, GO
1583 004554 000001          WAIT
1584 004556 012777 000340 173444  MOV    #340, @CC  IRESTORE PRIORITY LEVE 7
1585 004564 000207          RTS    PC      IEXIT
1586 004566 000002          GW1: RTI      IRETURN FROM INTERRUPT
1587                               IWRITE RECORD SECTION
1588 004570 005737 000336  WRITI: TST    RECORD  IIS THIS THE FIRST REC RD
1589 004574 001001          BNE    NOINCR  INO, SKIP SET UP OF RE ORD LENGTH AND BLOCK INCRE EN
1590 004576 013737 000244 000266  MOV    MAXLEN, STRLEN
1591 004604 012737 177774 000310  MOV    #-4, BLKINC
1592 004612 032737 000020 001112  BIT    #20, PARAM
1593 004620 001006          BNE    W1
1594 004622 013737 000246 000266  MOV    MINLEN, STRLEN
1595 004630 012737 000004 000310  MOV    #4, BLKINC
1596 004636 013737 000266 000352  W1:  MOV    STRLEN, WRTLEN

```

```

1597 004644 032737 000040 001112      BIT #40,PARAM    I DOES RECOND LENGTH CH NGE?
1598 004652 001002      BNE NOINCR     IYES
1599 004654 005057 000310      CLR BLKINC     INO
1600 004660 013737 000336 000340  NOINCR: MOV RECORD,WRRECR
1601 004666 013777 000276 173322      MOV COMAND,AMTC  ISELECT UNIT
1602 004674 105777 173316      TSTB @MTC
1603 004700 100375      UPL .-4
1604 004702 104442      GENPT
1605 004704 005737 004C04      W31 TST TSFLAG
1606 004710 001401      BEQ .+4
1607 004712 000207      RTS PC
1608 004714 005057 000306      CLR WRPASS
1609 004720 006077 173270      STRTOP: ROR @MTS
1610 004724 103375      BEC .-4
1611 004726 013777 000352 173264  NONSTP: MOV WRTLEN,ABC
1612 004734 005477 173260      NEG @BC
1613 004740 013777 000250 173254      MOV WBUF,ACA
1614 004746 052777 000004 173242      BIS #4,AMTC
1615 004754 004737 004532      JSR PC,GOWAIT
1616          IRETURN HERE AFTER INTERRUPT
1617 004760 017737 173230 000312      MOV @MTS,STATRD  ISAVE STATUS
1618 004766 005777 173224      TST AMTC
1619 004772 100542      BMI ERROR
1620 004774 005737 000306      TST WRPASS
1621 005000 001410      BEQ TSTSTP
1622 005002 013700 000306      MOV WRPASS,RO
1623 005006 006300      ASL RO
1624 005010 062700 000314      ADD #WRCHEK,RO
1625 005014 001210      INC @RO
1626 005016 005057 000306      CLR WRPASS
1627 005022 032737 000014 001112  TSTSTP: BIT #14,PARAM
1628 005030 001043      BNE STOPOP
1629 005032 005737 000306      TST WRPASS
1630 005036 001303      BNE NONSTP
1631 005040 004737 005206      JSR PC,TESSINC
1632 005044 032737 000001 000356      BIT #1,MODES
1633 005052 001405      BEQ W10
1634 005054 032737 000010 000356      BIT #10,MODES
1635 005052 001741      BEQ NONSTP
1636 005064 000207      RTS PC
1637 005066 032737 000002 000356  W10: BIT #2,MODES
1638 005074 001714      BEQ NONSTP
1639 005076 000207      RTS PC
1640 005100 032737 000010 001112  STOPOP: BIT #10,PARAM
1641 005106 001414      BEQ W11
1642
1643
1644          IRANDOM STALL DELAY
1645 005110 004737 007126      RANSTP: JSR PC,RANGEN
1646 005114 052737 177400 007256      BIS #177400,RANDOM
1647 005122 012704 177470      RAN1: MOV #-200.+R4  IDELAY 1 MILLISECOND
1648 005126 005204      INC R4
1649 005130 001376      BNE .-2
1650 005132 005237 007256      INC RANDOM
1651 005136 001371      BNE RAN1
1652 005140 005737 000306      W11: TST WRPASS
1653 005144 001265      BNE STRTOP

```

```

1654 005146 004757 005206      JSR    PC,TESINC
1655 005152 032757 000001 000356  BIT    #1,MODES   IEXIT AFTER RLS?
1656 005160 001405      BEQ    W12     INO
1657 005162 032757 000010 000356  BIT    #10,MODES  IYES, ARE WE AT END OF RLS?
1658 005170 001603      BEQ    STRTOP  INO
1659 005172 000207      RTS    PC      IYES
1660 005174 032757 000002 000356  W12:  BIT    #2,MODES   IEXIT EVERY RECORD?
1661 005202 001646      BEQ    STRTOP  INO
1662 005204 000207      RTS    PC      IYES
1663          SEE IF RECORD LENGTH SHOULD BE CHANGED
1664 005206 005257 000336  TESINC1: INC    RECORD  I+1 TO RECORD COUNT
1665 005212 042757 000010 000356  BIC    #10,MODES  INOT END OF RLS UNLESS SET BELOW
1666 005220 005757 000310      TST    BLKINC
1667 005224 001416      BEQ    TSINC2
1668 005226 063757 000310 000352  ADD    BLKINC,WRTLEN
1669 005234 023757 000352 000246  CMP    WRTLEN,MINLENIRECORD LENGTH TOO SHO T?
1670 005242 002404      HLT    RESFTL  IYES,RESET
1671 005244 023757 000352 000244  CMP    WRTLEN,MAXLENIRECORD LENGTH TOO LON ?
1672 005252 003403      BLE    TSINC2  INO
1673 005254 013757 000266 000352  RESETL: MOV    STRLEN,WRTLEN,IYES, RESET
1674 005262 105757 000336  TSINC2: TSTB   RECORD
1675 005266 001003      BNE    TSINC3  INO
1676 005270 052757 000010 000356  BIS    #10,MODES  IINDICATE AT END OF RL
1677 005276 000207      TSINC3: RTS   PC
1678          HAVE AN ERROR FLAG DURING WRITE OPERATION
1679          IF ERROR IS CAUSED BY END OF TAPE FLAG, DUMP WRIT ERROR COUNTERS
1680          FOR ALL OTHER ERRORS: PRINT COMMAND AND STATUS R GISTERS AND RECORD NUMBER
1681          IF READ PASS IS SELECTED, TRY TO RECOVER BY WRITING WITH XIRG.
1682 005300 032757 175600 000312  ERROR: BIT    #175600,STATRDAT EOT?
1683 005306 001510      BEQ    ENDTAP  IYES
1684 005310 005757 000306      TST    WRPASS
1685 005314 001002      BNE    ERR1    IFIRST ERROR?
1686 005316 005257 000314      INC    WRCHEK  IYES, +1 TO WRITE ERRO
1687 005322 032757 020000 172702  ERR1:  BIT    #20000,0$SR  ITYPE ALL ERRORS?
1688 005330 001010      BNE    TESREC  INO
1689 005332 012702 012212      MOV    #MSG7,R2
1690 005336 104404      TOP
1691 005340 013757 000352 000270  MOV    WRTLEN,LENGTH
1692 005346 004757 010756      JSR    PC,PRTS  IPRINT STATUS, COMMAND RECORD, LENGTH
1693 005352 032757 000100 172652  TESREC1: BIT    #100,0$SR  IRECOVER STATISTICALLY SELECTED?
1694 005360 001410      BEQ    TESRC1  INO
1695 005362 005257 000306      INC    WRPASS  I+1 TO WRITE RECOVER.
1696 005366 022757 000010 000306  CMP    #8..WRPASS  IHAVE WE TRIED TO WRIT RECOVER 8 TIMES?
1697 005374 001040      BNE    STRFC1  INO
1698 005376 005257 000334      INC    PERMB8  IYES, +1 TO PERMANENT ADSPOT?
1699 005402 032757 000004 000356  TESRC1: BIT    #4,MODES  IIS READ PASS SELECTED
1700 005410 001402      BEQ    .+6    INO
1701 005412 004757 010322      JSR    PC,XRGREC
1702 005416 005037 000306      CLR    WRPASS
1703 005422 032757 002000 000312  BIT    #2000,STATRD
1704 005430 001037      DNE    ENDTAP
1705 005432 000157 005140      JMP    W11
1706 005436 004757 010032      STREC1: JSR    PC,PACK1
1707 005442 004757 010032      JSR    PC,PACK1  IBACKSPACE 2 RECORDS
1708 005446 032757 000040 172540  BIT    #40,0MTS
1709 005454 001402      BEQ    .+6
1710 005456 000157 004726      JMP    STRTOP

```

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-30

```

1711 005462 012777 177777 172530      MOV    #-1,ABC
1712 005470 013777 000276 172520      MOV    COMMAND,AMTC
1713 005476 052777 000010 172512      BIS    #10,AMTC
1714 005504 004737 004532      JSR    PC,GOWAIT   ISPACE FORWARD 1 RECOR
1715 005510 042777 000016 172500      BIC    #16,AMTC
1716 005516 052777 000004 172472      BIS    #4,AMTC
1717 005524 000137 004720      JMP    STRTOP   CHANGE FROM SPACE TO RITE

1718          !DRIVE IS AT EOT
1719 005530 005237 000336      ENDTAP: INC RECORD
1720 005534 052737 000040 000356      HIS    #40,MODES
1721 005542 012702 013142      ENDT1: MOV #MSG24,R2
1722 005546 104404          TOP
1723 005550 012702 012240      MOV    #MSG8,R2
1724 005554 104404          TOP
1725          !DUMP WRITE ERRORS
1726 005556 004737 011020      WRTDMP: JSR PC,PRTD   IPRINT DRIVE, PATTERN, PARITY, DENSITY
1727 005562 013705 001112      MOV    PARAM,R5
1728 005566 042715 177763      BIC    #177763,R5
1729 005572 012702 012675      MOV    #MSG14,R2
1730 005576 022705 000004      CMP    #4,R5
1731 005602 001002          BNE    .+6
1732 005604 012702 012655      MOV    #MSG12,R2
1733 005610 022705 000010      CMP    #10,R5
1734 005614 001002          BNE    .+6
1735 005616 012702 012665      MOV    #MSG13,R2
1736 005622 104404          TOP
1737 005624 013702 000336      MOV    RECORD,R2
1738 005630 104426          DECPRT  IPRINT RECORD NUMBER
1739 005632 013705 001112      MOV    PARAM,R5
1740 005636 042705 177717      BIC    #177717,R5
1741 005642 012702 012723      MOV    #MSG17,R2
1742 005646 022703 000020      CMP    #20,R5
1743 005652 001002          BNE    .+6
1744 005654 012702 012732      MOV    #MSG18,R2
1745 005660 022705 000040      CMP    #40,R5
1746 005664 001002          BNE    .+6
1747 005666 012702 012705      MOV    #MSG15,R2
1748 005672 022705 000060      CMP    #60,R5
1749 005676 001002          BNE    .+6
1750 005700 012702 012714      MOV    #MSG16,R2
1751 005704 104404          TOP
1752 005706 012702 012741      MOV    #MSG19,R2
1753 005712 104404          TOP
1754 005714 013702 000314      MOV    WRCHEK,R2
1755 005720 104446          DECPRT  IPRINT "WRITE ERRORS"
1756 005722 012700 000316      MOV    WRCHEK+2,R0
1757 005726 112737 000060 013002      MOVB  #60,MSG20+17
1758 005734 013002          WRTD1: INCB MSG20+17   IPRINT STATISTICAL REC VERY
1759 005740 005710          TST    #H0
1760 005742 001405          BEQ    WRTD2
1761 005744 012702 012763      MOV    #MSG20,R2
1762 005750 104404          TOP
1763 005752 011002          MOV    (0),R2
1764 005754 104446          DECPRT  (0)+     IRECOVERED AT X
1765 005756 005740          TST    (0)+     JUST INCREMENTING
1766 005760 020007 000334      CMP    R0,#WRCHEK+20
1767 005764 001363          BNE    WRTD1

```

```

1768 005766 005757 000334      TST    PERMBS
1769 005772 0010U1      BNE    .+4      !SKIP PRINT IF # 0
1770 005774 0002U7      RTS    PC
1771 005776 0127U2 013005      MOV    #MSG20A,R2
1772 006002 1044U4      TOP
1773 006004 0137U2 000334      MOV    PERMBS,R2  !PRINT "PERMANENT BADS OT"
1774 006010 1044<6      DECPRT
1775 006012 0002U7      RTS    PC
1776      !GENERATE 7 TRACK DATA PATTERN
1777      !ALL PATTERNS HAVE BITS 15,14,7,6 SET IN CASE CORE DUMP SELECTED
1778 006014 012757 000001 001146  GENP7: MOV    #1,PGMODE  !SET 7 TRACK PATTERN G N. MODE
1779 006022 0137U2 000250      MOV    WBUF,R2
1780 006026 0137U3 001112      MOV    PARAM,R3
1781 006032 0003U3      SWAB   R3
1782 006034 00F3U3      ASL    R3
1783 006036 0427U3 177741      BIC    #177741,R3
1784 006042 0627U3 006114      ADD    #PATPST,R3
1785 006046 012746 006054      MOV    #PATCK,-(SP)  !PUSH STACK RETURN
1786 006052 0113U7      MOV    @R3,PC  !GO TO PAT GEN SUBROUTINE
1787      !FINISHED PATTERN GENERATION
1788      !IF CORE DUMP NOT SELECTED CLEAR BITS 15,14,7,6 IN ALL WORDS OF WRITE DATA BU FE
1789 006054 032757 000100 001112  PATCK: BIT    #100,PARAM  !IS CORE DUMP SET?
1790 006062 0014U4      BEQ    PATE0  INO
1791 006064 032757 000200 001112  BIT    #200,PARAM  !MAYBE, IS CORE DUMP S T?
1792 006072 0010U7      BNE    PATE02 !YES
1793 006074 0137U2 000250      PATE0: MOV    WBUF,R2  INO
1794 006100 0427<2 140300      PATE01: BIC    #140300,(2)+ !CLEAR BITS 15,14,7,6
1795 006104 0237U2 000252      CMP    RBUF,R2  !DONE ALL?
1796 006110 0013U3      ANE    PATE01  INO
1797 006112 0002U7      PATE02: RTS    PC
1798 006114 006154      PATPST: PATE0
1799 006116 006152      PAT00
1800 006120 006170      PATF1
1801 006122 0062U4      PAT01
1802 006124 0062<0      PATF2
1803 006126 006246      PAT02
1804 006130 006254      PATE3
1805 006132 006242      PATE03
1806 006134 006250      PATE4
1807 006136 006750      PAT4
1808 006140 006274      PATE5
1809 006142 0063U2      PATE6
1810 006144 006352      PAT6
1811 006146 006352      PAT6
1812 006150 006350      PATE7
1813 006152 0071U5      PAT7
1814      !PATTERN 0
1815      !HIGH FREQUENCY OUTSIDE SKEW
1816 006154 0127U3 140701  PATE0: MOV    #140701,R3  !401
1817 006160 000513      BR    PFIL1
1818      !HALF FREQUENCY OUTSIDE SKEW
1819 006162 0127U3 140301  PAT00: MOV    #140301,R3  !1
1820 006166 000510      BR    PFIL1
1821      !PATTERN 1
1822      !SLIDING 0
1823 006170 0127U3 006176  PATE1: MOV    #PE1,R3
1824 006174 000512      BR    PFIL3

```

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-32

1825 006176	167757	P01: 167757	127437
1826 006200	175767		135467
1827 006202	177375		137075
1828		:SLIDING 1	
1829 006204	012703 006212	PAT01: MOV #P01,R3 BR PFIL3	
1830 006210	000504	P01: 150340	110040
1831 006212	150340	142310	12010
1832 006214	142310	140702	1402
1833 006216	140702		
1834		:PATTERN 2	
1835		:HIGH FREQUENCY EVRY OTHER TRACK	
1836 006220	012703 152725	PATE2: MOV #152725,R3	112425
1837 006224	000471	BR PFIL1	
1838		:HIGH FREQUENCY EVERY OTHER TRACK	
1839 006226	012703 165352	PATE2: MOV #165352,R3	125052
1840 006232	000466	BR PFIL1	
1841		:PATTERN 3	
1842		:HALF FREQUENCY OUTSIDE TRACK, HIGH FREQUENCY INSI E TRACKS	
1843 006234	012703 177377	PATE3: MOV #177377,R3	137077
1844 006240	000463	BR PFIL1	
1845		:HIGH FREQUENCY OUTSIDE TRACK, HALF FREQUENCY INSI E TRACKS	
1846 006242	012703 177701	PATE3: MOV #177701,R3	137401
1847 006246	000460	BR PFIL1	
1848		:PATTERN 4	
1849		:INCREMENTING PATTERN (NO ALL 0'S)	
1850 006250	012703 000301	PATE4: MOV #301,R3 MOVB R3,(2)+ CMP RBUF,R2 BNE .+4 RTS PC INCB R3 BEQ PATE4 BR PATE4+4	
1851 006254	110322		
1852 006256	023702 000252		
1853 006262	001001		
1854 006264	000207		
1855 006266	105203		
1856 006270	001707		
1857 006272	000700		
1858		:	
1859		:	
1860		:PATTERN 5	
1861		:THREE 3'S EACH TRACK EVERY 6TH WORD	
1862 006274	012703 006302	PATE5: MOV #P05,R3 BR PFIL9	
1863 006300	000405	P05: 157437	117437
1864 006302	157437	167737	127437
1865 006304	167737	167757	127457
1866 006306	167757	173767	133467
1867 006310	173767	171767	131467
1868 006312	171767	171773	131473
1869 006314	171773	176775	137075
1870 006316	176775	177376	137076
1871 006320	177376		
1872		:THREE 1'S EACH TRACK EVERY 6TH WORD	
1873 006322	012703 006330	PAT05: MOV #P05,R3 BR PFIL9	
1874 006326	000402	P05: 160340	120040
1875 006330	160340	150340	110040
1876 006332	150340	150320	110020
1877 006334	150320	144310	14010
1878 006336	144310	142310	12010
1879 006340	142310	142304	12004
1880 006342	142304	141302	11002
1881 006344	141302		

1882 006346	140702	1402
1883 006350	140701	1401
1884	I PATTERN 6	
1885	I ALL 1'S ALL TRACKS	
1886 006352	0127U3 177777	PAT6: MOV #1,R3
1887 006356	000414	BR PFIL1
1888	I PATTERN 7	
1889	I RANDOM (NONE ALL 0'S)	
1890 006360	004737 007126	PATE7: JSR PC,RANGEN
1891 006364	1327U7 000077 007256	BITB #77,RANDOM
1892 006372	0017U2	REQ PATE7
1893 006374	113722 007256	MOVB RANDOM,(2)+
1894 006400	0237U2 000252	CMP RBUF,R2
1895 006404	001365	BNE PATE7
1896 006406	0002U7	RTS PC
1897	I FILL WRITE BUFFER WITH CONSTANT PATTERN	
1898 006410	0103U2	PFIL1: MOV R3,(2)+
1899 006412	0237U2 000252	CMP RBUF,R2
1900 006416	0013U4	BNE PFIL1
1901 006420	0002U7	RTS PC
1902	I FILL WRITE BUFFER WITH 3 WORD PATTERN	
1903 006422	0103U4	PFIL3: MOV R3,R4
1904 006424	0627U4 000006	ADD #6,R4
1905 006430	0123U2	PFIL3A: MOV (3)+(2)+
1906 006432	0237U2 000252	CMP RBUF,R2
1907 006436	0010U1	BNE .+4
1908 006440	0002U7	RTS PC
1909 006442	0203U4	CMP R3,R4
1910 006444	0010U2	BNE .+6
1911 006446	1627U3 000006	SUB #6,R3
1912 006452	0007U6	BR PFIL3A
1913	I FILL WRITE BUFFER WITH 9 WORD PATTERN	
1914 006454	0103U4	PFIL9: MOV R3,R4
1915 006456	0627U4 000022	ADD #22,R4
1916 006462	0123U2	PFIL9A: MOV (3)+(2)+
1917 006464	0237U2 000252	CMP RBUF,R2
1918 006470	0010U1	BNE .+4
1919 006472	0002U7	RTS PC
1920 006474	0203U4	CMP R3,R4
1921 006476	0010U2	BNE .+6
1922 006500	1627U3 000022	SUB #22,R3
1923 006504	0007U6	BR PFIL9A
1924	I GENERATE 9 TRACK DATA PATTERN	
1925 006506	012737 000002 001146	GENP9: MOV #2,PGMODE I SET 9 TRACK PATTERN G N. MODE
1926 006514	0137U2 000250	MOV WBUF,R2 I INITIALIZE BUFFER
1927 006520	0137U3 001112	MOV PARAM,R3 I CHECK PARAMETERS FOR ATTERN SELECTED
1928 006524	0003U3	SWAB R3
1929 006526	0427U3 177761	BIC H177761,R3
1930 006532	0627U3 006540	ADD #PATPNT,R3
1931 006536	0113U7	MOV GR3,PC
1932 006540	0065U0	PATPNT: PAT0
1933 006542	0065U4	PAT1
1934 006544	0066U4	PAT2
1935 006546	0066U0	PAT3
1936 006550	0067U0	PAT4
1937 006552	0067U5	PAT5
1938 006554	0070U2	PAT69

CR
CR
CR
CR

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-34

1939	006556	007106	
1940			
1941			
1942	006560	012722	002012
1943	006564	023702	000252
1944	006570	001373	
1945	006572	000207	
1946			
1947			
1948	006574	012700	006622
1949	006600	012022	
1950	006602	023702	000252
1951	006606	001001	
1952	006610	000207	
1953	006612	022700	006644
1954	006616	001370	
1955	006620	000765	
1956	006622	100000	
1957	006624	020100	
1958	006626	004020	
1959	006630	001004	
1960	006632	000001	
1961	006634	040200	
1962	006636	010040	
1963	006640	002010	
1964	006642	000422	
1965			
1966			
1967	006644	012722	136274
1968	006650	023702	000252
1969	006654	001373	
1970	006656	000207	
1971			
1972			
1973	006660	012700	006706
1974	006664	012022	
1975	006666	023702	000252
1976	006672	001001	
1977	006674	000207	
1978	006676	022700	006730
1979	006702	001370	
1980	006704	000765	
1981	006706	140037	
1982	006710	100476	
1983	006712	001574	
1984	006714	003770	
1985	006716	017760	
1986	006720	037300	
1987	006722	076201	
1988	006724	174043	
1989	006726	170007	
1990			
1991			
1992	006730	105037	006754
1993	006734	113722	006754
1994	006740	105207	006754
1995	006744	023702	000252

```

PAT7
: PATTERN 0
: HALF FREQUENCY OUTSIDE SKEW
PAT0: MOV    #2012,(2)+  !(010)(004)
      CMP    RBUF,R2
      BNE    PAT0
      RTS    PC

: PATTERN 1
: SLIDING 1 BIT (ISOLATED BIT)
PAT1: MOV    #P1T,R0
PAT1A: MOV    (0)+(2)+ 
      CMP    RBUF,R2
      BNE    .+4
      RTS    PC
      CMP    #PAT2,R0
      BNE    PAT1A
      BR     PAT1

P1T:   100000
       20100
       4020
       1004
       1
       40200
       10040
       2010
       402

: PATTERN 2
: HIGH FREQUENCY EVERY OTHER TRACK
PAT2: MOV    #136274,(2)+ !(274)(274)
      CMP    RBUF,R2
      BNE    PAT2
      RTS    PC

: PATTERN 3
: THREE 0'S, THREE 1'S, THREE 0'S
PAT3: MOV    #P3T,R0
PAT3A: MOV    (0)+(2)+ 
      CMP    RBUF,R2
      BNE    .+4
      RTS    PC
      CMP    #PAT4,R0
      BNE    PAT3A
      BR     PAT3

P3T:   140037 .
       100476
       1574
       3770
       17760
       37300
       76201
       174003
       170007

: PATTERN 4
: INCREMENTING PATTERN (0-377)
PAT4: CLR B P4A
P4:    MOVB  P4A,(2)+ 
      INC B P4A
      CMP    RBUF,R2

```

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-35

1996 006750	0013/1		BNE	P4	CR
1997 006752	0002U7		RTS	PC	CR
1998 006754	000000		P4A1	0	CR
1999			!PATTERN 5		
2000			!EACH TRACK 3 BITS		
2001 006756	0127U0	007004	PAT5:	MOV #PAT5,R0	CR
2002 006762	0120U2		PAT5A:	MOV (0)+(2)+	CR
2003 006764	0237U2	000252		CMP RBUF,R2	CR
2004 006770	0010U1			BNE .+4	CR
2005 006772	0002U7			RTS PC	CR
2006 006774	0227U0	007072		CMP #PAT69,R0	CR
2007 007000	0013/0			BNE PAT5A	CR
2008 007002	000765			BR PAT5	CR
2009 007004	000000		P5T1	0	CR
2010 007006	100000			100000	CR
2011 007010	1002U0			100200	CR
2012 007012	0401U0			40100	CR
2013 007014	0201U0			20100	CR
2014 007016	0200U0			20040	CR
2015 007020	0100<0			10020	CR
2016 007022	0040<0			4020	CR
2017 007024	004010			4010	CR
2018 007026	0020U4			2004	CR
2019 007030	0010U4			1004	CR
2020 007032	0010U2			1002	CR
2021 007034	000401			401	CR
2022 007036	0000U1			1	CR
2023 007040	000000			0	CR
2024 007042	1002U0			100200	CR
2025 007044	0402U0			40200	CR
2026 007046	0401U0			40100	CR
2027 007050	0200U0			20040	CR
2028 007052	010040			10040	CR
2029 007054	0100<0			10020	CR
2030 007056	004010			4010	CR
2031 007060	002010			2010	CR
2032 007062	0020U4			2004	CR
2033 007064	0010U2			1002	CR
2034 007066	0004U2			402	CR
2035 007070	0004U1			401	CR
2036			!PATTERN 6		
2037			!HIGH FREQUENCY ALL TRACKS		
2038 007072	0127U2	177777	PAT69:	MOV #-1,(2)+	CR
2039 007076	0237U2	000252		CMP RBUF,R2	CR
2040 007102	001373			BNE PAT69	CR
2041 007104	6002U7			RTS PC	CR
2042			!PATTERN 7		
2043			!RANDOM		
2044 007106	004737	007126	PAT7:	JSR PC,RANGEN	CR
2045 007112	013742	007256		MOV RANDOM,(2)+	CR
2046 007116	0237U2	000252		CMP RBUF,R2	CR
2047 007122	0013/1			BNE PAT7	CR
2048 007124	0002U7			RTS PC	CR
2049			!RANDOM NUMBER GENERATOR		
2050			!EXIT WITH RANDOM NUMBER IN LOCATION NAMED "RANDOM"		
2051			RANGEN:	MOV R0,-(SP) ISAVE REGISTERS	CR
2052 007126	010046				CR

2053 007130 010146		MOV R1,-(SP)		CR
2054 007132 010246		MOV R2,-(SP)		CR
2055 007134 010346		MOV R3,-(SP)		CR
2056 007136 013700	007260	MOV LONUM,R0	ISET UP LOW DIGIT	
2057 007142 013701	007262	MOV HINUM,R1	ISET UP HIGH DIGIT	
2058 007146 012703	000007	MOV #7,R3	ISET UP SHIFT COUNT	
2059 007152 005002		CLR R2		
2060 007154 006300		RANG1: ASL R0	ISHIFT R0 LEFT AND	
2061 007156 006101		ROL R1	ROTATE CARRY INTO LSB OF R1 AND	
2062 007160 006102		ROL R2	ROTATE CARRY OUT OF R INTO R2	
2063 007162 005303		DEC R3	IDECREMENT R3	
2064 007164 001373		HNE RANG1	icontinue shift loop	
2065 007166 063700	0C7260	ADD LONUM,R0	IADD NUMBER TO MAKE X1 S	
2066 007172 005501		ADC R1	IPROPAGATE CARRY	
2067 007174 063701	007262	ADD HINUM,R1	IADD NUMBER TO MAKE X 29	
2068 007200 005502		AUC R2	IPROPAGATE CARRY	
2069 007202 062700	001057	ADD #1057,R0	IADD LOW CONSTANT	
2070 007206 005501		ADC R1	IPROPAGATE CARRY	
2071 007210 005502		ADC R2	IPROPAGATE CARRY	
2072 007212 062701	047401	ADD #47401,R1	IADD HIGH CONSTANT	
2073 007216 005502		ADC R2	IPROPAGATE CARRY	
2074 007220 062702	000006	ADD #6,R2	IADD HIGH CONSTANT	
2075 007224 060200		ADD R2,R0	IRE-PRIME R0 WITH HIGH DIGIT	
2076 007226 005501		ADC R1	IPROPAGATE CARRY	
2077 007230 010037	007256	MOV R0,RANDOM	ISAVE RANDOM NUMBER	
2078 007234 010037	007260	MOV R0,LONUM	INPUT R0 BACK IN LONUM	
2079 007240 010137	007262	MOV R1,HINUM	INPUT R1 BACK IN HINUM	
2080 007244 012603		MOV (SP)+,R3	IRESTORE REGISTERS	
2081 007246 012602		MOV (SP)+,R2		CR
2082 007250 012601		MOV (SP)+,R1		CR
2083 007252 012600		MOV (SP)+,R0		CR
2084 007254 000207		RTS PC	IEEXIT	CR
2085		I		
2086 007256 000000		RANDOM: 0		
2087 007260 000000		LONUM: 0		
2088 007262 000000		HINUM: 0		
2089		IREAD RECORD SECTION		
2090 007264 005737	000336	READ1: TST RECORD	IFIRST RECORD?	
2091 007270 001003		BNE DOLLR1	INO	
2092 007272 013737	000266 000354	MOV STRLEN,READLN	ISET INITIAL READ LENG H	
2093 007300 012737	177775 000304	DOLLR1: MOV #3,RDPASS	INITIALIZE READ PASS COUNTER	
2094 007306 013777	000276 170702	ROSTPO: MOV COMAND,AMTC		
2095 007314 105777	170676	TSTB AMTC		
2096 007320 100375		BPL .-4	IWAIT FOR CONTROL UNIT READY	
2097 007322 006077	170666	RUR AMTS		
2098 007326 103375		BCC .-4	IWAIT FOR TAPE UNIT RE DY	
2099 007330 013700	000252	READGO: MOV RBUF,R0		
2100 007334 013701	000354	MOV READLN,R1		
2101 007340 105020		RG1: CLR B (0)+	ICLEAR READ BUFFER	
2102 007342 005301		DEC R1		
2103 007344 001375		BNE RG1		
2104 007346 013777	000354 170644	MOV READLN,ABC	ISET BYTE COUNT	
2105 007354 005477	170640	NEG ABC		
2106 007360 013777	000252 170634	MOV RBUF,ACA	ISET CURRENT ADDRESS	
2107 007366 013777	000276 170622	MOV COMAND,AMTC		
2108 007374 104492		GENPT	IGENERATE TEST PATTERN	
2109 007376 052777	000002 170612	BIS #2,AMTC		

```

2110 007404 004737 004532      JSR    PC,GOWAIT
2111
2112                               !RETURN HERE AFTER INTERRUPT
2113 007410 017737 170600 000312  MOV    #MTS,STATRD
2114 007416 005777 170574          TST    #MTC      !ANY STATUS ERRORS
2115 007422 100504          BMI    #DERR0   !YES
2116
2117                               !CHECK FOR DATA ERRORS
2118 007424 013700 000252  MOV    RBUF,R0
2119 007430 013701 000250  MOV    WBUF,R1
2120 007434 013702 000354  MOV    READLN,R2
2121 007440 0220<1          DOLLRS: CMP   #(0)+(1)+ !CHECK FOR PROPER DATA TRANSFER
2122 007442 001045          BNE    DATERR !HAVE DATA ERROR
2123 007444 1627L2 000002  SUB    #2,R2   !CHECKED ALL TRANSFERS
2124 007450 0013/5          BNE    DOLLRS  !NO
2125 007452 032737 000003 001112 RTSSTP: BIT   #3,PARAM
2126 007460 001007          BNE    RDSTPC
2127 007462 004737 007762          JSR    PC,HDINCR !INCREMENT FOR NEXT BL CK
2128 007466 023737 000336 000342  CMP    RECORD,LASRCH
2129 007474 001315          BNE    READGO
2130 007476 000207          RTS    PC      !EXIT READIT
2131 007500 032737 000002 001112 RDSTPC: BIT   #2,PARAM !IS READ MODE RANDOM?
2132 007506 001414          HLD    RDSTP   !NO
2133 007510 004737 007126          RNDROS: JSR    PC,RANGEN
2134 007514 052737 177400 007256  BIS    #177400,RANDOM
2135 007522 012704 177470          RNDS1: MOV   #-200..R4 !DELAY 1 MILLISECOND
2136 007526 005204          INC    R4
2137 007530 0013/6          BNE    .-2
2138 007532 005237 007256          INC    RANDOM
2139 007536 0013/1          BNE    RNDS1
2140 007540 004737 007762          RDSTP: JSR    PC,HDINCR
2141 007544 023737 000336 000342  CMP    RECORD,LASRCRDONE LAST RECOND?
2142 007552 001205          HNE    RDSTPD  !NO
2143 007554 000207          RTS    PC      !YES EXIT
2144                               !HAVE DATA ERROR
2145 007556 032737 020000 170446 DATER1: BIT   #20000,BSR !TYPE ALL READ ERRORS?
2146 007564 001014          BNE    DATER1  !NO
2147 007566 012702 012373          MOV    #MSG9A,R2
2148 007572 104414          TOP
2149 007574 013737 000354 000270  MOV    READLN,LENGTH
2150 007602 004737 010756          JSR    PC,PRTS
2151 007606 014102          MOV    -(1),R2 !PRINT EXPECTED DATA
2152 007610 104412          OCTPRT
2153 007612 014002          MOV    -(0),R2 !PRINT ACTUAL DATA
2154 007614 104412          OCTPRT
2155 007616 023737 177775 000304 DATER1: CMP   #-3,HDPASS
2156 007624 001002          BNE    .+6
2157 007626 005237 000346          INC    DAERRS !+1 TO DATA ERRORS
2158 007632 000426          HR    RTSR1
2159                               !STATUS INDICATES AN ERROR. CHECK FOR EOT
2160 007634 032737 175600 000312 HDERRO: BIT   #175600,STATRD!IS ERROR LEGITIMATE R EOT?
2161 007642 001515          BEQ    RNUTAP !HAVE EOT
2162 007644 032737 020000 170360  BIT   #20000,BSR !TYPE ALL READ ERRORS?
2163 007652 001010          BNE    RTSREC !NO
2164 007654 012702 012346  MOV    #MSG9,R2
2165 007660 104414          TOP
2166 007662 013737 000354 000270  MOV    READLN,LENGTH

```

```

2167 007670 004757 010756      JSR    PC,PRTS
2168 007674 022757 177775 000304  i+1 TO RDERRS IF FIRST ERROR PASS
2169 007674 022757 177775 000304  RTSHEC: CMP   #=3,RPASS
2170 007702 0010U2                 BNE   .+6
2171 007704 005257 000344                 INC   RDERRS
2172 007710 032777 000020 170314  RTSR1: HIT   #20,ASH
2173 007716 001011                 HNE   RPASS3
2174 007720 005257 000304                 INC   RDPASS
2175 007724 0014U4                 BEQ   RPASS1
2176 007726 004757 010032                 JSR   PC,RACK1
2177 007732 000107 007306                 JMP   RDSTP0
2178 007736 005257 000350                 RPASS1: INC  NRREAD
2179 007742 012757 177775 000304  RPASS3: MOV   #=3,RPASS
2180 007750 032757 002000 000312  BIT   #2000,STATRD IAI EOT?
2181 007756 001054                 BNE   RDTP1
2182 007760 0006b7                 BEQ   RDSTP
2183                 iSET UP POINTERS FOR NEXT RECORD
2184 007762 005257 000336  RDINCR: INC  RECORD
2185 007766 005757 000310  TST   BLKINC
2186 007772 001416  BEQ   RESTR1
2187                 iRECORD LENGTH IS CHANGING, COUNT IT
2188 007774 063757 000310 000354  ADD   BLKINC,READLN
2189 010002 023757 000354 000246  CMP   READLN,MINLEN:IS LENGTH LESS THAN M NIMUM
2190 010010 0024U4                 HLT   RESTRL
2191 010012 023757 000354 000244  CMP   READLN,MAXLEN:IS LENGTH GREATER THA MAXIMUM?
2192 010020 0034U5                 BLE   RESTR1
2193 010022 013757 000266 000354  RESTRL: MOV  STRLEN,READLN|RESET INITIAL LENGTH
2194 010030 000207  RESTRL: RTS
2195                 iBACKSPACE ONE RECORD
2196 010032 006077 170156  BACK1: ROR  #MTS
2197 010036 103375                 BCC   .-4
2198 010040 012777 177777 170152  MOV   #=1,ABC
2199 010046 013777 000276 170142  MOV   COMAND,AMTC
2200 010054 052777 000012 170134  BIS   #12,AMTC
2201 010062 004757 004532                 JSR   PC,GOWAIT
2202 010066 042777 000016 170122  BIC   #16,AMTC
2203 010074 000207                 RTS   PC
2204                 iDRIVE HAS REACHED EOT IN READ MODE
2205 010076 004757 007762  RDNTAP: JSR  PC,RDINCR
2206 010102 052757 000020 000356  BIS   #20,MODES
2207 010110 0127U2 013205  RDNTP1: MOV  #MSG25,R2
2208 010114 1044U4                 TOP
2209 010116 0127U2 012240  MOV   #MSG8,R2
2210 010122 1044U4                 TOP
2211                 iDUMP ERROR COUNTERS
2212 010124 004757 011020  READMP: JSR  PC,PRTD
2213 010130 0137U5 001112  MOV   PARAM,R5
2214 010134 042705 177774  BIC   #177774,R5
2215 010140 0127U2 012675  MOV   #MSG14,R2
2216 010144 022705 000001  CMP   #1,R5
2217 010150 0010U2                 BNE   .+6
2218 010152 0127U2 012655  MOV   #MSG12,R2
2219 010156 0227U5 000002  CMP   #2,R5
2220 010162 0010U2                 BNE   .+6
2221 010164 0127U2 012665  MOV   #MSG13,R2
2222 010170 1044U4                 TOP
2223 010172 0137U2 000336  MOV   RECORD,R2
                                         iPRINT READ MODE
                                         CR
                                         CR
                                         CR
                                         CR
                                         CR

```

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-39

				DECPRT	IPRINT RECORD NUMBER		
2224	010176	1044 ^c 6		MOV	PARAM,R5	CR	
2225	010200	0137U5	001112	BIC	#177717,R5	CR	
2226	010204	0427U5	177717	MOV	#MSG17,R2		
2227	010210	0127U2	012723	CMP	#20,R5	CR	
2228	010214	0227U5	000020	BNE	.+6		
2229	010220	0010U2		MOV	#MSG18,R2		
2230	010222	0127U2	012732	CMP	#40,R5		
2231	010226	0227U5	000040	BNE	.+6	CR	
2232	010232	0010U2		MOV	#MSG15,R2		
2233	010234	0127U2	012705	CMP	#60,R5	CR	
2234	010240	0227U5	000060	BNE	.+6		
2235	010244	0010U2		MOV	#MSG16,R2		
2236	010246	0127U2	012714	TOP			
2237	010252	1044U4		MOV	#MSG21,R2		
2238	010254	0127U2	013035	TOP			
2239	010260	1044U4		MOV	RDERRS,R2		
2240	010262	0137U2	000344	DECPRT			
2241	010266	1044 ^c 6		MOV	#MSG22,R2		
2242	010270	0127U2	013065	TOP			
2243	010274	1044U4		MOV	DAERRS,R2		
2244	010276	0137U2	000346	DECPRT			
2245	010302	1044 ^c 6		MOV	#MSG23,R2		
2246	010304	0127U2	013106	TOP			
2247	010310	1044U4		MOV	NRREAD,R2		
2248	010312	0137U2	000350	DECPRT			
2249	010316	1044 ^c 6		RTS	PC		
2250	010320	0002U7		;IWRITE RECOVERY UTILIZING EXTENDED INTERRECORD GAP			
2251				;USED AFTER EVERY 7 REWRITES OR AFTER			
2252				;EACH WRITE ERROR IF STATISTICAL RECOVERY NOT SELECTED			
2253				;USED ONLY IF READ PASS SELECTED			
2254				XRGREC:	MOV #4,WRPASS	I COUNT 4 REWRITES	
2255	010322	012757	177774	000306	XKG0:	BIT #40,ASR	IDLE WRITE XIRG (S 5)
2256	010330	032777	000040	167674		BNE XRGRCO	IYES
2257	010336	001036				JSR PC,BACK1	
2258	010340	004757	010032		TSTA	#MTC	
2259	010344	105777	167646		BPL	.-4	
2260	010350	100375			MOV	COMMAND,AMTC	
2261	010352	013777	000276	167636	BIS	#14,AMTC	IWRITE XIRG
2262	010360	052777	000014	167630	MOV	WRTLEN,ABC	ISET BYTE COUNT
2263	010366	013777	000352	167624	NEG	ABC	
2264	010374	005477	167620		MOV	WBUF,ACA	ISET CURRENT ADDRESS
2265	010400	013777	000250	167614	ROR	#MTS	IWAIT FOR TU READY
2266	010406	060777	167602		BCC	.-4	
2267	010412	103375			JSR	PC,GOWAIT	
2268	010414	004757	004532		IRETURN HERE AFTER INTERRUPT		
2269				XRGRCO:	MOV AMTS,STATRD	ISAVE STATUS	
2270	010420	017757	167570	000312	TST	#MTC	
2271	010426	005777	167564		BMI	XRG5	IHAVE ERROR FLAG, CHECK FOR EOT
2272	010432	1004U5			CLR	WRPASS	
2273	010434	005037	000306		RTS	PC	IEXIT WRITE XIRG
2274	010440	0002U7		XRG5:	BIT #175600,STATRD		
2275	010442	032757	175600	000312	REQ	XRGRCO	ONLY EOT, EXIT
2276	010450	001771			INC	WRPASS	IDONE 4 XIRG
2277	010452	005257	000306		BNE	XRG0	
2278	010456	001324			IPRINT STATUS AFTER 4 XIRG ERRORS		
2279				MOV	#MSG7,R2		
2280	010460	0127U2	012212				

```

2281 010464 104464      TOP          IPRINT WRITE STATUS ER OR
2282 010466 013737 000352 000270  MOV  WRTLEN,LENGTH
2283 010474 004737 010756      JSR  PC,PRTS   IPRINT STATUS, COMMAND RECORD, LENGTH
2284 010500 012762 012627      MOV  #MSG11,R2
2285 010504 104464      TOP          IPRINT "XIRG WRITTEN 4 TIMES"
2286 010506 032737 002000 000312  BIT  #2000,STATRD
2287 010514 001762      BEQ  XRGREC
2288 010516 042777 000016 167472  BIC  #16,0MTC
2289 010524 052777 000003 167464  BIS  #3,0MTC   IWRITE AN EOF
2290 010532 004737 004532      JSR  PC,GOWAIT
2291 010536 000207      RTS  PC
2292                      IGO BACKWARD ON TAPE X RECORDS
2293 010540 013737 000336 000342  GOBKWD: MOV  RECORD,LASRCR
2294 010546 013737 000340 000336      MOV  WRRECR,RECORD
2295 010554 001003      BNE  GOB1    IIS NEW RECORD=0
2296 010556 004737 004342      JSR  PC,REWIND  IYES, REWIND
2297 010562 000207      RTS  PC     IEXIT
2298 010564 013777 000342 167426  GOB1: MOV  LASRCR,0BC   ISET BYTE COUNT TO DIF FRENCE
2299 010572 163777 000340 167420  SUB   WRRECR,0BC   IBETWEEN LASRCR AND WR ECK
2300 010600 005477 167414      NEG  0BC
2301                      I THE FOLLOWING CODE INSURES THAT BACKSPACE REQUEST IN PHASE ENCODED
2302                      I MODE ARE PROCESSED FIRST IN THE SITUATION WHERE RZ AND PE MODES ARE CR
2303                      I BOTH SELECTED FOR TESTS ON A DUAL DENSITY UNIT CR
2304 010604 013762 000300      MOV  CDRVBT,R2   IGET CURRENT UNIT NO. CR
2305 010610 132737 000004 000277  BITB #4,COMMAND+1 IIS CURRENT UNIT NO. 4 5, 6, OR 7? CR
2306 010616 001007      BNE  GOB2    I YES CR
2307 010620 004737 010716      JSR  PC,TSTUP4  IIS UNIT NO. PLUS 4 AL 0 SELECTED? CR
2308 010624 000412      BR   GOB3    I NO - PROCEED WITHOUT CHANGE CR
2309 010626 152737 000004 000277  BITSB #4,COMMAND+1 I YES - ADD 4 TO COMAN UNIT NO. CR
2310 010634 000465      BR   GOB3
2311 010636 004737 010730      GOB2: JSR  PC,TSTUM4  IIS UNIT NO. MINUS 4 A SO SELECTED? CR
2312 010642 000405      BR   GOB3  I NO - PROCEED WITHOUT CHANGE CR
2313 010644 142737 000004 000277  BICB #4,COMMAND+1 I YES - SUBTRACT 4 FRO COMAND UNIT NO. CR
2314 010652 013777 000276 167336  GOB3: MOV  COMMAND,0MTC
2315 010660 105777 167332      TSTB 0MTC   IWAIT FOR CU READY CR
2316 010664 100375      BPL  .-4
2317 010666 006077 167322      ROR  0MTS   IWAIT FOR TU READY
2318 010672 103375      BCC  .-4
2319 010674 042777 000016 167314  BIC  #16,0MTC
2320 010702 052777 000012 167306  BIS  #12,0MTC
2321 010710 004737 004532      JSR  PC,GOWAIT
2322 010714 000207      RTS  PC
2323                      ITSTUP4 & TSTUM4 TEST FOR SIMULTANEOUS SELECTION O A DUAL DENSITY CR
2324
2325
2326                      I UNIT, SUCH AS UNIT NOS. 0 & 4, 1 & 5, ETC. CR
2327                      I IF THIS CONDITION EXISTS, CONTROL RETURNS TO CALL LOC. + 4. CR
2328                      I OTHERWISE RETURN IS TO CALL LOC. + 2. CR
2329 010716 006202      TSTUP4: ASR  R2   IUNIT NO. IN RANGE 0-3 CR
2330 010720 006202      ASR  R2
2331 010722 006202      ASR  R2
2332 010724 006202      ASR  R2
2333 010726 000464      BR   TSTPM
2334 010730 006302      TSTUM4: ASL  R2   IUNIT NO. IN RANGE 4-7 CR
2335 010732 006302      ASL  R2
2336 010734 006302      ASL  R2
2337 010736 006302      ASL  R2

```

2338 010740 030237 000272	TSTPM:	BIT	R2,MSBITS	I DOES SIMULTANEOUS SEL CTION EXIST?	CR
2339 010744 001001	BNE	SETSTK	I YES - ALTER RETURN	CR	
2340 010746 000207	HTS	PC	I NO	CR	
2341 010750 062716 000002	SETSTK:	ADD #2,0SP		CR	
2342 010754 000207	RTS	PC		CR	
2343	;PRINT COMMAND, STATUS, RECORD NUMBER, LENGTH				
2344					
2345					
2346 010756 012702 012416	PRTS:	MOV #MSG9B,R2			
2347 010762 104404	TOP				
2348 010764 017702 167226	MOV #AMTC,R2				
2349 010770 104412	OCTPRT				
2350 010772 013702 000312	MOV STATRD,R2				
2351 010776 104412	OCTPRT				
2352 011000 013702 000336	MOV RECORD,R2				
2353 011004 005202	INC R2				
2354 011006 104426	DECPRTR				
2355 011010 013702 000270	MOV LENGTH,R2				
2356 011014 104426	DECPRTR				
2357 011016 000207	RTS PC				
2358	;PRINT DRIVE, PATTERN, PARITY, DENSITY				
2359 011020 012705 000240	PRTD:	MOV #240,R5		CR	
2360 011024 104434	PRC	;PRINT SPACE		CR	
2361 011026 013705 000276	MOV COMAND,R5			CR	
2362 011032 000305	SWAB R5			CR	
2363 011034 142705 000170	BICR #170,R5			CR	
2364 011040 052705 000260	BIS #260,R5			CR	
2365 011044 104434	PRC	;PRINT DRIVE NUMBER		CR	
2366 011046 104430	SP3				
2367 011050 013705 001112	MOV PARAM,R5			CR	
2368 011054 000305	SWAB R5			CR	
2369 011056 006005	ROR R5			CR	
2370 011060 042705 000170	BIC #170,R5			CR	
2371 011064 052705 000260	BIS #260,R5			CR	
2372 011070 104430	PRC	;PRINT PATTERN NUMBER		CR	
2373 011072 104430	SP3				
2374 011074 013707 000276 167114	MOV COMAND,AMTC	I SELECT UNIT		CR	
2375 011102 105777 167110	TSTB #AMTC			CR	
2376 011106 100375	BPL .-4	;WAIT FOR CU READY		CR	
2377 011110 032777 000020 167076	BIT #20,AMTS	I IS UNIT 7 TRACK?		CR	
2378 011116 001005	BNE PRTO1	I YES		CR	
2379 011120 012702 013315	MOV #MSG31,R2	I9 TRACK UNIT - POSITI N PAST P & D		CR	
2380 011124 104404	TOP			CR	
2381 011126 104430	SP3			CR	
2382 011130 000207	R1S PC			CR	
2383 011132 013705 001112	PRTD1:	MOV PARAM,R5		CR	
2384 011136 000305	SWAB R5			CR	
2385 011140 042705 000176	BIC #176,R5			CR	
2386 011144 052705 000260	BIS #260,R5			CR	
2387 011150 104434	PRC	;PRINT PARITY		CR	
2388 011152 013705 001112	MOV PARAM,R5			CR	
2389 011156 042705 177477	BIC #177477,R5			CR	
2390 011162 012702 013250	MOV #MSG26,R2				
2391 011166 022705 000100	CMP #100,R5				
2392 011172 001002	BNE .+6			CR	
2393 011174 012702 013260	MOV #MSG27,R2				
2394 011200 022705 000200	CMP #200,R5			CR	

```

2395 011204 001002     BNE    .+6
2396 011206 012702 013270     MOV    #MSG28,R2
2397 011212 022705 000300     CMP    #300,R5
2398 011216 001002     BNE    .+6
2399 011220 012702 013300     MOV    #MSG29,R2
2400 011224 104404     TOP
2401 011226 000207     RTS    PC
2402
2403 011230 012705 000060     iPRINT OCTAL VALUE IN REGISTER 2
2404 011234 005702     OCTPR: MOV    #0,R5      INITIALIZE 1ST NUMBER AS 0
2405 011236 100002     TST    R2      IIS VALUE POSITIVE
2406 011240 012705 000061     BPL    OCT1      IYES PRINT 0
2407 011244 104434     OCT1:  MOV    #1,R5      INO PRINT 1
2408 011246 006102     PRC
2409 011250 006102     ROL    R2
2410 011252 012707 177773 011320     ROL    R2
2411 011260 006102     OCT2:  MOV    #-5,OCT     ICOUNT 5 DIGITS
2412 011262 006102     ROL    R2
2413 011264 006102     ROL    R2
2414 011266 010203     ROL    R2
2415 011270 042705 177770     MOV    R2,R5      ISAVE DIGIT
2416 011274 052705 000060     BIC    #177770,R5     ICLEAR OTHER BITS
2417 011300 006002     BIS    #60,R5      IMAKE ASCII DIGIT
2418 011302 104434     ROR    R2
2419 011304 006102     PRC
2420 011306 005207 011320     ROL    R2
2421 011312 001302     INC    OCT     I+1 TO DIGIT COUNT
2422 011314 104430     BNE    OCT2      INOT DONE
2423 011316 000207     SP3
2424 011320 000000     KTS    PC      IEXIT
2425 011322 105707 166712     OCT2:  0
2426 011326 100305     OCTP:  TSTB   @TPS
2427 011330 010507 166706     BPL    .-4      IWAIT FOR READY
2428 011334 000207     MOV    R5,@TPB     IPRINT
2429
2430 011336 012707 177773 011506     iPRINT DECIMAL VALUE IN REGISTER 2
2431 011344 012707 011514 011512     DECPR: MOV    #-5,DIGCNT
2432 011352 012707 000040 011510     MOV    #DECPNT+2,DECPNT
2433 011360 012707 177777 011504     TYPT1:  MOV    #40,ZERO
2434 011366 005207 011504     TYPT2:  INC    DIGIT
2435 011372 167702 000114     SUB    @DECPNT,R2
2436 011376 100305     BPL    TYPT2
2437 011400 067702 000106     ADD    @DECPNT,R2
2438 011404 004707 011432     JSR    PC,DECOUT
2439 011410 005207 011506     INC    DIGCNT
2440 011414 001002     BNE    TYPT3
2441 011416 104430     SP3
2442 011420 000207     RTS    PC
2443 011422 062707 000002 011512     TYPT3:  ADD    #2,DECPNT
2444 011430 000705     BR    TYPT1
2445 011432 005707 011504     DECOUNT: TST    DIGIT
2446 011436 001010     BNE    DEC1
2447 011440 022707 177777 011506     CMP    #-1,DIGCNT
2448 011446 001404     BEQ    DEC1
2449 011450 013707 011510 011504     MOV    ZERO,DIGIT
2450 011456 000406     BR    DEC2
2451 011460 012707 000060 011510     DEC1:  MOV    #60,ZERO

```

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-43

```

2452 011466 052737 000060 011504     BIS    #60,DIGIT
2453 011474 013705 011504     DEC2:  MOV    DIGIT,R5
2454 011500 104434               PRC
2455 011502 000207               RTS    PC
2456 011504 000000               DIGIT: 0
2457 011506 000000               DIGCNT: 0
2458 011510 000040               ZERO: 40
2459 011512 011514               DECPNT: .+2
2460 011514 023420               10000.
2461 011516 001750               1000.
2462 011520 000144               100.
2463 011522 000012               10.
2464 011524 000001               1.
2465                               ;KEYBOARD INPUT
2466 011526 1057/7 166502     WAITK: TSTB  @TKS      !WAIT FOR KEY
2467 011532 1003/5               BPL   .-4
2468 011534 1057/7 166500     TSTB  @TPS      !WAIT FOR TELEPRINTER EADY
2469 011540 1003/5               BPL   .-4
2470 011542 1177/7 166470 166472     MOVB  @TKR,@TPB  !ECHO CHARACTER
2471 011550 1177/5 166462     MOVB  @TKR,R3   !SAVE IT
2472 011554 042703 000200     BIC   #200,R3
2473 011560 000207               RTS    PC      !EXIT
2474                               ;TYPE 3 SPACES
2475 011562 012702 011572     SP3X:  MOV    #SP3A,R2
2476 011566 104404               TOP
2477 011570 000207               RTS    PC
2478 011572 057     040     040     SP3A:  .ASCII  !/  /
2479 011575 040     057
2479                               .EVEN
2480                               ;TELETYPE OUTPUT PACKAGE
2481 011600 1427/7 000177 166432     TO:   BICB  #177,@TPS  !CLEAR TELETYPE FLAGS
2482 011606 112237 011664     MOVB  (2)+,EOMK  !SAVE MESSAGE DELIMETE
2483 011612 121237 011664     TOP1: CMPB  @R2,EOMK  !IS CHARACTER THE SEC'D MESSAGE DELIMITER?
2484 011616 001001               BNE   .+4
2485 011620 000207               RTS    PC      !NO, EXIT
2486 011622 121227 000100               CMPR  @R2,#0
2487 011626 001406               SEQ   TOP2      !YES
2488 011630 1057/7 166404     TSTB  @TPS      !NO, WAIT FOR TELETYPE READY
2489 011634 1003/5               BPL   .-4
2490 011636 1122/7 166400     MOVB  (2)+,@TPB  !PRINT CHARACTER
2491 011642 000705               BR    TOP1
2492                               ;CARRIAGE RETURN, LINE FEED
2493 011644 012705 000215     TOP2:  MOV    #215,R5
2494 011650 104434               PRC
2495 011652 012705 000212     MOV    #212,R5
2496 011656 104434               PRC
2497 011660 105202               INCB  R2
2498 011662 000703               BR    TOP1
2499 011664 000000               EOMK:  0
2500 011666 012737 000004 000246     SET4K:  MOV    #4,MINLEN  ISET RECORD LENGTHS AN
2501 011674 012737 002000 000244     MOV    #1024,,MAXLEN 1BUFFER AREAS FOR 4K
2502 011702 012737 015324 000252     MOV    #BUFFER+1024,,RBUF
2503 011710 000207               RTS    PC
2504 011712 012737 000010 000246     SET8K:  MOV    #8,,MINLEN  ISET RECORD LENGTHS AN
2505 011720 012737 004000 000244     MOV    #2048,,MAXLEN 1BUFFER AREAS FOR 8K
2506 011726 012737 017324 000252     MOV    #BUFFER+2048,,RBUF
2507 011734 000207               RTS    PC

```

				PATTERN GENERATION CONTROL				
2508				GENP7	CLR	LONUM	I RESET RANDOM NUMBER GENERATOR	
2509	011736	005037	007260		CLR	HINUM		
2510	011742	005037	007262		BIT	#20,AMTS	I IS UNIT 7 TRACK?	CR
2511	011746	032777	000020	166240	BEQ	G1	I NO	CR
2512	011754	001406			CMP	#1,PGMODE	I IS A 7 TRACK PATTERN AVAILABLE?	CR
2513	011756	022757	000001	001146	BEQ	G2	I YES	CR
2514	011764	001407			GENPT7		I NO - GENERATE IT	CR
2515	011766	104416			RTS	PC		
2516	011770	000207			CMP	#2,PGMODE	I IS A 9 TRACK PATTERN AVAILABLE?	CR
2517	011772	022757	000002	001146	G1:	BEQ	I YES	CR
2518	012000	001401			GENPT9		I NO - GENERATE IT	CR
2519	012002	104432			G2:	RTS	PC	
2520	012004	000207			ITRAP HANDLER			
2521					TRAP34:	MOV	#SP,2(6)	
2522	012006	011606	000002			SUB	#2,ASP	
2523	012012	162716	000002			MOV	#(6)+,-(6)	
2524	012016	013645				ADD	#TABLE-104400,ASP	
2525	012020	062716	105426			MOV	#(6)+,PC	
2526	012024	013607			TABLE:	WAITK		
2527	012026	011546				WRITI		
2528	012030	004570				TO		
2529	012032	011600				SVCTR		
2530	012034	004010				RSFDR		
2531	012036	004124				OCTPR		
2532	012040	011230				MVCTR		
2533	012042	004026				GENP7		
2534	012044	006014				CLRAL		CR
2535	012046	004070				CHGDR		
2536	012050	004304				READI		
2537	012052	007264				DECPR		
2538	012054	011336				SP3X		
2539	012056	011542				GENP9		
2540	012060	006505				OCTP		CR
2541	012062	011342				SET4K		CR
2542	012064	011605				SET8K		CR
2543	012066	011712				GENP		
2544	012070	011736				WAITKY=104400		
2545		104440				WRITIT=104402		
2546		104442				TOP=104404		
2547		104444				SVCTR=104406		
2548		104446				RSFDRV=104410		
2549		104448				OCTPRT=104412		
2550		104442				MVCTRS=104414		
2551		104444				GENPT7=104416		
2552		104446				CLRALL=104420		CR
2553		104440				CHGDRV=104422		
2554		104442				READIT=104424		
2555		104444				DECPR=104426		
2556		104446				SP3=104430		
2557		104450				GENPT9=104432		
2558		104452				PRC=104434		CR
2559		104454				SETM4K=104436		CR
2560		104456				SETM8K=104440		CR
2561		104440				GENPT8=104442		
2562		104442				TEXT MESSAGES		
2563								
2564	012072	057	077	100	MSG01	.ASCII	1/28 /1	

P468

MACRO V06-05 12-DEC-74 12124 PAGE 1-45

012075	040	057				
2565 012077	057	100	123	MSG1:	.ASCII	I/OSELECT UNITS /1
012102	105	114	105			
012105	105	124	040			
012110	125	116	111			
012113	124	123	040			
012116	040	057				
2566 012120	057	100	124	MSG2:	.ASCII	I/OATST PAT PAR DEN RLS WMO RM08 /1
012123	125	124	040			
012126	140	101	124			
012131	040	120	101			
012134	142	040	104			
012137	105	116	040			
012142	142	114	123			
012145	040	127	115			
012150	117	040	122			
012153	145	117	100			
012156	040	057				
2567 012160	057	115	101	MSG5:	.ASCII	I/MAX TESTS SELECTED@/
012163	190	040	124			
012166	105	123	124			
012171	143	040	123			
012174	105	114	105			
012177	105	124	105			
012202	104	100	057			
2568 012205	057	040	117	MSG6:	.ASCII	I/OK/1
012210	113	057				
2569 012212	057	100	127	MSG7:	.ASCII	I/OWRITE STATUS ERROR@ 1
012215	142	111	124			
012220	105	040	123			
012223	144	101	124			
012226	145	123	040			
012231	105	122	122			
012234	117	122	100			
012237	057					
2570 012240	057	105	116	MSG8:	.ASCII	I/END OF TAPE***** @
012243	104	040	117			
012246	106	040	124			
012251	101	120	105			
012254	052	052	052			
012257	052	052	052			
012262	052	052	052			
012265	052	052	052			
012270	052	052	052			
012273	052	052	052			
012276	052	052	100			
2571 012301	104	122	126		.ASCII	IDRV PAT PAR DEN MODE RECORD LENGTH@/1 CR
012304	040	120	101			
012307	144	040	120			
012312	101	122	040			
012315	104	105	116			
012320	040	040	115			
012323	117	104	105			
012326	040	122	105			
012331	105	117	122			
012334	104	040	114			
012337	105	116	107			

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-46

012342	124	110	100						
012345	057								
2572	012346	057	100	122	MSG98: .ASCII	I/OREAD STATUS ERROR@/			
	012351	105	101	104					
	012354	040	123	124					
	012357	101	124	125					
	012362	125	040	105					
	012365	122	122	117					
	012370	122	100	057					
2573	012373	057	100	122	MSG9A: .ASCII	I/OREAD DATA ERROR@/I			
	012376	105	101	104					
	012401	040	104	101					
	012404	124	101	040					
	012407	105	122	122					
	012412	117	122	100					
	012415	057							
2574	012416	057	103	117	MSG9B: .ASCII I/COMD	STATUS RECORD LENGTH EXPECTED ACTUAL@/I			
	012421	115	104	040					
	012424	040	040	040					
	012427	040	123	124					
	012432	101	124	125					
	012435	125	040	040					
	012440	040	122	105					
	012443	105	117	122					
	012446	104	040	040					
	012451	040	114	105					
	012454	115	107	124					
	012457	110	040	105					
	012462	150	120	105					
	012465	105	124	105					
	012470	104	040	101					
	012473	103	124	125					
	012476	101	114	100					
	012501	057							
2575	012502	057	100	104	MSG10A: .ASCII I/A PDP11 7-9 TRK REL.I				
	012505	101	124	125					
	012510	115	040	120					
	012513	104	120	061					
	012516	061	040	067					
	012521	055	071	040					
	012524	124	122	113					
	012527	040	122	105					
	012532	114	056						
2576	012534	100	122	105	.ASCII @RECORD LIMITS IN BYTES@				
	012537	105	117	122					
	012542	104	040	114					
	012545	111	115	111					
	012550	124	123	040					
	012553	111	116	040					
	012556	102	131	124					
	012561	105	123						
2577	012563	100	115	111	.ASCII @MINLEN MAXLEN@/I				
	012565	116	114	105					
	012571	116	040	040					
	012574	115	101	130					
	012577	114	105	116					
	012602	100	057						

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-47

2578	012604	057	100	105	MSG108: .ASCII	I/OEXERCISING UNITS/1
	012607	150	105	122		
	012612	105	111	123		
	012615	131	116	107		
	012620	040	125	116		
	012623	111	124	123		
	012626	057				
2579	012627	057	130	111	MSG111: .ASCII	I/XIRG WRITTEN 4 TIMES 1
	012632	122	107	040		
	012635	127	122	111		
	012640	124	124	105		
	012643	116	040	064		
	012646	040	124	111		
	012651	115	105	123		
	012654	057				
2580	012655	057	040	123	MSG12: .ASCII	I/ SSTP /1
	012660	123	124	120		
	012663	040	057			
2581	012665	057	040	122	MSG13: .ASCII	I/ RNDM /1
	012670	115	104	115		
	012673	040	057			
2582	012675	057	040	116	MSG14: .ASCII	I/ NSTP /1
	012700	123	124	120		
	012703	040	057			
2583	012705	057	115	055	MSG15: .ASCII	I/M-MAX/1
	012710	115	101	100		
	012713	057				
2584	012714	057	115	055	MSG16: .ASCII	I/M-MIN/1
	012717	115	111	116		
	012722	057				
2585	012723	057	115	111	MSG17: .ASCII	I/MIN /1
	012726	116	040	040		
	012731	057				
2586	012732	057	115	101	MSG18: .ASCII	I/MAX /1
	012735	150	040	040		
	012740	057				
2587	012741	057	100	127	MSG19: .ASCII	I/OWRITE ERRORS = /1
	012744	122	111	124		
	012747	105	040	105		
	012752	122	122	117		
	012755	122	123	040		
	012760	075	040	057		
2588	012763	057	100	122	MSG20: .ASCII	I/ORECOVERED AT 0 /1
	012766	105	103	117		
	012771	126	105	122		
	012774	105	104	040		
	012777	101	124	040		
	013002	040	040	057		
2589	013005	057	100	120	MSG20A: .ASCII	I/OPERMANENT BADSPOTS /1
	013010	105	122	115		
	013013	101	116	105		
	013016	116	124	040		
	013021	102	101	104		
	013024	123	120	117		
	013027	124	123	040		
	013032	075	040	057		
2590	013035	057	100	122	MSG21: .ASCII	I/OREAD STATUS ERRORS /1

P468

MACRO V06-03 12-DEC-74 12:24 PAGE 1-48

013040	105	101	104	
013043	040	123	124	
013046	101	124	125	
013051	123	040	105	
013054	1<2	122	117	
013057	122	123	040	
013062	075	040	057	
2591	057	100	104	MSG22: .ASCII I/O DATA ERRORS = /1
013070	101	124	101	
013073	040	105	122	
013076	122	117	122	
013101	123	040	075	
013104	040	057		
2592	057	100	116	MSG23: .ASCII I/O NON RECOVERABLE ERR RS = /1
013111	117	116	040	
013114	122	105	103	
013117	117	126	105	
013122	122	101	102	
013125	114	105	040	
013130	105	122	122	
013133	117	122	123	
013136	040	075	040	
013141	057			
2593	057	100	052	MSG24: .ASCII I/O***** WRITE PASS /1
013145	022	052	052	
013150	052	052	052	
013153	052	052	052	
013156	052	052	052	
013161	052	052	052	
013164	052	052	052	
013167	052	127	122	
013172	111	124	105	
013175	040	120	101	
013200	123	123	040	
013203	040	057		
2594	057	100	052	MSG25: .ASCII I/O***** READ PASS /1
013210	052	052	052	
013213	052	052	052	
013216	052	052	052	
013221	052	052	052	
013224	052	052	052	
013227	052	052	052	
013232	052	122	105	
013235	101	104	040	
013240	1<0	101	123	
013243	123	040	040	
013246	040	057		
2595	057	040	040	MSG26: .ASCII I/ 200/1
013250	040	062	060	
013253	060	057		
013256	060			
2596	057	040	040	MSG27: .ASCII I/ 556/1
013260	040	065	065	
013263	040	057		
013266	066			
2597	057	040	040	MSG28: .ASCII I/ 800/1
013273	040	070	060	
013276	060	057		
2598	057	040	040	MSG29: .ASCII I/ CD /1

P468

MACRO V06-03 12-DEC-74 12124 PAGE 1-49

013303	040	103	104		
013306	040	057			
2599	013310	057	100	100	MSG30: .ASCII
013313	100	057			1/000/1
2600	013315	057	130	040	MSG31: .ASCII
013320	040	040	130		1/X X/1
013323	057				CR
2601					
2602	013324	013324		BUFFER: .EVEN	
2603		000001		.END	!WRITE BUFFER BEGINS HERE

P468
SYMBOL TABLE

MACRO V06-03 12-DEC-74 12124 PAGE 1-50

ALLEOS	004422	ALLEOT	004400	ALL1	004402
ALL2	004504	ALL3	004500	ATST	000256
AUTOST	001152	BACK1	010032	BC	000220
BLKINC	000310	BUFFER	013324	CA	000222
CC	000230	COMMEND	004474	CORIVE	000302
CORVBUT	000300	CHGDR	004304	CHGDRV=	104422
CHG1	004330	CLRAL	004070	CLRALL=	104420
CLRTBL	004506	CLRT1	004512	CLR1	004072
COMAND	000276	CTRDEX	004044	CTRDMR	004442
CTRDI	004470	DAERRS	000346	DATERR	007556
DATER1	007616	DECOUT	011432	DECPTN	011512
DECPR	011336	DECPRTE=	104426	DEC1	011460
DEC2	011474	DET7T	002120	DET7T1	002132
DET7T2	002150	DET7T3	002164	DIGCNT	011506
01GIT	011504	DOAGN	002774	DOLLR1	007300
DOLLRS	007440	DONE	002704	DONE1	002746
DRVADR	000360	DRVSEL	000264	DOTAB	000450
D1TAB	000514	D2TAB	000560	D3TAB	000624
D4TAB	000670	DSTAR	000754	D6TAB	001000
D7TAB	001044	ENDADR	002764	ENDTAP	005530
ENDT1	005542	EOMK	011664	ERROR	005300
ERR1	005322	EXEC	002614	EXECUT	002602
EXEC1	002622	GENP	011736	GENPT =	104442
GENPT7=	104416	GENPT9=	104432	GENP7	006014
GENP9	006506	GOBKWD	010540	GOB1	010564
GOB2	010636	GOB3	010652	GOWAIT	004532
GW1	004566	G1	011772	G2	012004
HINUM	007262	I0SELF	001410	LASRCH	000342
LENGTH	000270	LONUM	007260	LOOPLR	001476
MAXLEN	000244	MEM4K	001552	MEM8K	001556
MINLEN	000246	MODES	000356	MSBITS	000272
MSG0	012072	MSG1	012077	MSG10A	012502
MSG10B	012604	MSG11	012627	MSG12	012655
MSG13	012665	MSG14	012675	MSG15	012705
MSG16	012714	MSG17	012723	MSG18	012732
MSG19	012741	MSG2	012120	MSG20	012763
MSG20A	013005	MSG21	013035	MSG22	013065
MSG23	013106	MSG24	013142	MSG25	013205
MSG26	013250	MSG27	013260	MSG28	013270
MSG29	013300	MSG30	013310	MSG31	013315
MSG5	012160	MSG6	012205	MSG7	012212
MSG8	012240	MSG9	012346	MSG9A	012373
MSG9B	012416	MTC	000216	MTS	000214
MTV	000254	MVCTR	004026	MVCTRS=	104414
MV1	004032	NOINCR	004600	NONSTP	004726
NO_SEL	001376	NRREAD	000350	NUMTST	001110
NXMRLT	001244	NXT.TU	001316	OCT	011320
OCTP	011322	OCTPR	011230	OCTPRT=	104412
OCT1	011244	OCT2	011250	OVER4K	001252
PARAM	001112	PATCK	006054	PATEN	006074
PATEN1	006100	PATEN2	006112	PATE0	006154
PATE1	006170	PATE2	006220	PATE3	006234
PATE4	006250	PATE5	006274	PATE7	006360
PATO0	006162	PATO1	006204	PATO2	006226
PATO3	006242	PATO5	006322	PATPNT	006540
PATPST	006114	PATO	006560	PAT1	006574
PAT1A	006600	PAT2	006644	PAT3	006660

P468
SYMBOL TABLE

MACRO V06-03 12-DEC-74 12:24 PAGE 1-51

PAT3A	006664	PAT4	006730	PAT5	006756
PAT5A	006762	PAT6	006352	PAT69	007072
PAT7	007106	PERMBS	000334	PE1	006176
PES	006302	PFIL1	006410	PFIL3	006422
PFIL3A	006430	PFIL9	006454	PFIL9A	006462
PGMODE	001146	PO1	006212	PO5	006330
PRC	= 104434	PRTD	011020	PRTD1	011132
PRTS	010756	P1T	006622	P3T	006706
P4	006734	P4A	006754	P5T	007004
RANDOM	007256	RANGEN	007126	RANG1	007154
RANSTP	005110	KAN1	005122	KBUF	000252
RDERHO	007634	RDERHS	000344	RDINCR	007762
RDPASS	000304	RDSTP	007540	RUSTPC	007500
RDSTPD	007306	READGO	007330	READI	007264
READIT	= 104424	READLN	000354	READMP	010124
RECORD	000336	RESETL	005254	RESTRL	010022
RESTR1	010030	REWIND	004342	RG1	007340
RNDHDS	007510	RNDS1	007522	HNDTAP	010076
RNDTH1	010110	RPASS1	007736	RPASS3	007742
RSFDR	004124	RSFDKRV	= 104410	RSF1	004136
RSF2	004162	RSF3	004232	RTSREC	007674
RISR1	007710	RTSSTP	007452	SELDN1	002264
SELDN2	002300	SELON3	002312	SELORV	001622
SEL01	001652	SEL02	001666	SELOK1	002574
SELPAT	002034	SELPR	002236	SELPHO	002214
SELKM1	002460	SELRM2	002476	SELRI	002340
SFLR2	002354	SELK3	002366	SELTST	001750
SELT1	001766	SELT2	002010	SELT3	002024
SELW1	002414	SELW15	002426	SELW2	002432
SETM4K	= 104436	SETMBK	= 104440	SETSTK	010750
SET4K	011666	SETBK	011712	SP3	= 104430
SP3A	011572	SP3X	011562	SR	000232
STACK	= 000450	START	001550	START1	001564
STATRD	000312	STFLGS	001150	STOPOP	005100
STRREC1	005436	STRLEN	000266	STRTOP	004720
SVCTR	004010	SVCTHR	= 104406	SVC1	004014
SVRECR	000274	TABLE	012026	TESINC	005206
TESRC1	005402	TESREC	005352	TEST	001116
TEST0	005004	TEST1	003052	TEST2	003062
TEST3	003176	TEST4	003206	TEST5	003526
TXB	000236	TKS	000234	TO	011600
TOP	= 104404	TOP1	011612	TOP2	011644
TPB	000242	TPS	000240	TRAP34	012006
TSINC2	005262	TSINC3	005276	TSTEX	001114
TSTPM	010740	TSTSTP	005022	TSTTBL	001120
TSTUM4	010730	TSTUP4	010716	TU.SLL	001254
TYPT1	011360	TYPT2	011366	TYPT3	011422
T0	003014	TOA	003016	TGB	003034
TC1ENT	003012	T2	003072	T2A	003074
T2B	003112	T2C	003116	T2D	003136
T2E	003142	T2F	003156	T2SENT	003070
T4	003240	T4A	003242	T4B	003244
T4C	003270	T4D	003272	T4E	003324
T4F	003340	T4G	003356	T4H	003360
T4J	003376	T4K	003404	T4L	003406
T4M	003460	T4N	003472	T4P	003476
T5	003536	T5A	003562	T5B	003574

P468
SYMBOL TABLE

MACRO V06-03 12-DEC-74 12124 PAGE 1-52

T5C	003604	T5D	003634	T5E	003642
T5F	003704	T5FLAG	004004	T5G	003716
T5H	003734	T5INC	004006	T5J	003736
T5K	003756	USSTST	001330	USS.OK	001346
USS10	001372	VALID	001676	VAL1	001710
VAL2	001720	VAL3	001734	VAL4	001740
WAITK	011526	WAITKY=	104400	WBUF	000250
WRCKECK	000314	WRITI	004570	WRITIT=	104402
WRPASS	000306	WRRECR	000340	WRTDMP	005556
WRTD1	005734	WR1D2	005756	WRTLEN	000352
W1	004636	W10	005066	W11	005140
W12	005174	W3	004704	XRGRC0	010434
XRGREC	010322	XRG0	010330	XRG5	010442
ZERO	011510	ZER000	001516		
, ABS.	013326	000			
	000000	001			

ERRORS DETECTED: 0
FREE CORE: 10314 WORDS
P468,P468/CRFC/P468

CROSS REFERENCE TABLE S-1

ALLFOS	1-1551	1-1555#				
ALL.EOT	1-1306	1-1340	1-1411	1-1452	1-1464	1-1548#
ALL1	1-1549#	1-1553				
ALL2	1-1556	1-1558	1-1571#			
ALL3	1-1554	1-1570#				
ATST	1- 906#	1- 983#	1-1068#	1-1091		
AUTOST	1- 885	1- 982#				
BACK1	1-1706	1-1707	1-2176	1-2196#	1-2258	
BC	1- 890#	1-1011#	1-1612#	1-1711#	1-2104#	1-2105#
	1-2263#	1-2464#	1-2298#	1-2299#	1-2300#	1-2198#
BLKING	1- 919#	1-1591#	1-1595#	1-1599#	1-1666	1-2185
	1-2188					
BUFFER	1- 902	1- 903	1- 992	1-1040#	1-1041	1-1059
	1-2506	1-2602#				
CA	1- 891#	1-1613#	1-2106#	1-2265#		
CC	1- 894#	1-1580#	1-1584#			
COMEND	1-1566	1-1568#				
CORIVE	1- 916#	1-1494	1-1485	1-1499#	1-1503#	1-1507
CORVBT	1- 915#	1-1500#	1-1501	1-1505#	1-1509	1-1530#
	1-2304					
CHGDR	1-1528#	1-1536	1-2536			
CHGDRV	1-1304	1-1324	1-1331	1-1338	1-1362	1-1373
	1-1388	1-1404	1-1409	1-1436	1-1450	1-1460
	1-1552	1-1568	1-2554#			
CHG1	1-1531	1-1555#				
CLRAL	1-1489#	1-2035				
CLRALL	1-1297	1-1517	1-1357	1-1420	1-2553#	
CLRTBL	1-1491	1-1573#				
CLRT1	1-1574#	1-1576				
CLR1	1-1490#	1-1494				
COMMAND	1- 914#	1-1507#	1-1508#	1-1511#	1-1514#	1-1518#
	1-1524#	1-1541	1-1601	1-1712	1-2094	1-2107
	1-2261	1-2305	1-2309#	1-2313#	1-2314	1-2361
CTRDEX	1-1470	1-1476	1-1482#			
CTRDMP	1-1560#	1-1569				
CTR01	1-1563	1-1567#				
DAFNRS	1- 934#	1-2157#	1-2244			

DATERH	1-2122	1-2145#
DATEK1	1-2146	1-2155#
DECOUT	1-2438	1-2445#
DECPINT	1-2431#	1-2435 1-2437 1-2443# 1-2459#
DECPR	1-2430#	1-2538
DECPR1	1-1031	1-1033 1-1738 1-1755 1-1764 1-1774 1-2224
	1-2241	1-2245 1-2249 1-2334 1-2356 1-2556#
DEC1	1-2446	1-2448 1-2451#
DEC2	1-2450	1-2453#
DET7T	1-1148#	1-1161
DET7T1	1-1150#	1-1153
DET7T2	1-1151	1-1155#
DET7T3	1-1154	1-1156 1-1158#
DIGCNT	1-2430#	1-2439# 1-2447 1-2457#
DIGIT	1-2433#	1-2434# 1-2445 1-2449# 1-2452# 1-2453 1-2456#
DOAGN	1-1284	1-1432#
DOLLR1	1-2091	1-2193#
DOLLR5	1-2121#	1-2124
DONE	1-1273#	1-1308 1-1342 1-1413 1-1454 1-1466
DONE1	1-1276	1-1430 1-1283#
DRVADRH	1- 939#	1-1472 1-1478 1-1483

CROSS REFERENCE TABLE S-2

DRVSEL	1- 909#	1-1004#	1-1010	1-1023#	1-1146#	1-1148	1-1158#
00TAB	1- 939	1- 949#	1- 950				
01TAB	1- 940	1- 951#	1- 952				
02TAB	1- 941	1- 953#	1- 954				
03TAB	1- 942	1- 955#	1- 956				
04TAB	1- 943	1- 957#	1- 958				
05TAB	1- 944	1- 959#	1- 960				
06TAB	1- 945	1- 961#	1- 962				
07TAB	1- 946	1- 963#	1- 964				
ENDADR	1-1206	1-1298#					
ENDTAP	1-1683	1-1704	1-1719#				
ENDT1	1-1564	1-1721#					
EOMK	1-2482#	1-2483	1-2499#				
ERROR	1-1619	1-1632#					
ERR1	1-1685	1-1687#					
EXEC	1-1256#	1-1293					
EXECUT	1-1061	1-1093	1-1117	1-1254#			
EXEC1	1-1257#	1-1282					
GENP	1-2509#	1-2544					
GENPT	1-1604	1-2108	1-2562#				
GENPT7	1-2515	1-2532#					
GENPT9	1-2519	1-2558#					
GENP7	1-1778#	1-2534					
GENP9	1-1925#	1-2540					
GOKWD	1-1329	1-1386	1-2293#				
GOB1	1-2295	1-2398#					
GCB2	1-2306	1-2311#					
GCB3	1-2308	1-2310	1-2312	1-2314#			
GOWAIT	1-1545	1-1580#	1-1615	1-1714	1-2110	1-2201	1-2268
	1-2290	1-2321					
GW1	1-1581	1-1586#					
G1	1-2512	1-2517#					
G2	1-2514	1-2518	1-2520#				
HINUM	1- 989#	1-1071#	1-2057	1-2067	1-2079#	1-2088#	1-2510#
IDSELF	1-1009	1-1128#					
LASRCR	1- 932#	1-1094	1-1396	1-1399#	1-1400#	1-1402#	1-1407
	1-1433#	1-1434#	1-1442	1-1445#	1-1446#	1-1448#	1-1457
	1-2120	1-2141	1-2293#	1-2298			
LENGTH	1- 911#	1-1091#	1-2149#	1-2156#	1-2282#	1-2355	
LONUM	1- 988#	1-1070#	1-2056	1-2065	1-2078#	1-2087#	1-2509#
LOOPER	1-1047#	1-1056					
MAXLEN	1- 900#	1-1032	1-1590	1-1671	1-2191	1-2501#	1-2505#
MEM4K	1- 886	1-1064#					
MEM8K	1- 887	1-1067#					
MINLEN	1- 901#	1-1030	1-1594	1-1669	1-2189	1-2500#	1-2504#
MODES	1- 938#	1-1254#	1-1296#	1-1300	1-1311#	1-1316#	1-1320
	1-1327	1-1334	1-1347#	1-1352#	1-1355#	1-1356#	1-1364#
	1-1367	1-1375	1-1378	1-1384	1-1392	1-1419#	1-1423
	1-1428#	1-1431	1-1440	1-1459#	1-1462	1-1495#	1-1550
	1-1557	1-1565	1-1575	1-1577#	1-1632	1-1634	1-1637
	1-1655	1-1657	1-1660	1-1655#	1-1676#	1-1699	1-1720#
	1-2206#						
MSBITS	1- 912#	1-1006#	1-1022#	1-1034	1-1047	1-1074#	1-1079
	1-1099	1-1101#	1-1103#	1-1501	1-1535	1-2338	
MSG0	1-1122	1-2064#					
MSG1	1-1072	1-2055#					
MSG10A	1-1028	1-2075#					
MSG10B	1-1038	1-2078#					

CROSS REFERENCE TABLE S-3

MSG11	1-2284	1-2579#					
MSG12	1-1732	1-2218	1-2580#				
MSG13	1-1735	1-2221	1-2581#				
MSG14	1-1729	1-2215	1-2582#				
MSG15	1-1747	1-2233	1-2583#				
MSG16	1-1750	1-2236	1-2584#				
MSG17	1-1741	1-2227	1-2585#				
MSG18	1-1744	1-2230	1-2586#				
MSG19	1-1752	1-2237#					
MSG20	1-1108	1-2566#					
MSG20A	1-1757#	1-1758#	1-1761	1-2588#			
MSG21	1-1771	1-2589#					
MSG22	1-2238	1-2590#					
MSG23	1-2242	1-2591#					
MSG24	1-2246	1-2592#					
MSG25	1-1721	1-2593#					
MSG26	1-2207	1-2594#					
MSG27	1-2390	1-2595#					
MSG28	1-2393	1-2596#					
MSG29	1-2396	1-2597#					
MSG30	1-2399	1-2598#					
MSG31	1-1273	1-2599#					
MSG5	1-1164	1-2579	1-2600#				
MSG6	1-1251	1-2587#					
MSG7	1-1234	1-2588#					
MSG8	1-1689	1-2580	1-2569#				
MSG9	1-1723	1-2589	1-2570#				
MSG9A	1-2164	1-2572#					
MSG9B	1-2147	1-2573#					
MSG9C	1-2346	1-2574#					
MTC	1- 809#	1-1603#	1-1008	1-1010#	1-1148#	1-1539	1-1541#
	1-1544#	1-1582#	1-1601#	1-1602	1-1614#	1-1618	1-1712#
	1-1713#	1-1715#	1-1716#	1-2094#	1-2095	1-2107#	1-2109#
	1-2114	1-2139#	1-2200#	1-2202#	1-2259	1-2261#	1-2262#
	1-2271	1-2286#	1-2289#	1-2314#	1-2315	1-2319#	1-2320#
	1-2348	1-2374#	1-2375				
MTS	1- 688#	1-1012	1-1017	1-1019	1-1150	1-1155	1-1542#
	1-1609#	1-1617	1-1708	1-2097#	1-2113	1-2196#	1-2266#
	1-2270	1-2517#	1-2377	1-2511			
MTV	1- 904#	1-1681#					
MVCTR	1-1476#	1-2533					
MVCTRS	1-1299	1-1519	1-1326	1-1353	1-1359	1-1366	1-1377
	1-1383	1-1591	1-1406	1-1430	1-1439	1-1456	1-1549
	1-1561	1-2551#					
MV1	1-1477#	1-1479					
NOINCR	1-1589	1-1598	1-1600#				
NONSTP	1-1611#	1-1630	1-1635	1-1658			
NO.SIL	1-1016	1-1018	1-1023#				
NRREAD	1- 935#	1-2178#	1-2248				
NUMTST	1- 965#	1- 978#	1-1110#	1-1115	1-1247#	1-1248	1-1283#
NYMRF	1- 991	1- 994#					
NXT.TU	1-1010#	1-1026					
OCT	1-2410#	1-2420#	1-2424#				
OCTP	1-2425#	1-2541					
OCTPR	1-2403#	1-2532					
OCTPRT	1-2152	1-2154	1-2349	1-2351	1-2550#		
OCT1	1-2405	1-2407#					
OCT2	1-2411#	1-2421					

CROSS REFERENCE TABLE S-4

OVER4K	1- 993	1- 997#						
PARAM	1- 966#	1-1256#	1-1257	1-1277	1-1281#	1-1397	1-1443	
	1-1516	1-1519	1-1522	1-1592	1-1597	1-1627	1-1640	
	1-1727	1-1739	1-1780	1-1789	1-1791	1-1927	1-2125	
	1-2131	1-2133	1-2225	1-2367	1-2383	1-2388		
PATCK	1-1785	1-1789#						
PATEN	1-1790	1-1793#						
PATEN1	1-1794#	1-1796						
PATEN2	1-1792	1-1797#						
PATE0	1-1798	1-1816#						
PATE1	1-1800	1-1823#						
PATE2	1-1802	1-1836#						
PATE3	1-1804	1-1843#						
PATE4	1-1806	1-1850#	1-1856	1-1857				
PATE5	1-1808	1-1862#						
PATE7	1-1812	1-1890#	1-1892	1-1895				
PATO0	1-1799	1-1819#						
PATO1	1-1801	1-1829#						
PATO2	1-1803	1-1839#						
PATO3	1-1805	1-1846#						
PATO5	1-1809	1-1873#						
PATPN1	1-1930	1-1952#						
PATPST	1-1784	1-1798#						
PAT0	1-1932	1-1942#	1-1944					
PAT1	1-1933	1-1948#	1-1955					
PAT1A	1-1949#	1-1954						
PAT2	1-1934	1-1953	1-1967#	1-1969				
PAT3	1-1935	1-1973#	1-1980					
PAT3A	1-1974#	1-1979						
PAT4	1-1807	1-1836	1-1978	1-1992#				
PAT5	1-1937	1-2001#	1-2008					
PAT5A	1-2002#	1-2007						
PAT6	1-1810	1-1811	1-1886#					
PAT69	1-1938	1-2006	1-2038#	1-2040				
PAT7	1-1813	1-1859	1-2044#	1-2047				
PC	1- 875#	1-1306#	1-1329#	1-1340#	1-1386#	1-1411#		
	1-1425#	1-1452#	1-1464#	1-1470#	1-1474#	1-1476#	1-1480#	
	1-1487#	1-1490#	1-1491#	1-1497#	1-1515#	1-1525#	1-1534#	
	1-1545#	1-1546#	1-1564#	1-1557#	1-1571#	1-1578#	1-1585#	
	1-1607#	1-1615#	1-1631#	1-1636#	1-1639#	1-1645#	1-1654#	
	1-1659#	1-1662#	1-1677#	1-1692#	1-1701#	1-1706#	1-1707#	
	1-1714#	1-1726#	1-1770#	1-1775#	1-1786#	1-1797#	1-1854#	
	1-1890#	1-1896#	1-1901#	1-1908#	1-1919#	1-1931#	1-1945#	
	1-1952#	1-1970#	1-1977#	1-1997#	1-2005#	1-2041#	1-2044#	
	1-2048#	1-2084#	1-2110#	1-2127#	1-2130#	1-2133#	1-2140#	
	1-2143#	1-2150#	1-2167#	1-2176#	1-2194#	1-2201#	1-2203#	
	1-2205#	1-2212#	1-2250#	1-2258#	1-2268#	1-2274#	1-2283#	
	1-2290#	1-2291#	1-2296#	1-2297#	1-2307#	1-2311#	1-2321#	
	1-2322#	1-2340#	1-2342#	1-2357#	1-2382#	1-2401#	1-2423#	
	1-2428#	1-2436#	1-2442#	1-2455#	1-2473#	1-2477#	1-2485#	
	1-2503#	1-2507#	1-2516#	1-2520#	1-2526#			
PERMB5	1- 929#	1-1698#	1-1766	1-1773				
PE1	1-1823	1-1825#						
PE5	1-1862	1-1864#						
PFIL1	1-1817	1-1820	1-1837	1-1840	1-1844	1-1847	1-1887	
	1-1898#	1-1900						
PFIL3	1-1824	1-1850	1-1903#					
PFIL3A	1-1905#	1-1912						

CROSS REFERENCE TABLE S-5

PFILE9	1-1863	1-1874#	1-1814#			
PFIL9A	1-19164	1-1923				
PGMODE	1-980#	1-1259#	1-1778#	1-1925#	1-2513	1-2517
P01	1-1829	1-1831#				
POS	1-1873	1-1875#				
PRC	1-1089	1-1105	1-2360	1-2365	1-2372	1-2387
	1-2418	1-2454	1-2494	1-2496	1-2559#	
PRTD	1-1726	1-2212	1-2359#			
PRTD1	1-2378	1-2383#				
PRTS	1-1692	1-2150	1-2167	1-2283	1-2346#	
P1T	1-1948	1-1956#				
P3T	1-1973	1-1981#				
P4	1-1993#	1-1996				
P4A	1-1992#	1-1993	1-1994#	1-1998#		
P5T	1-2001	1-2009#				
RANDOM	1-1646#	1-1650#	1-1891	1-1893	1-2045	1-2077#
	1-2134#	1-2138#				1-2086#
RANGEN	1-1645	1-1630	1-2044	1-2052#	1-2133	
RANG1	1-2060#	1-2054				
RANSTP	1-1645#					
RAN1	1-1647#	1-1651				
RRUF	1-903#	1-1795	1-1852	1-1894	1-1899	1-1906
	1-1943	1-1950	1-1968	1-1975	1-1995	1-2003
	1-2046	1-2059	1-2106	1-2118	1-2502#	1-2506#
ROERRO	1-2115	1-2160#				
ROERRS	1-933#	1-2171#	1-2240			
RD1NCR	1-2127	1-2140	1-2184#	1-2205		
RDPASS	1-917#	1-2093#	1-2155	1-2159	1-2174#	1-2179#
ROSTP	1-2132	1-2140#	1-2182			
ROSTPC	1-2126	1-2151#				
ROSTPD	1-2094#	1-2142	1-2177			
READO0	1-2099#	1-2129				
READ01	1-2090#	1-2037				
READIT	1-1336	1-1401	1-1447	1-2555#		
READLN	1-937#	1-2092#	1-2100	1-2104	1-2120	1-2149
	1-2188#	1-2189	1-2191	1-2193#		1-2166
READMP	1-2212#					
RECORD	1-930#	1-1560	1-1394	1-1399	1-1407	1-1426
	1-1433	1-1445	1-1457	1-1588	1-1600	1-1664#
	1-1719#	1-1737	1-2090	1-2128	1-2141	1-2184#
	1-2293	1-2294#	1-2352			1-2223
RESETL	1-1670	1-173#				
RESTR1	1-2190	1-2193#				
RESTR1	1-2186	1-2192	1-2194#			
REWIND	1-1490	1-1539#	1-2296			
RG1	1-2101#	1-2103				
RNDROS	1-2133#					
RNDOS1	1-2155#	1-2159				
RNDTAP	1-2161	1-2165#				
RNDTP1	1-1567	1-2151	1-2207#			
RPASS1	1-2175	1-2178#				
RPASS3	1-2173	1-2179#				
RSFDR	1-1499#	1-2-31				
RSFUOKV	1-1298	1-1318	1-1358	1-1365	1-1362	1-1390
	1-1438	1-1455	1-1489	1-1532	1-1548	1-1560
RSF1	1-1501#	1-1506				1-2549#
RSF2	1-1502	1-1507#	1-1537			
RSF3	1-1510	1-1516#				

CROSS REFERENCE TABLE S-6

CROSS REFERENCE TABLE S-7

SELDN3	1-1166	1-1178	1-1182	1-1186	1-1190#
SELDRV	1-1076#	1-1106			
SELD1	1-1078	1-1084#			
SELD2	1-1085	1-1058#			
SELOK1	1-1249	1-1<51#			
SELPAT	1-1121	1-1125#			
SELPR	1-1170	1-1174#			
SELPH0	1-1163	1-1168#			
SELRM1	1-1225	1-1<28#			
SELRM2	1-1223	1-1<27	1-1232#		
SELP1	1-1196	1-1199#			
SELRL2	1-1200	1-1<03#			
SELRL3	1-1194	1-1198	1-1202	1-1206#	
SELTST	1-1082	1-1106#			
SELT1	1-1112#	1-1124	1-1250		
SELT2	1-1114	1-1118#			
SELT3	1-1116	1-1119	1-1122#	1-1136	1-1138
	1-1204	1-1<17	1-1230	1-1239	1-1172
					1-1188
SELW1	1-1212	1-1<15#			
SELW15	1-1216	1-1<18#			
SELW2	1-1210	1-1<14	1-1219#		
SETM4K	1- 595	1-1054	1-2560#		
SETM8K	1- 997	1-1<67	1-2561#		
SETSTK	1-2339	1-2<41#			
SET4K	1-2500#	1-2<42			
SET8K	1-2504#	1-2<43			
SP	1- 874#	1- 782#	1- 994	1-1069#	1-1533#
	1-2053#	1-2054#	1-2055#	1-2080	1-2081
	1-2341#	1-2<22	1-2523#	1-2525#	
SP3	1-1132	1-1143	1-1174	1-1190	1-1206
	1-2366	1-2<73	1-2381	1-2422	1-2441
					1-2557#
SP3A	1-2475	1-2<76#			
SP3X	1-2475#	1-2<59			
SR	1- 898#	1-1<75#	1-1512	1-1555	1-1687
	1-2162	1-2172	1-2256		
STACK	1- 947#	1- 962	1-1069		
START	1-1065	1-1168#			
START1	1-1056	1-1<69#	1-1080		
STATRD	1- 920#	1-1617#	1-1682	1-1703	1-2115#
	1-2270#	1-2<75	1-2286	1-2350	1-2160
STFLGS	1- 981#	1-1005#	1-1021#	1-1075#	1-1157#
STOPUP	1-1628	1-1<40#			
STREC1	1-1697	1-1<06#			
STRLEN	1- 910#	1-1090#	1-1594#	1-1596	1-1673
STRTOP	1-1609#	1-1653	1-1658	1-1661	1-1710
SVCIR	1-1470#	1-2<50			
SVCTRS	1-1303	1-1<23	1-1330	1-1337	1-1361
	1-1403	1-1455	1-1449	1-1492	1-2548#
SVC1	1-1471#	1-1473			
SVRECR	1- 913#	1-1<69#	1-1371	1-1396#	1-1402
TABLE	1-2525	1-2<27#			
TESINC	1-1425	1-1<51	1-1654	1-1664#	
TESRC1	1-1694	1-1<99#			
TESRLC	1-1688	1-1<33#			
TEST	1- 958#	1-1<60#			
TESTO	1-1261	1-1<96#			
TEST1	1-1263	1-1<11#			
TEST2	1-1265	1-1<16#			

CROSS REFERENCE TABLE S-8

TEST3	1-1267	1-1047#
TEST4	1-1271	1-1052#
TEST5	1-1270	1-1419#
TKB	1- 897#	1-2470 1-2471
TKS	1- 896#	1-2466
TO	1-2481#	1-2129
TOP	1-1029	1-1059 1-1060 1-1073 1-1109 1-1123 1-1165
	1-1235	1-1452 1-1274 1-1690 1-1722 1-1724 1-1736
	1-1751	1-1753 1-1762 1-1772 1-2148 1-2165 1-2208
	1-2210	1-2422 1-2237 1-2239 1-2243 1-2247 1-2281
	1-2285	1-2447 1-2480 1-2400 1-2476 1-2547#
TOP1	1-2483#	1-2491 1-2498
TOP2	1-2487	1-2493#
TPB	1- 899#	1-1242# 1-1245# 1-2427# 1-2470# 1-2490#
TPS	1- 898#	1-1240 1-1243 1-2425 1-2468 1-2481# 1-2488
TRAP34	1- 883	1-2022#
TSINC2	1-1667	1-1472 1-1674#
TSINC3	1-1675	1-1477#
TSTEX	1- 967#	1-1455# 1-1256 1-1292# 1-1353
TSTPM	1-2353	1-2438#
TSTSTP	1-1621	1-1427#
TSTTBL	1- 969#	1- 984# 1- 985# 1- 986# 1-1111 1-1255
TSTUM4	1-2311	1-2554#
TSTUP4	1-2307	1-2029#
TU.SLL	1- 936	1-1402#
TYPT1	1-2433#	1-2444
TYPT2	1-2434#	1-2456
TYPT3	1-2440	1-2443#
TO	1-1298#	1-1407
TOA	1-1299#	1-1405
TOB	1-1501	1-1404#
TO1ENT	1-1297#	1-1412
T2	1-1318#	1-1441
T2A	1-1319#	1-1425
T2B	1-1321	1-1424#
T2C	1-1326#	1-1432
T2D	1-1328	1-1451#
T2E	1-1333#	1-1459
T2F	1-1355	1-1457#
T23ENT	1-1317#	1-1448
T4	1-1354	1-1457#
T4A	1-1358#	1-1412
T4B	1-1359#	1-1463
T4C	1-1365#	1-1479
T4D	1-1366#	1-1474
T4E	1-1368	1-1473#
T4F	1-1377#	1-1481
T4G	1-1376	1-1482#
T4H	1-1383#	1-1489
T4J	1-1385	1-1487#
T4K	1-1390#	1-1406
T4L	1-1391#	1-1405
T4M	1-1398	1-1401#
T4N	1-1393	1-1495 1-1404#
T4P	1-1406#	1-1410
T5	1-1421#	1-1465
T5A	1-1424	1-1426#
T5B	1-1428#	

CROSS REFERENCE TABLE S-9

TSC	1-1430#	1-1437					
TSD	1-1432	1-1436#					
TSE	1-1439#	1-1451	1-1463				
TSF	1-1444	1-1447#					
TSFLAG	1-1421#	1-1467#	1-1496#	1-1562	1-1605		
TSG	1-1441	1-1450#					
TSH	1-1453	1-1455#					
TSINC	1-1426#	1-1434	1-1468#				
TSJ	1-1456#	1-1461					
TSK	1-1458	1-1460#					
USSTST	1-1012#	1-1015					
USS.OK	1-1013	1-1017#					
USS10	1-1020	1-1022#					
VALID	1-1087	1-1092#					
VAL1	1-1095#	1-1098					
VAL2	1-1096	1-1099#					
VAL3	1-1100	1-1103#					
VAL4	1-1090	1-1092	1-1104#				
WAITK	1-2466#	1-2527					
WAITKY	1-1076	1-1112	1-1134	1-1168	1-1176	1-1192	1-1208
	1-1221	1-1236	1-2545#				
WBUF	1- 902#	1-1013	1-1779	1-1793	1-1926	1-2119	1-2265
WRCHEK	1- 921#	1-1482	1-1573	1-1624	1-1686#	1-1754	1-1756
	1-1766						
WRITI	1-1500#	1-2028					
WRITIT	1-1302	1-1322	1-1370	1-1422	1-2546#		
WRPASS	1- 918#	1-1008#	1-1620	1-1622	1-1626#	1-1629	1-1652
	1-1684	1-1195#	1-1696	1-1702#	1-2255#	1-2273#	1-2277#
WRRECR	1- 931#	1-1460#	1-1369	1-1371#	1-1600#	1-2294	1-2299
WRTDMP	1-1726#						
WRTU1	1-1758#	1-1767					
WRTU2	1-1760	1-1765#					
WRTLEN	1- 936#	1-1096#	1-1611	1-1668#	1-1669	1-1671	1-1673#
	1-1691	1-2463	1-2282				
W1	1-1593	1-1096#					
W10	1-1633	1-1637#					
W11	1-1641	1-1652#	1-1705				
W12	1-1656	1-1660#					
W3	1-1605#						
XRGRC0	1-2257	1-2473#	1-2276				
XRGREC	1-1701	1-2455#	1-2287				
XRGO	1-2256#	1-2478					
XRG5	1-2272	1-2475#					
ZERO	1-2432#	1-2449	1-2451#	1-2458#			
ZER000	1-1048	1-1052#					
	1- 876#	1- 877#	1- 881	1- 882#	1- 884#	1- 948#	1- 950#
	1- 952#	1- 954#	1- 956#	1- 958#	1- 960#	1- 962#	1- 964#
	1-1035	1-1049	1-1238	1-1241	1-1244	1-1269	1-1513
	1-1517	1-1520	1-1523	1-1540	1-1543	1-1603	1-1606
	1-1610	1-1649	1-1700	1-1709	1-1731	1-1734	1-1743
	1-1746	1-1749	1-1769	1-1853	1-1907	1-1910	1-1918
	1-1921	1-1951	1-1976	1-2004	1-2096	1-2098	1-2137
	1-2156	1-2170	1-2197	1-2217	1-2220	1-2229	1-2232
	1-2235	1-2260	1-2267	1-2316	1-2318	1-2376	1-2392
	1-2395	1-2398	1-2426	1-2459	1-2467	1-2469	1-2484
	1-2489	1-2492					

CROSS REFERENCE TABLE C-1

054496
, ABS. 054496 1- 862

APPENDIX A

SAMPLE DRIVER PROGRAM

SAMPLE MAGNETIC TAPE DRIVER PROGRAM
FOR PDP-11 / LSI-11

While the controller is compatible with existing software, this program illustrates an example of a magnetic tape driver program. For those customers who wish to create custom software, this driver can be a starting point for the tape handling portion of the program.

A paper tape containing this program is available from Western Peripherals upon request. Ask for part number 130046.

PROGRAM LISTING

SAMPLE MAGNETIC TAPE DRIVER PROGRAM
FOR PDP-11 / LSI-11

```
. = 400
; MAGNETIC TAPE DRIVER CALLING SEQUENCES
;
; JSR R5,TAPRW      TAPE READ OR WRITE
;           SETUP WORD
;           \ CORE START ADDRESS
;           NUMBER OF BYTES TO BE TRANSFERRED
;           ERROR RETURN ADDRESS
;           RETURN FROM TAPRW SUBROUTINE
;
; JSR R5,SPACE       SPACE FORWARD OR BACKWARD
;           SETUP WORD
;           NUMBER OF RECORDS TO BE SKIPPED (==BACK)
;           ERROR RETURN ADDRESS
;           RETURN FROM SPACE SUBROUTINE
;
; JSR R5,WEOF        WRITE AN END OF FILE
;           SETUP WORD
;           ERROR RETURN ADDRESS
;           RETURN FROM WEOF SUBROUTINE
;
; JSR R5,OFLINE       PUT DESIGNATED UNIT OFF LINE
;           SETUP WORD
;           ERROR RETURN ADDRESS
;           RETURN FROM OFLINE SUBROUTINE
;
; JSR R5,REWIND       REWIND DESIGNATED UNIT
;           SETUP WORD
;           ERROR RETURN ADDRESS
;           RETURN FROM REWIND SUBROUTINE
;
; JSR R5,CMPLTE       COMPLETE PREVIOUS COMMAND
;           ERROR RETURN ADDRESS
;           END OF FILE RETURN ADDRESS
;           NORMAL RETURN
;
; JSR R5,TAPSET       TAPE SETUP
;           SETUP WORD
;           RETURN FROM TAPSET SUBROUTINE
;
; R3 = z3
; R4 = z4
; R5 = z5
; SP = z6
; PC = z7
;
```

```

; TAPRW SUBROUTINE
TAPRW: JSR R4,CHECK
      .WORD 4
      MOV ARRAY+2,172526
      NEG ARRAY+4
      MOV ARRAY+4,172524
      TST ARRAY
      BMI READ
      MOV #105,EXTRA
      BR TWL
READ:  MOV #103,EXTRA
      MOV #-5,TRY
      BR WOR
;
; TAPSET SUBROUTINE
TAPSET:MOV (RS)+,226
        MOV #10000,172522
        MOV #IRET,224
        RTS RS
;
; OFLINE SUBROUTINE
OFFLINE:MOV #1,EXTRA
OR:    JSR R4,CHECK
      .WORD 2
BOR:   BIS EXTRA,CHSET
      MOV CHSET,172522
      RTS RS
;
; REWIND SUBROUTINE
REWIND:MOV #117,EXTRA
       JSR R4,CHECK
       .WORD 2
       BR WOR
;
; SPACE SUBROUTINE
SPACE:JSR R4,CHECK
      .WORD 3
      TST ARRAY+2
      BMI SPB
      MOV #111,EXTRA
      NEG ARRAY+2
SOR:   MOV ARRAY+2,172524
      BR WOR
SPB:   MOV #113,EXTRA
      BR SOR
;
; WEOF SUBROUTINE
WEOF:  MOV #107,EXTRA
       JSR R4,CHECK
       .WORD 2
TWL:   BIT #4,172520
       BNE EER
WOR:   INCB BUSY
       BR BOR
;

;GET ARG AND CHECK READY
;4 ARGUMENTS
;CORE START ADDRESS INTO MTCMA
;FORM -NUMBER OF BYTES
;2'S COMPLEMENT OF NUMBER OF BYTES
;CHECK FOR READ
;MINUS = READ
;WRITE
;CHECK WRITE LOCK
;
;SET RETRY COUNTER TO -5
;
;PUT PROCESSOR PRIORITY IN 226
;ISSUE POWER CLEAR
;PUT INTERRUPT RETURN IN 224
;
;GO BIT + 0 FUNCTION
;GET USER ARGUMENTS AND CHECK HARDWARE
;NUMBER OF USER ARGUMENTS +
;USER SETUP WORD + GO BIT
;LOAD COMMAND REG
;RETURN TO USER
;
;ENABLE BIT, GO BIT + 7 FUNCTION
;
;OTHERWISE SAME AS OFFLINE
;
;USER ARG AND CHECK READY
;3 ARGUMENTS
;TEST POS OR NEG SPACING
;NEG = BACKSPACE
;ENABLE, GO AND 4 FUNCTION
;FORM 2'S COMPLEMENT
;LOAD MTBRC
;
;ENABLE, GO AND 5 FUNCTION
;
;ENABLE BIT, GO BIT AND 3 FUNCTION
;CHECK HARDWARE AND GET USER ARG.
;
;TEST WRITE LOCK
;ERROR, PUSH STACK AND TAKE ERROR EXIT
;SET BUSY FLAG

```

```

; INTERNAL SUBROUTINE TO CHECK FOR CU READY AND SELR READY
CHECK: MOV (R4)+,CTR
       MOV R3,-(SP)
       MOV #ARRAY,R3
CH1:   MOV (R5)+,(R3)+ ;PICK UP NR OF ARGUMENTS
       DEC CTR
       BNE CH1 ;SAVE R3
       MOV -(R3),ER ;SET R3 = START OF ARRAY
       MOV (SP)+,R3 ;MOVE ARGUMENTS TO ARRAY
       BIT #200,172522 ;DECREMENT NR OF ARGUMENTS COUNTER
       BEQ CHER ;IF NOT FINISHED,CONTINUE
       MOV ARRAY,CHSET ;LAST ARGUMENT = ERROR RETURN TO USER
       BIC #110317,CHSET ;RESTORE R3
       MOV CHSET,172522 ;TEST FOR CU READY
       BEQ CHER ;ERROR...
       MOV ARRAY,CHSET ;NO,MOVE SETUP WORD TO TEMPORARY LOC
       BIC #110317,CHSET ;SET UP PSEUDO COMMAND
       MOV CHSET,172522 ;PUT INTO COMMAND REG
       BIT #102,172520 ;READY OR REWINDING OK
       BNE CHEXIT ;SELECTED UNIT READY CHECK
       MOV (SP)+,R4 ;ERROR, NOT READY OR CU NOT READY
EER:   MOV (SP)+,R5 ;RESTORE R4 AND R5 FROM STACK
       JMP @ER ;GO TO USER ERROR EXIT
CHEXIT: CLR B BUSY
        CLR B ERROR
        RTS R4 ;SET NOT BUSY
        SET NO ERROR
        EXIT AND RESTORE R4

EXTRA: .WORD 0
CHSET: .WORD 0
CTR: ER: .WORD 0
ARRAY: .WORD 0,0,0,0
BUSY: .BYTE 0
ERROR: .BYTE 0
TRY: .WORD 0
;
; CMPLTE SUBROUTINE
CMPLTE:TSTB BUSY
        BNE CMPLTE ;WAIT FOR BUSY FLAG=0
        MOV (R5)+,ARRAY ;ERROR ADDRESS
        MOV (R5)+,ARRAY+2 ;EOF ADDRESS
        DECB ERROR ;0,1,2 BECOME -1,0,1
        SPL EFER ;0,1 = EOF OR ERROR
        RTS R5 ;OK, EXIT VIA R5
EFER: BEQ NOTEF ;0=ERROR
        MOV (SP)+,R5 ;EOF, RESTORE R5 & RETURN
        JMP @ARRAY+2 ;ERROR, RESTORE R5 & RETURN

NOTEF: MOV (SP)+,R5
        JMP @ARRAY
;
;
```

```

;INTERRUPT RETURNS HERE
IRET: TSTB ERROR
      BEQ NEFL
      CLR8 ERROR
      BIT #12,CHSET
      BNE NRD
      BIS #10,CHSET
NRD:   MOV ARRAY+2,172526
      MOV ARRAY+4,172524
      MOV CHSET,172522
      RTI
NEFL:  BIT #40000,172520
      BNE PTEX
      MOV CHSET,T
      BIC #177761,T
      BIT #100000,172522
      BEQ PT2
      CMP #10,T
      BEQ PT1
      CMP #12,T
      BEQ PT1
      CMP #16,T
      BEQ PT1
      BIT #100200,172520
      BNE PT1
      BIT #2000,172520
      BNE PTOM
      BIT #4400,172520
      BNE RCH
      BIT #10000,172520
      BEQ PT1
      BIT #20000,172520
      BNE WCH

      ;IS ERROR FLAG SET
      ;YES, CLEAR IT
      ;FUNCTION AND 5
      ;O = WRITE OR OFFLINE(NO INTERRUPT)...
      ;THUS IT WAS A WRITE,CHANGE EXT GAP
      ;SET UP START ADDRESS
      ;SET UP NR OF BYTES
      ;SET UP COMMAND
      ;BACK THROUGH INTERRUPT
      ;EOF BIT SET
      ;GET COMMAND
      ;NO, ERROR OF ANY TYPE
      ;WAS IT A SPACE FORWARD
      ;IF SO DONT TRY AGAIN
      ;WAS IT A SPACE BACK
      ;IF SO DONT TRY AGAIN
      ;WAS IT A REWIND
      ;IF SO DONT TRY AGAIN
      ;ILC OR NXM
      ;IF SO DONT TRY AGAIN
      ;EOT
      ;IF SO, CHECK READ
      ;BGL,BTE
      ;PAE?
      ;NO, RLE ERROR
      ;CRE?

```

```

RCH:    CMP #2,T          ;READ?
        BEQ PT5
        BR PT4
WCH:    CMP #4,T          ;IF SO RETRY
        BEQ PT4
        BR PT4
        CMP #14,T          ;ELSE OK
        BEQ PT4
        BR PT2
PT0:    CMP #2,T          ;WRITE?
        BNE PT4
PT5:    INC TRY           ; IF SO RETRY
        BEQ PT1
        BR PT2
        CMP #14,T          ;WRITE WITH A 3 INCH GAP?
        BEQ PT4
        BR PT2
        CMP #2,T          ;IF SO RETRY
        BEQ PT1
        BR PT2
        CMP #14,T          ;ELSE OK
PT4:    MOV CHSET,T         ;WAS IT A READ
        BIC #110216,T       ;IF NOT, TRY AGAIN
        BIS #12,T
        INCB ERROR
        MOV #-1,172524      ;UPDATE TRY COUNTER, LAST TRY
        MOV T,172522
        RTI
-PTOM:   BIT #14400,172520  ;IF SO ERROR
        BEQ PT1
        CMP #2,T
        BNE PT1
        BR PT5
T:      WORD 0
PTEX:   INCB ERROR
PT1:   INCB ERROR
PT2:   CLR B BUSY
        RTI
        •END

```

@

LOADING PROCEDURES

OPERATING INSTRUCTIONS

TAPE DIAGNOSTICS

PDP-11

A. TC-130 DIAGNOSTIC

1. Load Diagnostic tape on Tape Transport at BOT.
 - a. For PE use first BOT marker for load point.
 - b. For NRZI use second BOT marker for load point.
2. Load bootstrap loader into PDP-11.
Example: 16K Core
 - a. Enter 037000 into switches and depress LOAD ADDRESS.
 - b. Enter bootstrap per Figure 1. Depress DEPOSIT for each entry.
 - c. Reenter (a) above.
 - d. Depress EXAMINE to verify bootstrap is correct.
 - e. Depress START. Tape Transport should read one record.
 - f. Enter 772520 into switch register. (This is to check status - refer to Figure 2).
 - g. Depress EXAMINE - good status is 000105.
 - h. Enter 000200 into switch register.
 - i. Depress LOAD ADDRESS.
 - j. Depress START.
CRT or Teletype will print the following:
Set switch register according to operating instructions and
Press CONTINUE.
 - k. Remove Diagnostic tape and mount scratch tape on transport.
Depress ON-LINE.
 - l. Set switches normally to 11-7-5 on and depress CONTINUE. Note;
there will be a short pause while test on addressing performed.
Refer to diagnostic manual for switch settings.
 - m. Diagnostic is now running. Each good run will result in printout of:

CYCLE #001
CYCLE #002
CYCLE #003
Etc.
 - n. Depress HALT to terminate test.

B.

TC-130 RELIABILITY

1. Load Diagnostic tape on Tape Transport at BOT.
 - a. For PE use first BOT marker for load point.
 - b. For NRZI use second BOT Marker for load point.
2. Load bootstrap loader into PDP-11.

Example: 16K Core

 - a. Enter 037000 into switches and depress LOAD ADDRESS.
 - b. Enter bootstrap per Figure 1. Depress DEPOSIT for each entry.
 - c. Reenter (a) above.
 - d. Depress EXAMINE to verify bootstrap is correct.
 - e. Depress START. Tape Transport should read one record.
 - f. Depress CONTINUE. Tape Transport should read one record.
 - g. Enter 7725 into switch register. (This is to check status - refer to Figure 2.)
 - h. Depress EXAMINE. Good status is 00105.
 - i. Enter 000200 into switches.
 - j. Depress LOAD ADDRESS.
 - k. Remove Diagnostic tape and mount scratch tape on tape transport.
 - l. Depress ON-LINE.
 - m. Depress START. CRT or Teletype will print the following:

POPPI 7-9 TRK REL-
RECORD LIMITS IN BYTES
MINLEN MAXLEN
8 2048
EXERCISING UNITS 8

- m. Reliability should now be running. Unit will run complete tape, then stop.
- n. CRT or Teletype will print following:

*****WRITE PASS END OF TAPE*****
DRV PAT PAR DEN MODE RECORD LENGTH
8 7 X X SSTOP 3715 M-MAX
WRITE ERRORS = 0
*****READ PASS END OF TAPE*****
DRV PAT PAR DEN MODE RECORD LENGTH
8 7 X X SSTOP 3715 M-MAX
READ STATUS ERRORS = 0
DATA ERRORS = 0
NON RECOVERABLE ERRORS = 0

- o. Depress HALT. Test is complete.

NOTES

BOOTSTRAP LOADER/4K READ ROUTINE

37000 12737 Move

37002 10000 PWR CLR

37004 172522 To CMD.REG.

37006 12737 Move

37010 16000 BYTE CNT. (4K)

37012 172524 To BYTE CNT. REG.

37014 12737 Move

37016 60003 Read Command

37020 172522 To CMD. REG.

37022 12700 Move following location
to Register Ø

37024 00000 Ø

37026 5200 INCR. RØ

37030 1376 BR≠ Ø

37032 5200 INCR. RØ

37034 1376 BR≠ Ø

37036 00000 HLT.

April 11, 1978
Ed Smith
PDP.11 Tape Loader

AUTOMATIC TAPE LOADER

Operating Instructions: Deposit in High Core, Load starting address and place desired block number in the Switch Register then press Start.

LOCATION

XXX00	12737	10000	172522	PWR CLR
06	13702	177570		Move Sw Reg to R2
12	5402	5202		Negate R2 Inc R2
16	1411			BEQ + 11
20	10237	172524		Move R2 to Wd CNT
24	12737	0011	172522	SPACE FWD
32	32737	0001	172520 1774	Wait for TUR
42	12737	160000	172524	Move 160000 to Wd CNT
50	12737	60003	172522	READ
56	32737	0001	172520 1774	Wait for TUR
66	12737	0017	172522	Rewind
74	0000			HALT

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
A	PROD. REL	8-22-78	W.H.W.

PURPOSE

The purpose of this specification is to define type, layout and content of W.P. Diagnostic Magnetic Tape.

1. Material shall be 250 feet of magnetic tape as defined in ANSI.X3.40-1976 mounted on a six inch reel with mailer.
2. The information (data) shall be written on the tape in NRZI, 800 CPI, at the beginning (first BOT) of tape.

A second BOT marker shall be placed on the tape approximately 10' beyond the first data field.

The information (data) shall be repeated at 1600 CPI, PE, beginning at the second BOT.

3. On the front of the reel and the front of the mailer a label shall be affixed containing the following information:

WP #68000009-[]
BOT #1 NRZ
BOT #2 PE

LATEST REV. LTR.
OF THIS DWG.

4. A copy of the Directory and Loading Procedure, WP document no. 66000001, shall be included with the tape.

AUG 22 1978

TOLERANCES UNLESS OTHERWISE SPECIFIED FRACTIONS DEC. ANGLES \pm \pm \pm			 Western periph 3 IRVINE, CALIFORNIA		
APPROVALS		DATE	PROGRAM W.P. MASTER DIAGNOSTIC M.T.		
DRAWN W.H.W./ter		8-22-78			
CHECKED		SCALE	SIZE	DRAWING NO.	
			A	68000009	
			DO NOT SCALE DRAWING		SHEET 1 of 1

REVISIONS			
LTR	DESCRIPTION	DATE	APPROVED
A	PROD. REL.	8-22-78	W.H.W.

CORRECTED

MASTER DIAGNOSTIC TAPE
BOT #1 NRZ REV. C
BOT #2 PE 30-JUN-78

1. TC130 DIAGNOSTIC
2. TC130 RELIABILITY
3. TC120 DIAGNOSTIC
4. TC120 RELIABILITY
5. DC220 DIAGNOSTIC
6. DC220 RELIABILITY
7. DC220-10 FORMATTER
8. DC220-10 RELIABILITY
9. DC220-10 DIAGNOSTIC, 1ST 4K
10. DC220-10 DIAGNOSTIC, 2ND 4K
11. DC230 DIAGNOSTIC
12. DC230 RELIABILITY
13. TC130 DIAGNOSTIC 11/34
14. TC130 RELIABILITY 11/34

PDP-11 BOOTSTRAP LOADER

LOC INST

37000	12737	MOV NXT ADD INTO CMD REG
2	10000	POWER CLEAR
4	172522	CMD REG
6	12737	MOV NXT ADD INTO BYTE CTR
10	160000	(4K)
12	172524	BYTE CNT REG
14	12737	MOV NXT ADD INTO CMD REG
16	60003	
20	172522	CMD REG
22	12700	MOV 0 INTO REG 0
24	00000	
26	5200	INC R0
30	1376	BR#0
32	5200	INC R0
34	1376	BR#0
36	00000	HLT

NOV 18 1978

TOLERANCES UNLESS OTHERWISE SPECIFIED FRACTIONS DEC. ANGLES \pm \pm \pm			 western peripherals ANAHEIM, CALIFORNIA		
DIRECTORY AND LOADING PROCEDURE FOR WP MASTER DIAGNOSTIC M.T.					
APPROVALS	DATE	SCALE			SIZE DRAWING NO. A 66000001
DRAWN W.H.W./for 8-22-78					
CHECKED					
DO NOT SCALE DRAWING					SHEET 1 of 2

REVISIONS			
LTR	DESCRIPTION	DATE	APPROVED
A	PROD. REL.	8-22-78	<i>W.H.B.</i>

PURPOSE

The purpose of this specification is to define type, layout and content of W.P. Diagnostic Magnetic Tape.

1. Material shall be 250 feet of magnetic tape as defined in ANSI.X3.40-1976 mounted on a six inch reel with mailer.
2. The information (data) shall be written on the tape in NRZI, 800 CPI, at the beginning (first BOT) of tape.

A second BOT marker shall be placed on the tape approximately 10' beyond the first data field.

The information (data) shall be repeated at 1600 CPI, PE, beginning at the second BOT.

3. On the front of the reel and the front of the mailer a label shall be affixed containing the following information:

WP #68000017-[]	LATEST REV. LTR. OF THIS DWG.
BOT #1 NRZ	
BOT #2 PE	

4. A copy of the Directory and Loading Procedure, WP document no. 66000019, shall be included with the tape.

AUG 22 1978

TOLERANCES UNLESS OTHERWISE SPECIFIED FRACTIONS DEC. ANGLES \pm \pm \pm			 western peripherals ANAHEIM, CALIFORNIA		
			PROGRAM M.T. WPDP DIAGNOSTICS		
APPROVALS	DATE				
<i>W.H.B.</i>	8-22-78				
CHECKED			SCALE	SIZE	DRAWING NO.
				A	68000017
			DO NOT SCALE DRAWING		SHEET 1 of 1

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
A	PROD.REL.	3-22-78	W/H/W
B	CORRECTED INSTR.	12-18-80	RA

WPDP DIAGNOSTICS

BOT #1 NRZ

BOT #2 PE REV. D

ENTRY # FILNAM.EXT DATE

000001	THDP	.SAV	26-JUN-78C
000002	TMDP	.SAV	26-JUN-78C
000003	THDP	.BIN	26-JUN-78
000004	TMDP	.BIN	26-JUN-78
000005	UPD1	.BIN	26-JUN-78
000006	UPD2	.BIN	26-JUN-78
000007	RKDP	.BIN	26-JUN-78
000010	RXDP	.BIN	26-JUN-78
000011	COPY	.BIN	26-JUN-78
000012	FORMAT.BIN		26-JUN-78
000013	WPDIAM.BIN		26-JUN-78
000014	WPRELM.BIN		26-JUN-78
000015	WPDIAD.BIN		26-JUN-78
000016	WPRELD.BIN		26-JUN-78
000017	WPDLISM.BIN		26-JUN-78
000020	WPRLSM.BIN		26-JUN-78
000021	WPDLSD.BIN		26-JUN-78
000022	WPRLSD.BIN		26-JUN-78
000023	WPDI34.BIN		26-JUN-78
000024	WPRE34.BIN		26-JUN-78
000025	WPDI03.BIN		26-JUN-78
000026	WPRE03.BIN		26-JUN-78

TOLERANCES UNLESS
OTHERWISE SPECIFIED
FRACTIONS DEC. ANGLES
= = =

APPROVALS DATE

DRAWN
W/H/W, 1/for 8-22-78

CHECKED

SCALE



western peripherals

ANAHEIM, CALIFORNIA

DIRECTORY AND LOADING PROCEDURE
FOR WPDP M.T.SIZE A DRAWING NO.
66000019

DO NOT SCALE DRAWING

SHEET 1 OF 3

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
-----	-------------	------	----------

OPERATING INSTRUCTIONS
WPDP DIAGNOSTIC MAGNETIC TAPE

1. Load program tape on transport, position at BOT, and place ON-LINE.
2. Enter the following bootstrap loader into the computer:

<u>LOCATION</u>	<u>DATA</u>	PDP-11: (Location) LOAD ADDReSS, (Data) DEPosit, (Data) DEPosit, etc.
10 000	12737	
10 002	3	
10 004	172522	LSI-11: (Location) / ,
10 006	777	(Data) LINE FEED, (Data) LINE FEED,etc.

3. Execute the bootstrap program:

<u>PDP-11</u>	<u>LSI-11</u>
10000, LOAD ADDRESS,	10000 G
START, HALT,	Break key
10000, LOAD ADDRESS,	10000 G
START, HALT,	Break key
102, LOAD ADDRESS,	102 /
402, DEPOSIT,	402 LINE FEED
70, LOAD ADDRESS,	70 G
START	

4. Follow printed instructions.

SCALE	SIZE	DRAWING NO.
	A	66000019
DO NOT SCALE DRAWING		SHEET 2 of 3

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
-----	-------------	------	----------

5. Type:

R(Sp) WPDIAM (Return) for tape	Diagnostic Program on PDP-11
R(Sp) WPRELM (Return) for tape	Reliability Program on PDP-11
R(Sp) WPDIAD (Return) for DC-230	Diagnostic Program on PDP-11
R(Sp) WPRELD (Return) for DC-230	Reliability Program on PDP-11
R(Sp) WPDLSM (Return) for tape	Diagnostic Program on LSI-11 (no panel switches)
R(Sp) WPRLSM (Return) for tape	Reliability Program on LSI-11 (no panel switches)
R(Sp) WPDLSD (Return) for DC-230	Diagnostic Program on LSI-11
R(Sp) WPRLSD (Return) for DC-230	Reliability Program on LSI-11
R(Sp) WPD134 (Return) for tape	Diagnostic Program on PDP-11/34 (no panel switches)
R(Sp) WPRE34 (Return) for tape	Reliability Program on PDP-11/34 (no panel switches)
R(Sp) WPDI03 (Return) for tape	Diagnostic Program on LSI-11/03
6. Remove the program tape from the drive and load a scratch tape, positioning at BOT and placing the drive ON-LINE.

SCALE	SIZE	DRAWING NO.
	A	66000019
DO NOT SCALE DRAWING		SHEET 3 of 3

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
A	RELEASE	9/3/81	K. C. Lee

APR 3 1981

TOLERANCES UNLESS OTHERWISE SPECIFIED FRACTIONS DEC. ANGLES ± ± ±			 western peripherals™ <small>TUSTIN, CALIFORNIA</small>		
APPROVALS	DATE		DIRECTORY AND LOADING PROCEDURE FOR WP MASTER DIAGNOSTIC TAPE CARTRIDGE		
DRAWN L.Crawford	4-02-81				
CHECKED <i>[Signature]</i>	4-02-81		SCALE	SIZE	DRAWING NO.
				A	66000068
			DO NOT SCALE DRAWING		SHEET 1 OF 3

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
-----	-------------	------	----------

1. MASTER DIAGNOSTIC TAPE CARTRIDGE

<u>Record</u>	<u>Program</u>
1	TC160 DIAGNOSTIC
2	TC160 RELIABILITY
3	TC170 DIAGNOSTIC
4	TC170 RELIABILITY
5	TC180 DIAGNOSTIC
6	TC180 RELIABILITY

2. DEC BOOTSTRAP LOADER

<u>Loc</u>	<u>Inst</u>	
37000	12737	MOV
2	10000	POWER CLEAR
4	172522	CMD REG
6	12737	MOV
10	160000	(4K)
12	172524	BYTE CNT REG
14	12737	MOV ...
16	3	READ
20	172522	CMD REG
22	32737	BIT TEST
24	1	FOR TUR BIT
26	172520	IN STATUS REG
30	1774	BRANCH IF NOT READY
32	0	HALT

3. DATA GENERAL BOOTSTRAP LOADING PROCEDURE

Clear Accumulators to 0. Load first test by starting Read routine. Load succeeding tests by pressing Continue.

NOVA Read Routine - Load in top 8 locations of memory.

67022	DOC 1
72022	DOB 2
61122	DOAS 0
63622	SKPDN
777	JMP-1
74422	DIA 3
63077	HALT
771	JMP-7

APR 3 1981

SCALE	SIZE	DRAWING NO.
	A	66000068
DO NOT SCALE DRAWING		SHEET 2 OF 3

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
-----	-------------	------	----------

NOVA Read Routine (Cont'd)

<u>Accumulator</u>	<u>No.</u>
COMMAND	0
WD CNT	1
STRT ADDR (DIRECT)	2
STATUS	3

<u>Commands</u>
0 = Read
1 = Rewind
2 = Not Used
3 = Space Forward
4 = Space Reverse
5 = Write
6 = WEOF
7 = Erase

4. REMOVE THE PROGRAM TAPE FROM THE DRIVE AND INSERT A SCRATCH TAPE.
5. REFER TO THE APPROPRIATE DIAGNOSTIC MANUAL FOR REQUIRED PATCHES AND FOR OPERATING INSTRUCTIONS.

APR 3 1981

SCALE	SIZE	DRAWING NO.
	A	66000068
DO NOT SCALE DRAWING		SHEET 3 OF 3

PROGRAM PATCHES

NOTES

DIAGNOSTIC PATCHES

Enter the following changes when running the controller diagnostics:

1. Operational delay for unusual timing - related errors.

<u>Location</u>	<u>Was</u>	<u>Should Be</u>	<u>Description</u>
3664	7	12	Controller not ready
12132	5	12	Controller not ready

2. Non-existent memory error (systems with extra memory):

<u>Location</u>	<u>Was</u>	<u>Should Be</u>	<u>Description</u>
5702	173000	176000	Non-existent Memory

NOTES

MODIFICATIONS REQUIRED FOR NON-STANDARD ADDRESSES OF CONTROLLER TO RUN FUNCTIONAL AND RELIABILITY DIAGNOSTICS

FUNCTIONAL DIAGNOSTICS:

			<u>LOC</u>	<u>IS</u>
CPU	SW4	OFF	1000	172520
CPU	SW4	ON	1002	172720

Function Should Equal First Address of Controller (Status Reg.)

CPU	SW4	OFF	1004	224
CPU	SW4	ON	1010	260

Should Equal Interrupt Vector Address

CPU	SW4	OFF	1006	226
CPU	SW4	ON	1012	262

Should Equal Interrupt Vector Address +2

RELIABILITY DIAGNOSTICS:

214	172520	Should Equal Status Reg. Address
216	172522	Should Equal Command Reg. Address
220	172524	Should Equal Byte Count Reg. Address
222	172526	Should Equal Address Reg. Address
254	224	Should Equal Interrupt Vector Address



western peripherals™

TECHNICAL AID BULLETIN

TITLE/DESCRIPTION: LSI-11 Tape Diagnostic operation with Real Time
clock enabled

PRODUCT/MODEL: TC-150/TC-160

SYMPTOM/ACTIVITY: System halts with illegal tape interrupt at PC 11476.

ACTION REQUIRED: Modify address 100 with a 102
and address 102 with a 002
and restart the program.

NOTE: Reliability program will also fail but can not be
modified for this problem.

NOTES

MODEL TC-160 AND TC-180

FUNCTIONAL DIAGNOSTIC PROGRAM PATCHES

(SETTLEDOWN & IDENT STATUS)

<u>ADDRESS:</u>	<u>WAS:</u>	<u>SHOULD BE:</u>
3706	104400	400
4246	104400	400

NOTES

PROGRAM PATCHES FOR TC-190 OPERATION

DIAGNOSTIC PROGRAM

RELIABILITY PROGRAM

LOCATION	WAS	SHOULD BE	LOCATION	WAS	SHOULD BE
3202	5037	137	100	0	10001
3204	1044	3244	102	0	6200
3270	40000	60000	104	0	6200
3554	5777	403	106	0	60100
4262	14557	14562	110	0	5400
4362	14723	14726	112	0	10037
4420	14561	14562	114	0	172524
4476	14725	14726	116	0	62702
5052	11423	46114	120	0	4
5254	377	170000	122	0	10207
6474	177754	177747	4726	13777	13700
6564	177754	177747	4732	173264	10702
6706	20000	60000	4734	5477	137
6714	20000	60000	4736	173260	100
6760	17000	17377	7346	13777	13700
7100	17000	16766	7352	170644	10702
7322	744	777	7354	5477	137
7522	4	777	7356	170640	100
10140	20037	137	10366	13777	13700
10142	1072	10252	10372	167624	10702
			10374	5477	137
			10376	167620	100

REVISIONS			
LTR	DESCRIPTION	DATE	APPROVED
A	INITIAL RLSE	10-29-80	<i>[Signature]</i>

PURPOSE: To test PDP-11/LSI-11 tape controllers that have been modified to a non-standard vector address.

1. Load diagnostic into memory.
2. Modify the following locations:

<u>LOC</u>	<u>WAS</u>	<u>S/B</u>
1004	224	new vector
1006	226	new vector +2
1014	224	new vector
1016	226	new vector +2

EXAMPLE: If the new vector is 320, then 1004, 1014 would contain 320 and 1006, 1016 would contain 322.

3. If the controller also has a non-standard device address, the program must also be modified. Reference test procedure 92000165.
4. Run diagnostic using standard method successfully for 3 passes.

NOTE: RELIABILITY CANNOT BE RUN WITH NON-STANDARD VECTOR.

OCT 30 1980

TOLERANCES UNLESS OTHERWISE SPECIFIED FRACTIONS DEC. ANGLES \pm \pm \pm			 western peripherals™ <small>TUSTIN, CALIFORNIA</small>		
APPROVALS		DATE		TEST PROCEDURE - PDP/LSI-11 ALTERNATE VECTOR	
DRAWN L. CRAWFORD		10-29-80			
CHECKED <i>[initials]</i>		<i>[initials]</i>		SCALE	SIZE A
					DRAWING NO. 92000157
				DO NOT SCALE DRAWING	
				SHEET 1 OF 1	

NOTES

RUNNING THE DIAGNOSTIC ON LSI-11 OR PDP-11/34 SYSTEMS WITHOUT SWITCH PANELS

This information documents the special diagnostic versions and allows modification of the standard diagnostic.

<u>Location</u>	<u>Standard</u>	<u>PDP-11/34</u>	<u>LSI-11</u>
36	340	0	0
1166	12711	14556	14556
1232	177570	176	176
1262	177570	176	176
1366	5037	5037	106427
1370	177776	177776	0
1430	177570	176	176
1454	177570	176	176
3122	177570	176	176
3122	177570	176	176
3232	177570	176	176
3370	6037	4737	4737
3372	177570	17002	17002
3374	103407	1007	1007
4220	177570	176	176
5036	177570	176	176
5042	6037	4737	4737
5044	177570	17002	17002
5046	103406	1006	1006
5070	177570	176	176
5242	177570	176	176
5566	177570	176	176
5776	13737	13737	106437
6002	177776	177776	240
6050	13737	13737	106437
6054	177776	177776	240
6126	13737	13737	106437
6132	177776	177776	240
6240	13737	13737	106437
6244	177776	177776	240
6424	5037	5037	106427
6426	177776	177776	0
6706	20000	60000	60000
6714	20000	60000	60000
7112	177570	176	176
7160	6037	4737	4737
7162	177570	17002	17002
7164	103003	1403	1403
7244	6037	4737	4737
7246	177570	17002	17002
7250	103003	1403	1403
7364	6037	4737	4737
7366	177570	17002	17002
7370	103003	1403	1403

DIAGNOSTIC MODS


<u>Location</u>	<u>Standard</u>	<u>PDP-11/34</u>	<u>LSI-11</u>
7512	6037	4737	4737
7514	177570	17002	17002
7516	103411	1011	1011
7560	6037	4737	4737
7562	177570	17002	17002
7564	103002	1402	1402
10234	177570	176	176
10332	177570	176	176
10356	177570	176	176
11056	177570	176	176
11700	177570	176	176
12024	177570	176	176
12040	177570	176	176
12664	177570	176	176

NOTES

DIAGNOSTIC FEATURES (Switch Register)

NON-STANDARD

The diagnostic uses location 176 as a switch register and must be loaded as follows:

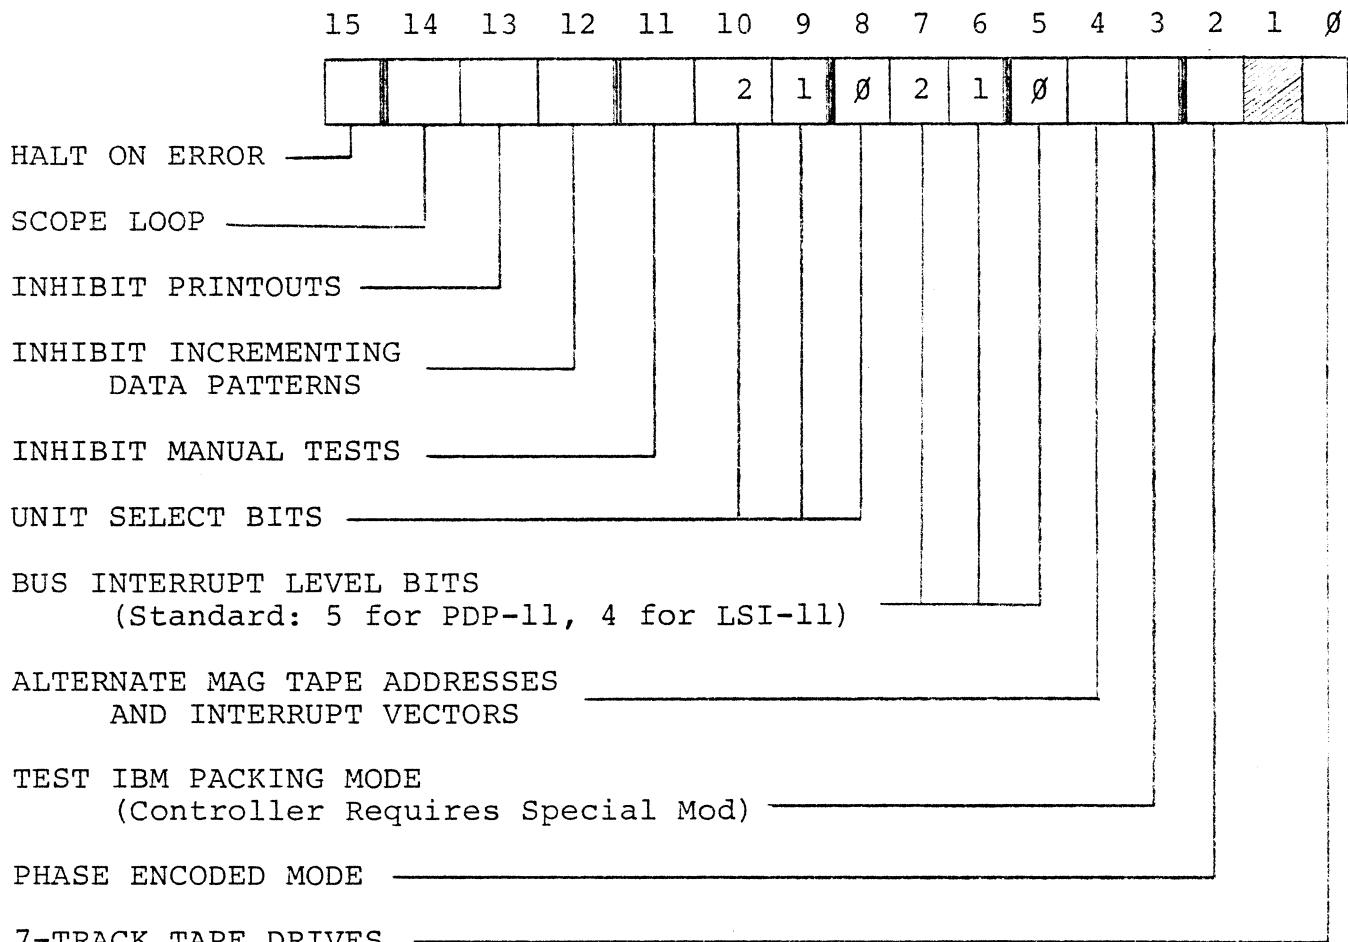

STARTING/RESTARTING

The diagnostic may be started at location 16000 the first time only. Thereafter, the diagnostic must be restarted at location 200. When restarting at location 200 the printed message should be disregarded, however, location 176 may be changed at this time. (Again, restart the program at location 200). The program is executed by continuing or proceeding from this programmed stopping point.

SPECIAL TEST LOOPS

NOTES

TAPE ROUTINE

<u>Location</u>	<u>Instruction</u>	<u>Description</u>
37000	12737	Move
2	10000	Clear
4	172522	To Command Register
6	12737	Move
10	177774	Byte Count
12	172524	To Byte Count Register
14	12737	Move
16	17000	Memory Address
20	172526	To Memory Address Register
22	12737	Move
24	6000X	Command $\begin{cases} X = 5 \text{ (Write)} \\ X = 3 \text{ (Read)} \end{cases}$
26	172522	To Command Register
30	32737	Bit Test
32	00001	For Tape Unit Ready Bit
34	172520	In the Status Register
36	1774	Branch if Not Ready
40	32737	Bit Test
42	2000	For EOT Bit
44	172520	In the Status Register
46	1754	Branch to Start if not EOT
50	00000	Halt
17000	(DATA)	
2	(DATA)	

For Single Record Operations (press CONTINUE for each record):

37030	00000	Halt
32	762	Branch to Start

NOTES

TROUBLESHOOTING LOOP

XXX00	12737		START
02	10000	POWER CLEAR	
04	172522		
06	12737		
10	177775	BYTE COUNT	
12	172524		
14	12737		
16	XXXXX	ADDRESS	
20	172526		
22	12737		
24	X	COMMAND :	3=READ 5=WRITE
26	172522		
30	12702		
32	37000	MOV #37000, R2	DELAY CONSTANT
34	5302	DEC R2	
36	1376	BNE	
40	32737		
42	2000		
44	172520	EOT?	
46	1754		
50	12737		
52	17	REWIND	
54	172522		
56	750	RESTART	

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
A	RELEASED	4/10/81	<i>[Signature]</i>

APR 10 1981

TOLERANCES UNLESS
OTHERWISE SPECIFIED
FRACTIONS DEC. ANGLES
± ± ±

APPROVALS	DATE
DRAWN <i>E. Ryan</i>	4-10-81

CHECKED <i>D. Anderson</i>	4-10-81
-------------------------------	---------



TUSTIN, CALIFORNIA

PROCEDURE; MAGNETIC TAPE DUPLICATION
(MASTER)

SCALE	SIZE	DRAWING NO.
	A	92000215

DO NOT SCALE DRAWING

SHEET 1 of 5

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
-----	-------------	------	----------

SCOPE

This procedure defines an efficient method of duplicating "master" diagnostic tapes.

EQUIPMENT NEEDED

1. DEC computer system with 8K (minimum) memory.
2. Terminal device.
3. Controller with two tape drives. (Known-good equipment)
4. The master copy of the Master diagnostic tape.
5. Blank tape.

OPERATING INSTRUCTIONS

1. Enter the copy program into the computer. (See sheet 4)
2. Load Master diagnostic tape on drive Ø and the blank tape on drive 1.
3. Ensure that both tapes are at load point, on-line, and set to the desired density.
4. Start the program at location 1000.
5. Both tapes will begin moving as information is copied.
6. (a) If the computer halts at location 1142, an error was detected. To try again, rewind both drives and return to step 3.
(b) If drive Ø automatically rewinds, a good copy was made.
7. (a) For serial tape cartridges, change location 1054 to:
20405 for the second track
40405 for the third track
60405 for the fourth track
Rewind drive 1 and return to step 3.
(b) For an alternate density on the same tape:
(reel-tapes only):
(1) Move the tape forward two or three feet (manually or use FORWARD control).
(2) Place a BOT marker on the tape (on shiny side, near front edge).

SCALE	SIZE	DRAWING NO.
	A	92000215
DO NOT SCALE DRAWING		SHEET 2 of 5

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
-----	-------------	------	----------

- (3) Rewind to new BOT and place ON LINE.
- (4) Set density control.
- (5) Return to step 3.

(c) Rewind and remove the new copy. To repeat for another tape
place another blank tape on drive 1 and place on-line.
Return to step 3.

SCALE	SIZE	DRAWING NO.
	A	92000215
DO NOT SCALE DRAWING		SHEET 3 of 5

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
-----	-------------	------	----------

DEC MASTER TAPE COPY PROGRAM

1000	\$12706	START: MOVE
2	Ø1000	1000 to SR
4	Ø4767	LOOP: JSR
6	Ø0070	DONE
10	12737	READ: MOVE
12	Ø0000	Ø TO
14	172524	MTBRC
16	12737	MOVE
20	Ø2000	2000 TO
22	172526	MTCMA
24	12737	MOVE
26	Ø0003	READ UNIT Ø TO
30	172522	MTC
32	Ø4767	JSR
34	Ø0042	DONE
36	Ø1762	BEQ LOOP
40	Ø5437	WRITE: NEG
42	172524	MTBRC
44	12737	MOVE
46	Ø2000	2000 TO
50	172526	MTCMA
52	12737	MOVE
54	Ø0405	WRITE UNIT 1 TO
56	172522	MTC
60	Ø4767	JSR
62	Ø0014	DONE
64	747	BR LOOP

SCALE	SIZE	DRAWING NO.
	A	92000215
DO NOT SCALE DRAWING		SHEET 4 of 5

REVISIONS

LTR	DESCRIPTION	DATE	APPROVED
-----	-------------	------	----------


DEC MASTER TAPE COPY PROGRAM

1100	32737	DONE: BIT TEST
2	100200	ERR, CUR
4	172522	MTC
6	01774	BEQ DONE
10	100405	BMI EOF
12	32737	RDY: BIT TEST
14	00001	TUR IN
16	172520	MTS
20	01774	BEQ RDY
22	00207	RTS
24	04767	JSR
26	177762	RDY
30	32737	EOF: BIT TEST
32	40000	EOF IN
34	172520	MTS
36	01002	BNE WEOF
40	00000	NLT
42	00716	BR START
44	12737	WEOF: MOVE
46	00407	WEOF UNIT 1 TO
50	172522	MTC
52	04767	JSR
54	177734	RDY
56	12737	MOVE
60	000017	REWIND UNIT 0 TO
62	172522	MTC
64	00000	HALT

SCALE	SIZE	DRAWING NO.
	A	92000215
DO NOT SCALE DRAWING		SHEET 5 of 5

NOTES

BOOTSTRAP MAG TAPE PROGRAM (RELOCATABLE)

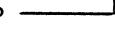XX000	12 700	}	Move to R0
2	172 522	}	CMD REG ADD
4	12 760	}	
6	160 000	}	WORD CNT
10	2		
12	12 710	}	
14	3	}	READ CMD
16	105 710		TST (B) 
20	100 376		READY? 
22	0		HALT
24	12 710	}	PWR
26	10 000	}	CLR
30	763		JMP

NOTES